



941075-00

33/9948


VON DUPRIN®

Retrofit

Installation Instructions

1. Remove bottom vertical rod from door.
Note: Door must be taken off hinges.
2. Remove bottom latch from rod.
3. Using illustration below, determine style of vertical rod being used.
4. Cut rod to length indicated on illustration.
5. Tap where indicated.

Note: Use these instructions only if the bottom rod is not adjustable.

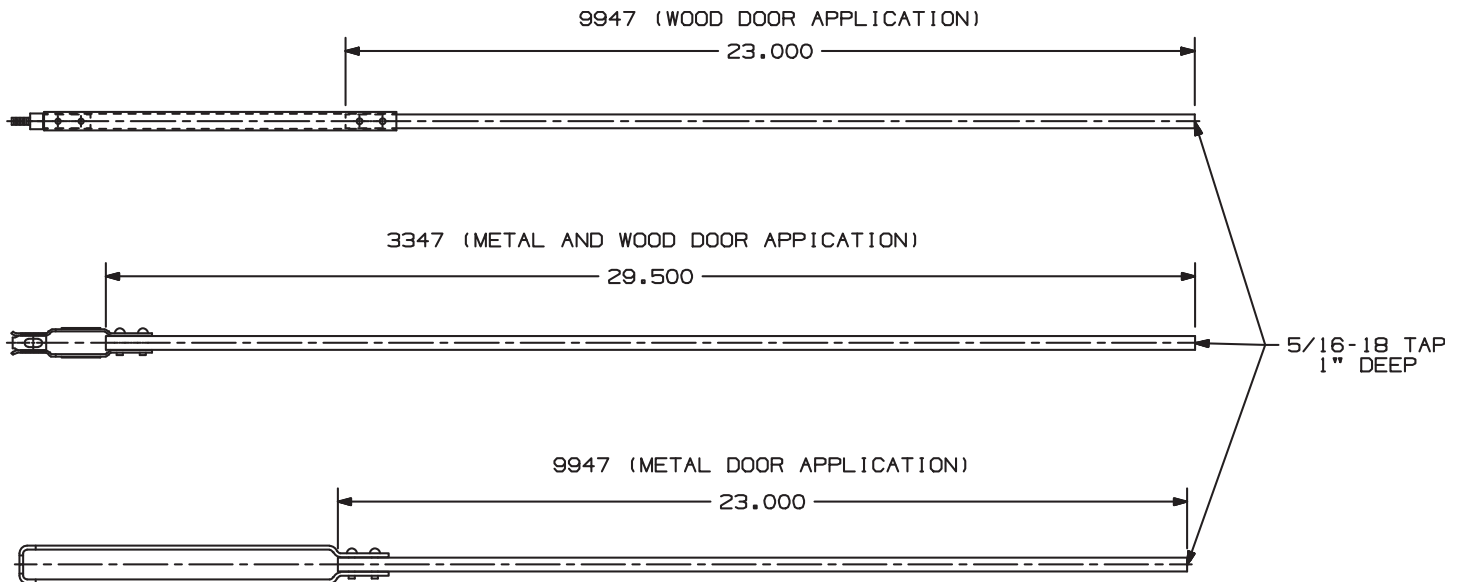

Customer Service

1-877-671-7011

www.allegion.com/us

© Allegion 2014
Printed in U.S.A.
941075-00 Rev. 01/14-b