
## **VON DUPRIN**®

## **INSTALLATION INSTRUCTIONS**

- **1.** Prepare door for exit device. See exit device instructions for holes, backset (line X-X), and center lines.
- 2. Prepare door for control.
  - **A.** Transfer line X-X from inside (exit device side) of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
  - **B.** Locate and prepare all holes as shown.
- 3. Apply control.
- 4. Apply device.

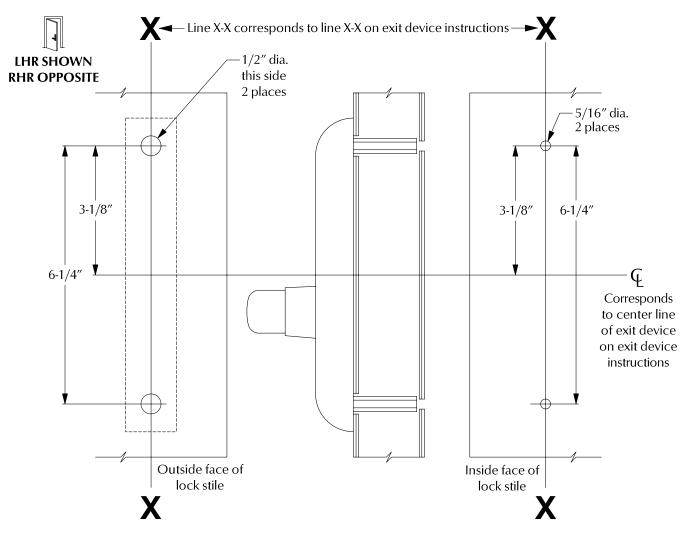

For cutouts on inside face of door, see exit device instructions



© Allegion 2015 Printed in U.S.A. 941136-00 Rev. 06/15-b **372L-DT CONTROL** FOR 33/3547/47-F DEVICE, METAL DOOR

PAGE NO. REVISION

1 of 1



941136-00

Customer Service 1-877-671-7011 www.allegion.com/us