

911368-00

VON DUPRIN®

LX Retrofit Kit Installation Instructions


LX Switch can only be added to devices built after April 2005 or if they have the hole for the roll pin in the action rod




Install LX switch assembly over two studs and secure with two nuts as shown. Install roll pin through action rod as shown.



The LX switch and roll pin should fit as shown below. Switch arm should be depressed when the pushbar is not depressed. Switch arm should be extended when pushbar is depressed.

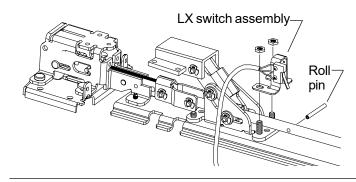

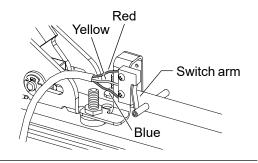

Electrical Wiring

