
INSTALLATION INSTRUCTIONS

- 1. Remove end cap and dogging cover plate assembly.
- 2. For CD33/35 devices:
 - A Remove mortise cylinder cam and reinstall in reverse (Figure 1).
 - **B.** Insert key and rotate cam to install the cylinder to the cover plate (Figure 2).
 - **C.** Remove key to slide cover plate in position in the mechanism case.
- 3. For SS33/35 devices:

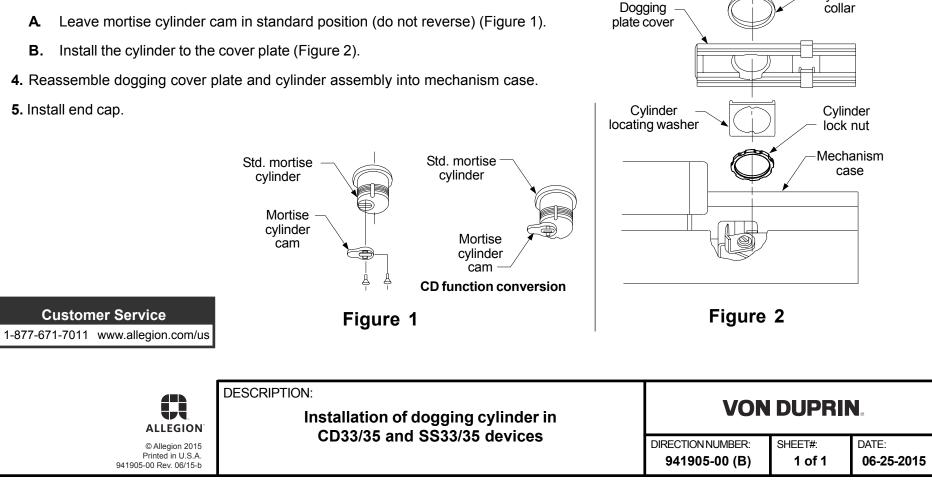

Std. mortise

cylinder

Cylinder

Offset toward pushbar