


## M996L Slider Kit


## **VON DUPRIN**®

Installation Instruction


1

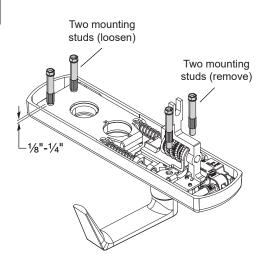

2

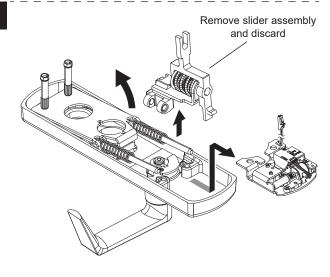


3

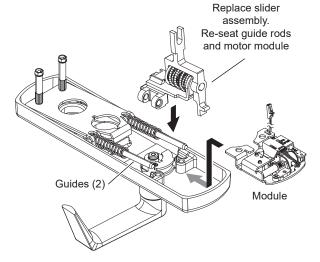

4

The blocking mechanism on the motorized module must engage the vertical slider as shown. **Tip:** Cycling the lever helps the module and blocking mechanism go back into place.



5

