


RX/RX-LC/S1

VON DUPRIN®


941038-00

Switch Retrofit Kit Installation Instructions

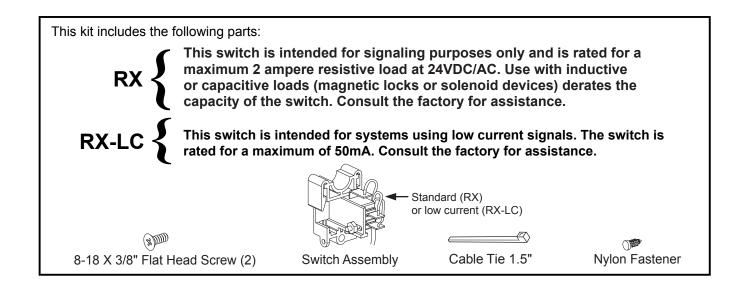

Step 1 Disassemble the device. (Remove from door if mounted.)


22 Device

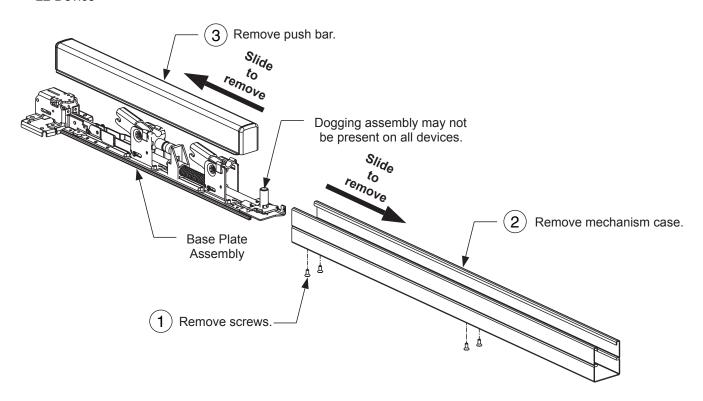





Step 1 Continued

33/35 Device

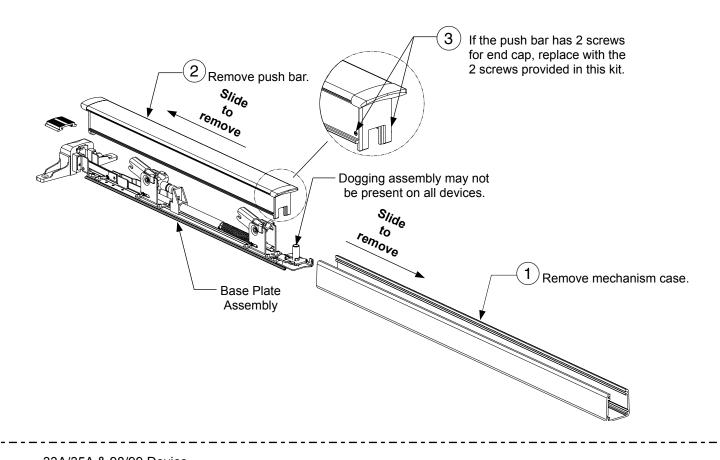


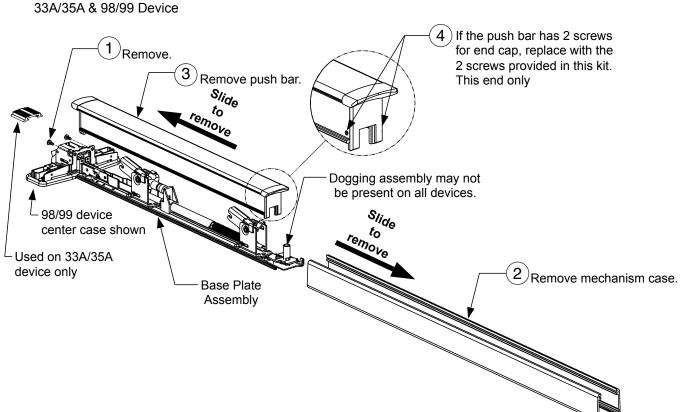

Step 2 Install Switch

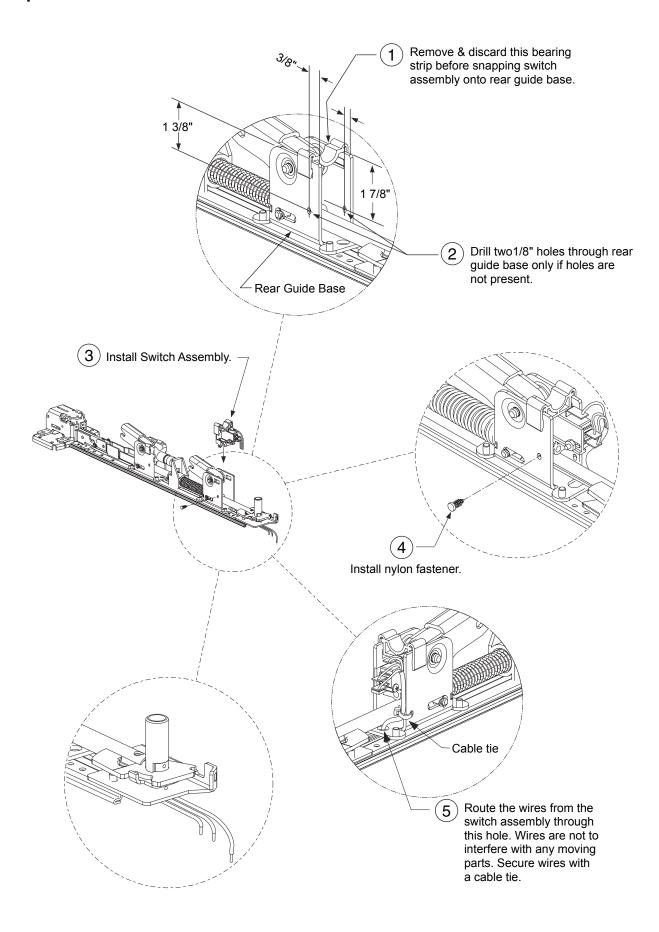

 $Step \ 3 \ \ \hbox{Check the switch for proper actuation}.$

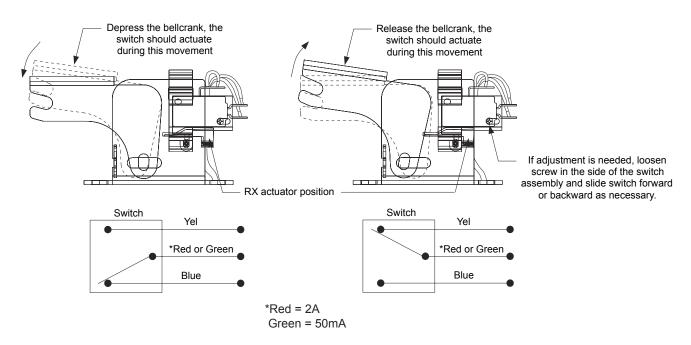

Step 4 Prepare door for device wiring.

