XP98/99

VON DUPRIN®

911007-00

Center Case Replacement Kit Less Cover

Installation Instructions


A CAUTION

This is a center case replacement kit for existing XP98/99 devices only. A different kit is required for retrofitting an XP98/99 center case onto a standard 98/99 Rim device. That kit includes the XP98/99 center case plus additional required parts which this kit does not have.


PARTS INCLUDED IN KIT				
		Item #	QTY	Description
(A) (B) (C)		A	4	#8-18 x 3/8" Center Case Cover Screws (Bronze)
			4	#8-18 x 3/8" Center Case Cover Screws (Stainless)
B F F			4	#8-18 x 3/8" Center Case Cover Screws (Brass)
			4	#8-18 x 3/8" Center Case Cover Screws (Dark Bronze)
	(F)	В	1	Retaining Ring
		С	1	Control Link Pin
		D	1	Center case assembly
		E	2	#8-32 x 3/8" Mounting Screws
8		F	1	909 Strike Kit

1

Remove exit device from door.

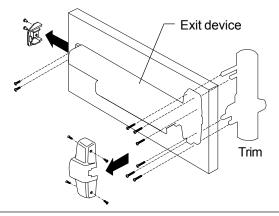

Slide mechanism case back 6".

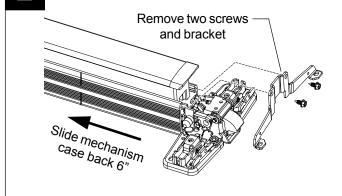

3


Replace center case.

- A. Remove two center case mounting screws.
- B. Remove retaining ring and pin.
- C. Remove old XP98/99 center case.
- D. Attach new center case with new pin, retaining ring and screws.

WARNING

New retaining ring and pin must be installed securely. If pin comes out, door will not open properly.


Continue with step 4 on other side of sheet

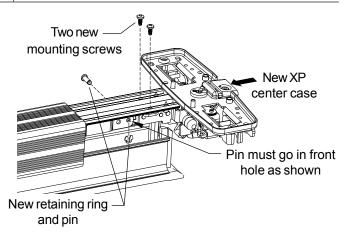

4

Install new strike using existing strike holes.


909 Strike

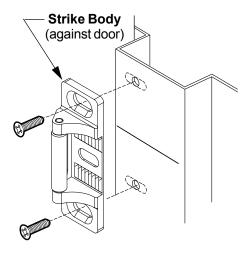


IMPORTANT!

Verify gap between latch bolt and strike and adjust strike as needed.

Strike MUST have some gap

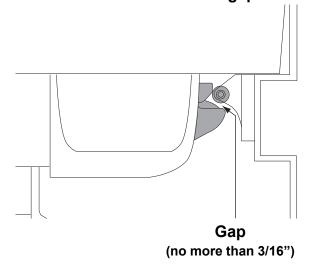


When properly adjusted, secure strike with additional screw.

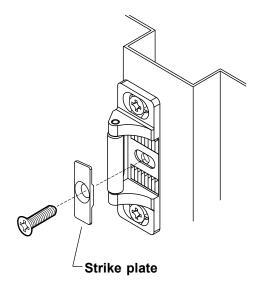


MPORTANT!
Perform operational check.

A. With door closed, push against door without touching device.Device should NOT allow door to open.



B. With door closed, push device pushbar. Device should allow door to open.

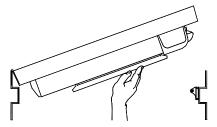

C. If device does not function as described, adjust strike position and continue operational check until device functions as described above.

