

# ROUND ROSE LEVER / KNOB TRIM INSTALLATION INSTRUCTIONS (For Economy Exit Device use)

## 1. DRILL HOLE

- a. Drill one  $\varnothing 2\text{-}1/8"$  (54mm) through hole as shown on the template.
- b. Drill two  $\varnothing 5/16"$  (8.1mm) on outside face of door for anti-rotation studs use.

## 2. INSTALL TRIM

- a. Insert trim into the holes in door from outside of door.
- b. Place 9-hole bracket plate into the hole in inside face of door.

Note: Make sure the 9-hole bracket hole is seated in right angle when it is placed into the hole. The placed angle must match recessed back of exit device, and A, B two holes of 9-hole bracket plate must meet two mounting posts of the trim.


- c. Insert the supplied two mounting screws through 9-hole bracket plate into the mounting posts of the trim, then tighten the screws.

## 3. INSTALL EXIT DEVICE

- a. Install exit device on inside face of door using the supplied round head screws to the door. Details see exit device installation instructions.

Make sure " trim spindle " has mated with the cam on the back of the exit device.

- b. Check if both exit device and trim secured in the position tightly and can be operated well.

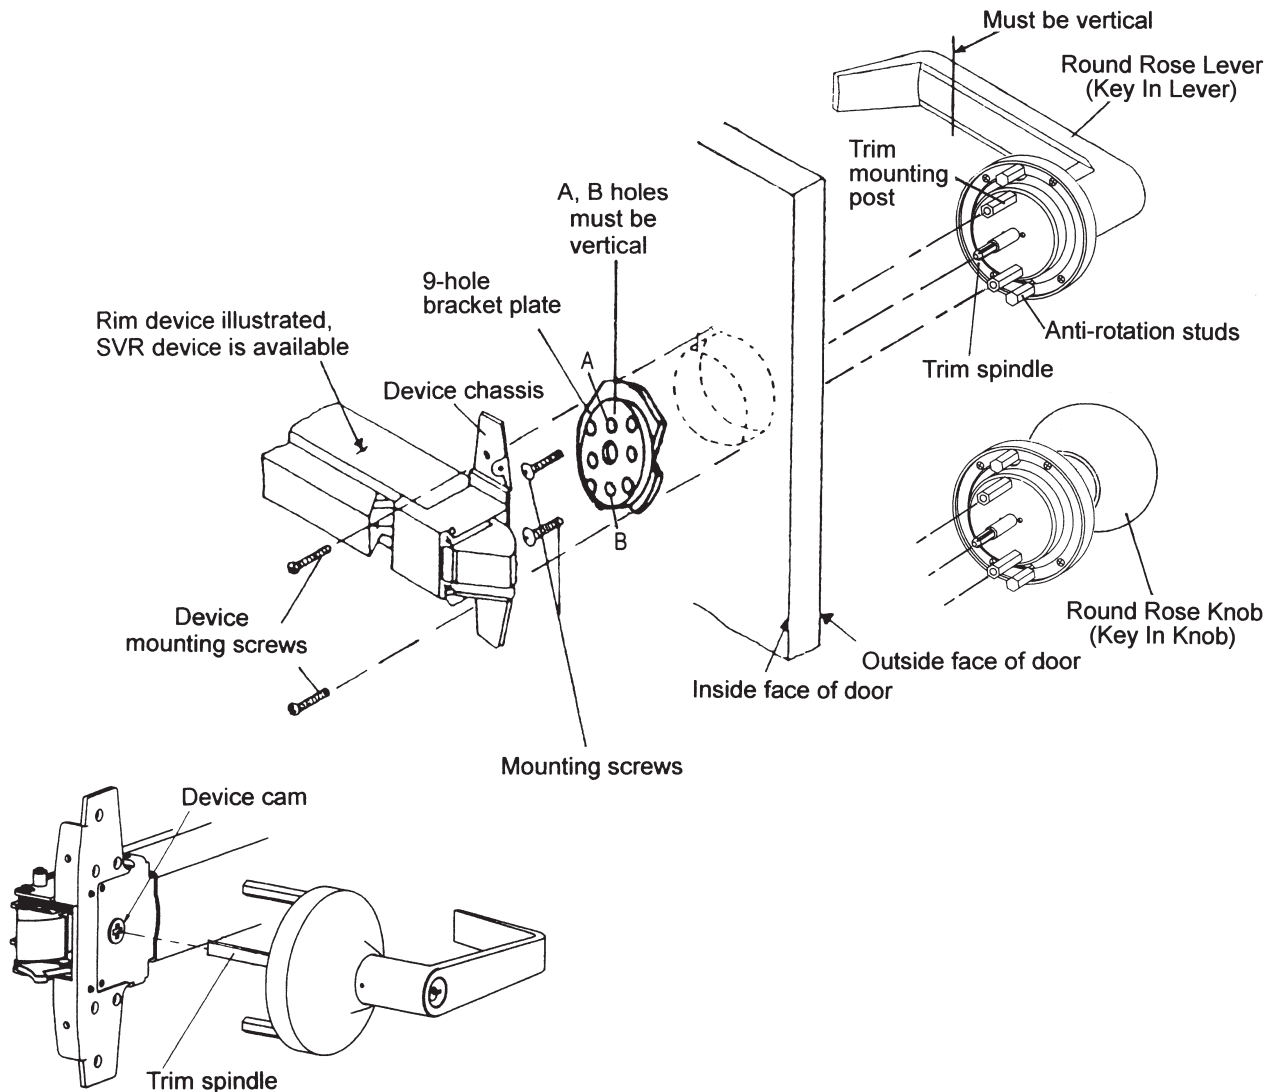

Trim spindle must insert into device cam.