




**D-2115**

Trims for (F)18 and (F)XX Series Rim Devices

# 812L & 816L

**FALCON**

Installation Instructions

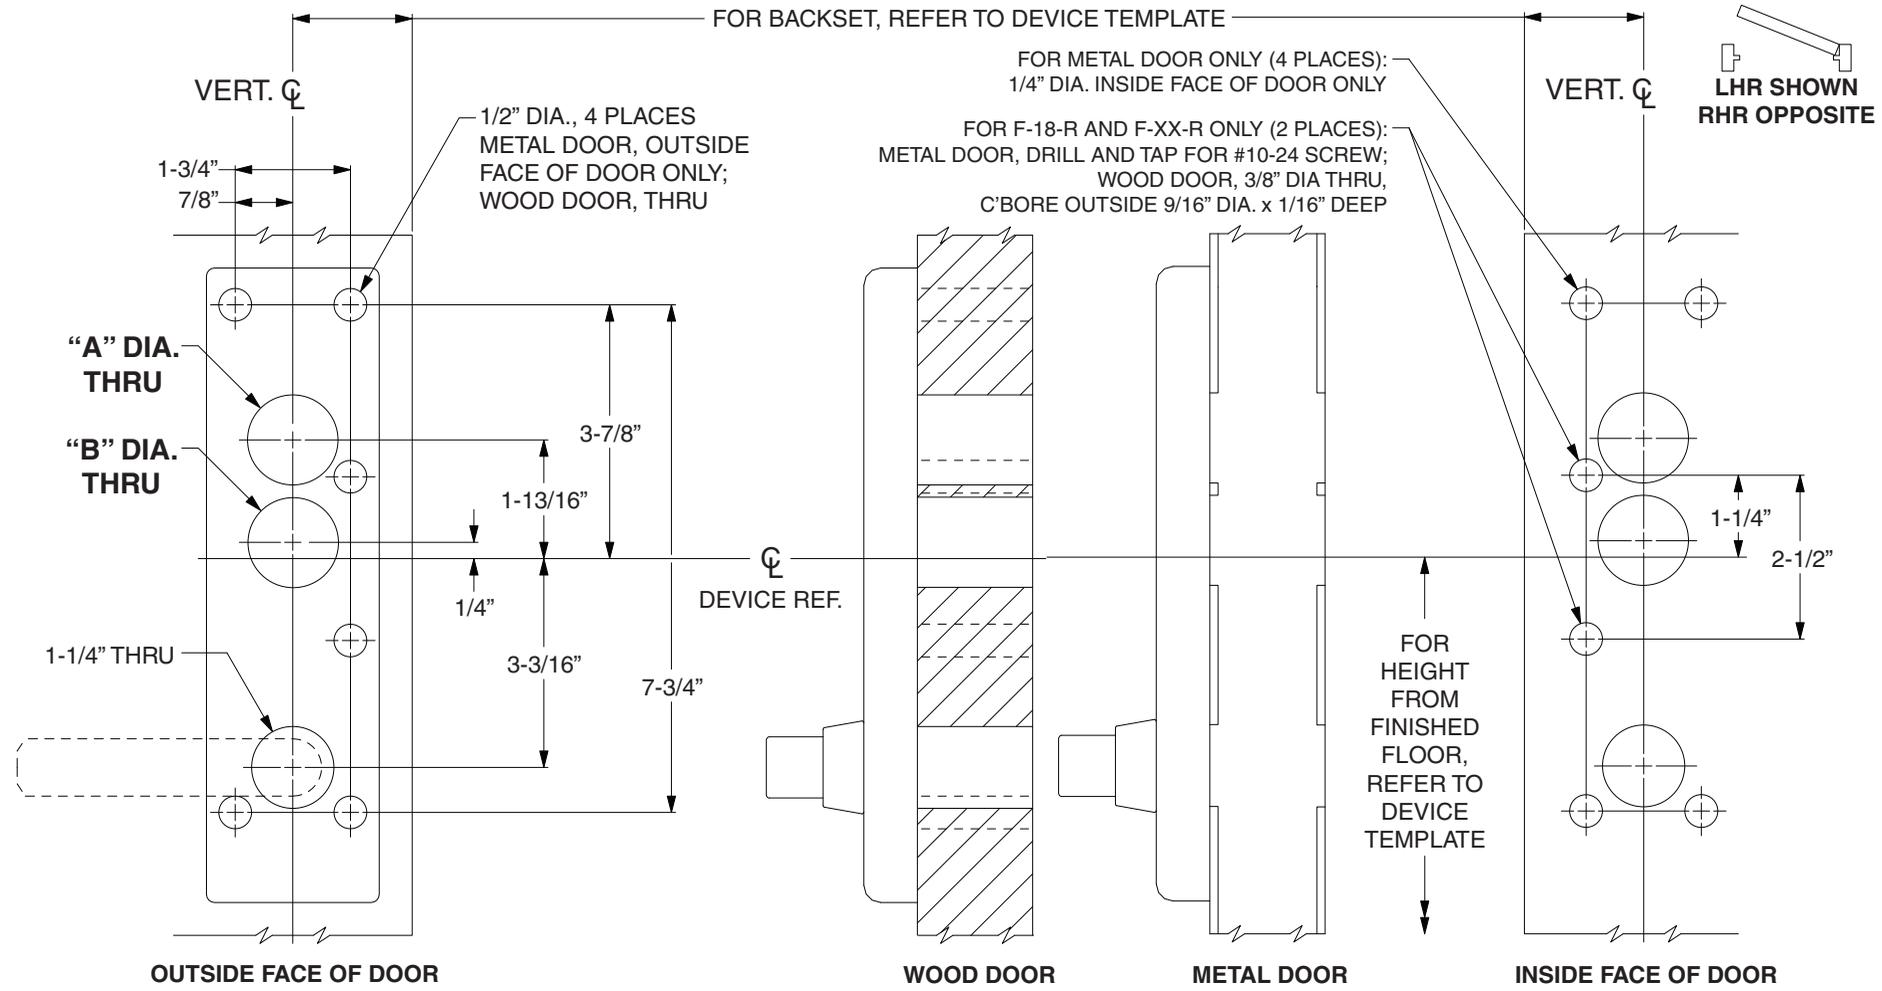

1. PREPARE INSIDE FACE OF DOOR FOR DEVICE. SEE DEVICE DIRECTIONS FOR LOCATIONS OF VERT. AND DEVICE REF. CENTER LINES.
2. PREPARE OUTSIDE FACE OF DOOR FOR TRIM:
  - A. TRANSFER VERT. AND DEVICE REF. CENTER LINES FROM INSIDE FACE TO OUTSIDE FACE OF DOOR. BE SURE VERT. CENTER LINE IS PARALLEL TO EDGE OF DOOR.
  - B. LOCATE AND PREPARE ALL HOLES AS INDICATED.
3. RE-HAND TRIM IF NECESSARY (SEE OTHER SIDE). ST TRIM CANNOT BE RE-HANDED.
4. INSTALL TRIM ON DOOR AND CUT LEVER SPINDLE TO SIZE:
  - A. TRIM MOUNTING: FOUR STUDS ARE THRU-BOLTED TO DEVICE WHEN DEVICE IS INSTALLED.  
**NOTE: FOR F-18-R AND F-XX-R DEVICES ON WOOD DOOR, INSERT SEX BOLTS INTO TWO HOLES PRIOR TO INSTALLING TRIM.**
  - B. CUT LEVER SPINDLE TO EXTEND 5/8" TO 3/4" BEYOND DOOR SKIN.
5. IF REQUIRED, INSTALL RIM CYLINDER AND CUT TAILPIECE TO EXTEND 3/8" BEYOND INSIDE FACE OF DOOR (SEE OTHER SIDE).
6. INSTALL DEVICE ON DOOR PER DEVICE INSTRUCTIONS.

DEVICE	"A"	"B"	DEVICE	"A"	"B"	DEVICE	"A"	"B"	DEVICE	"A"	"B"
(F-)XX-R-L	OMIT	1-3/8"	(F-)XX-R-NL x L DT	1-3/8"	OMIT	(F-)18-R-L	OMIT	1-3/8"	(F-)18-R-NL x L DT	1-3/8"	OMIT
(F-)XX-R-L (BE)	OMIT	OMIT	(F-)XX-R-L2	1-3/8"	OMIT	(F-)18-R-L (BE)	OMIT	OMIT	(F-)18-R-L2	1-3/8"	OMIT
(F-)XX-R-L (NL)	OMIT	1-3/8"	(F-)XX-R-L(20.C.)	1-3/8"	1-3/8"	(F-)18-R-L (NL)	OMIT	1-3/8"	(F-)18-R-L(20.C.)	1-3/8"	1-3/8"
(F-)XX-R-L DT	OMIT	OMIT				(F-)18-R-L DT	OMIT	OMIT			

NOTE: DIMENSIONS "A" AND "B" ARE THE SAME FOR L AND 816 TRIM REGARDLESS OF FUNCTION.

**Customer Service**  
1-877-671-7011    www.allegion.com/us

