

# FALCON<sup>®</sup>


## Installation Instruction Supplement

# 2390 Touchbar LBR Concealed Vertical Rod Panic Device


Refer to ININST.1039 for complete device installation instructions.

At step 1.6 in instruction ININST.1039 perform the following steps:

1. Install retaining ring to LBR stud. Make sure the ring seats securely in groove and slide the rod bushing over the long end of the stud as shown.

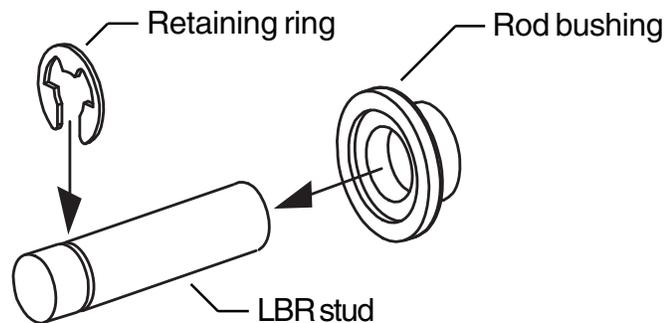

2. Install the long end of the stud assembly into door as shown.

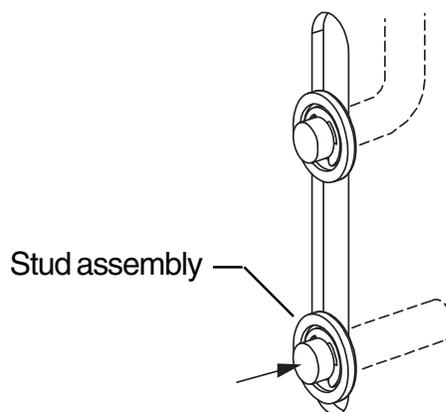

Continue with device installation using instruction ININST.1039. Any references to bottom rod installation or adjustment can be omitted.