



3065 - 65 SOFFIT SHOE FOR USE WITH RADIUS TRIM AND PULL SIDE CLOSER

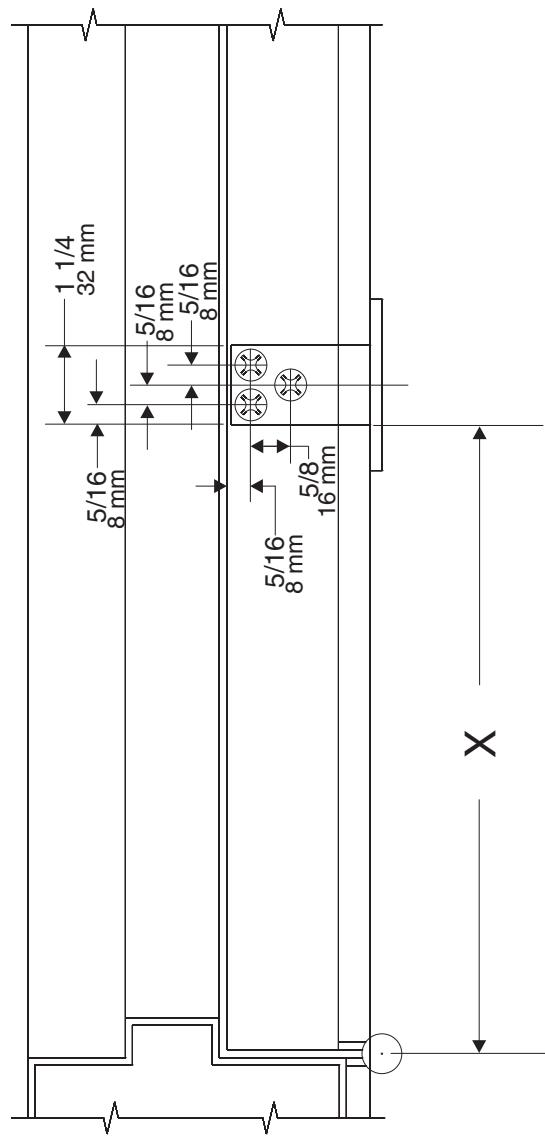

CLOSER	OPENING SWING	DIM. "X"
1070	UP TO 100°	12 3/4
	101° TO 180°	9 1/4
1370	UP TO 180°	8
1460	UP TO 110°	11 5/8
	111° TO 180°	8 5/8
4031	UP TO 180°	10 1/16
3030	UP TO 110°	11
	111° TO 130°	10
4010	UP TO 100°	9
	131° TO 180°	12 11/16
4040	UP TO 140°	10 15/16
1260	UP TO 120°	11 3/16
	UP TO 100°	13 3/8
	101° TO 120°	12 3/8
	121° TO 180°	9 7/8

NOTE
INSTALL SHOE AS FAR
INTO THE RABBET AS
THE FRAME WILL ALLOW

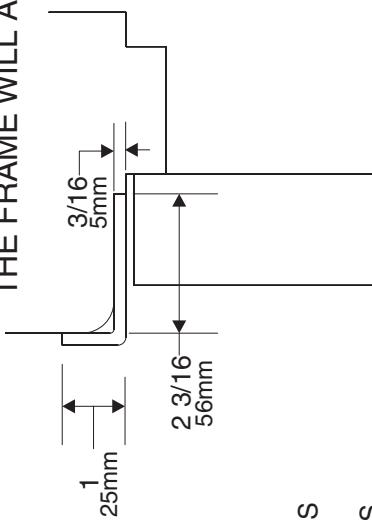

- NOTES
1. THIS TEMPLATE IS TO BE USED WITH THE STANDARD CLOSER TEMPLATE.
 2. DOORS HUNG ON PIVOTS OR SWING CLEAR HINGES REFER TO INSTRUCTIONS PACKED WITH CLOSER.
 3. REINFORCING PER ANSI/SDI-100 RECOMMENDED FOR HOLLOW METAL DOORS AND FRAMES.

LCN
1-800-526-2400
®