


IMPORTANT! Locks used with the TRP kit must have been ordered with door thickness kit 1/8" larger than actual door thickness.

NOTE: Refer to standard instructions for reference.
 In step 7, substitute picture below.

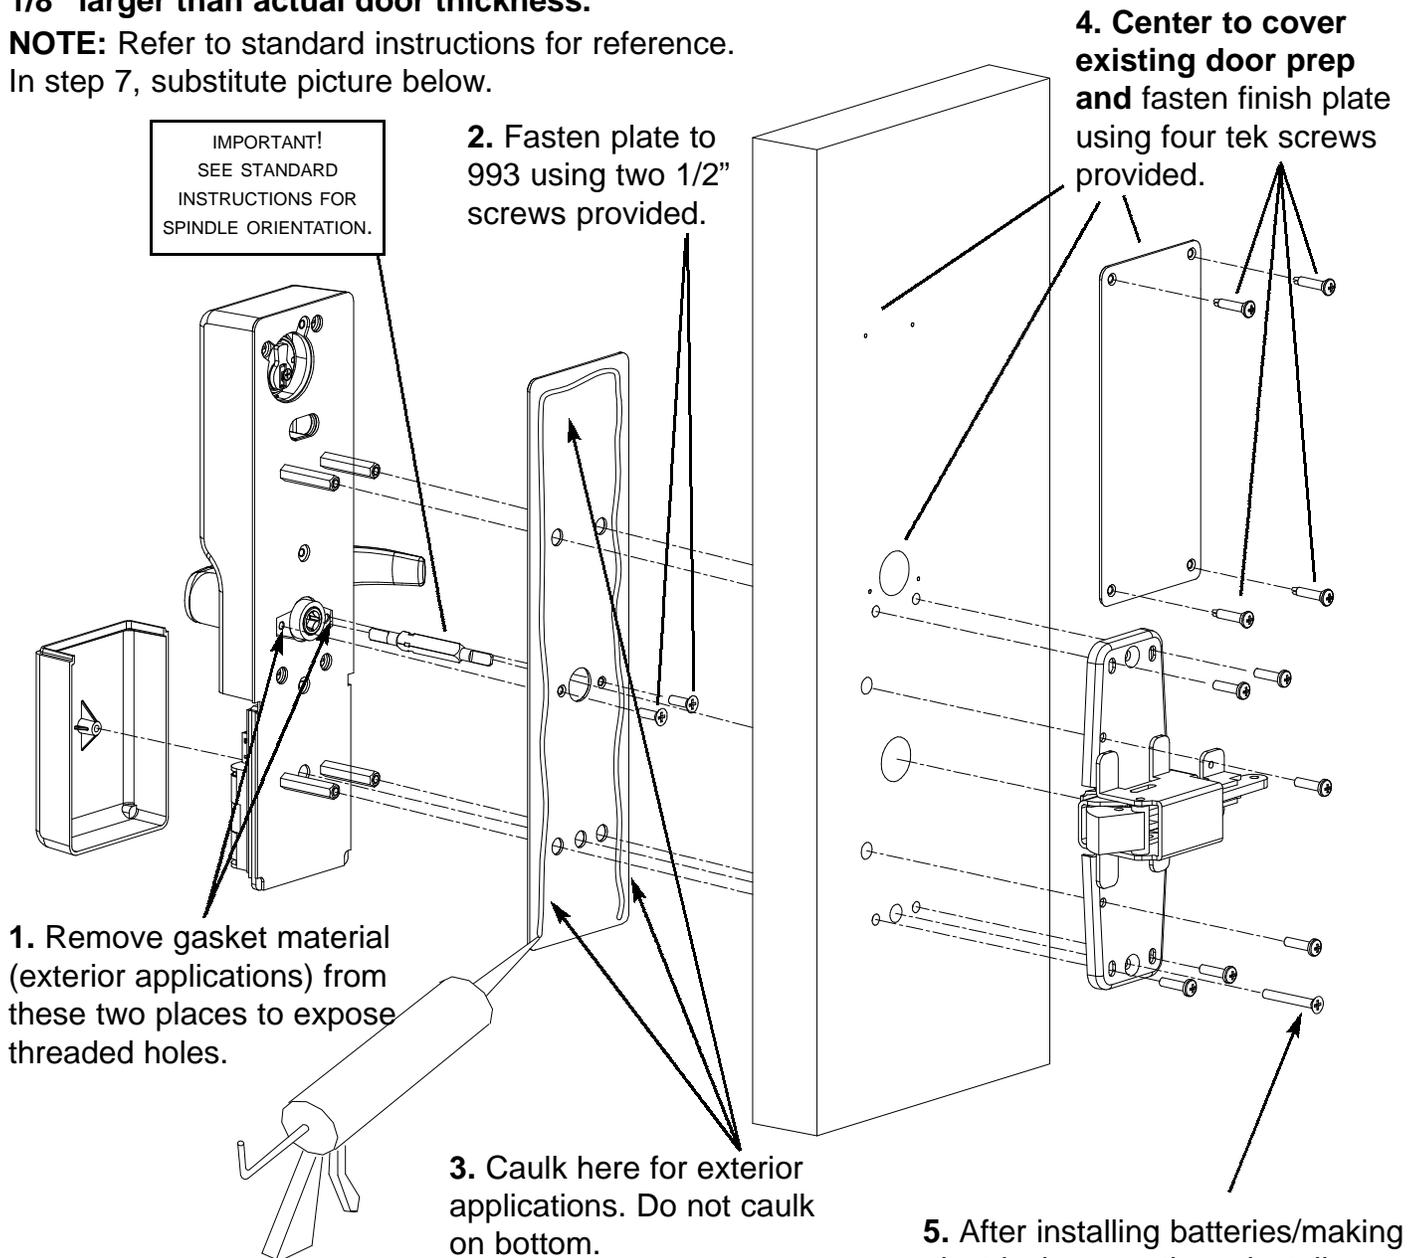

Screw Length Chart:	
Door Thickness:	Screw Length:
2 5/8"	4" (Use longer screw - don't cut)
2 1/2"	3 7/8"
2 3/8"	3 3/4"
2 1/4"	3 5/8"
2 1/8"	3 1/2"
2"	3 3/8"
1 7/8"	3 1/4"
1 3/4"	3 1/8" (Use shorter screw provided-don't cut.)
1 1/2"	2 7/8"
1 3/8"	2 3/4"

5. After installing batteries/making electrical connections, install cover using the 3 1/8" flat head screw provided with TRP kit. Note that the standard screw for a 1-3/4" is provided with the TRP kit. If the door is not 1-3/4" cut the 4" screw (provided) down to size referring to the chart at left.

