


# SCHLAGE® Installation Instructions

NOTE: This package only includes a Programming Cable. Computer Interface module and 9-Pin cable are included in the Locknetics® Computer Programming Kit.

1. Snap Programming Cable into i.Button® Data Port. (e.PRIMUS DE-Series lock shown)
2. Insert Computer Interface (label side up) into Programming Cable as shown below.

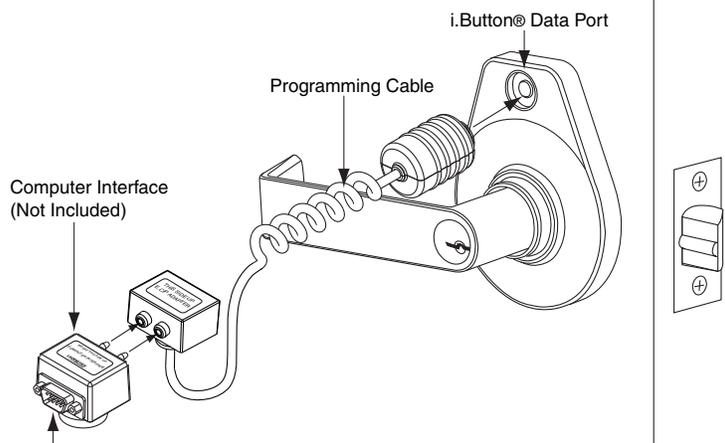

For 9-Pin Cable connection to computer


©2001 Ingersoll-Rand Company  
Printed in U.S.A.  
P512-031 Rev. 05/02



# SCHLAGE® Installation Instructions

NOTE: This package only includes a Programming Cable. Computer Interface module and 9-Pin cable are included in the Locknetics® Computer Programming Kit.

1. Snap Programming Cable into i.Button® Data Port. (e.PRIMUS DE-Series lock shown)
2. Insert Computer Interface (label side up) into Programming Cable as shown below.

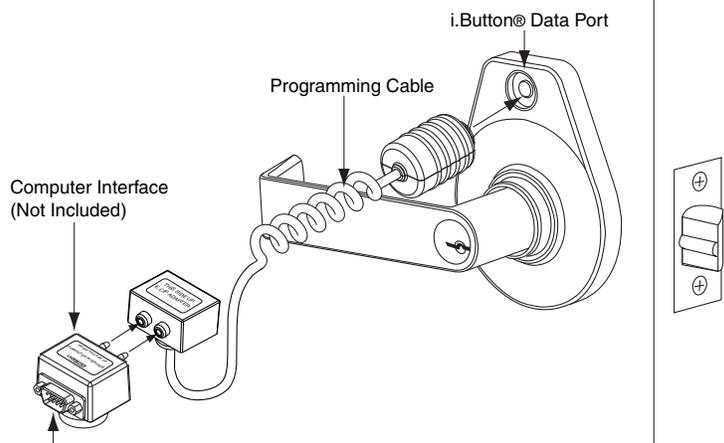

For 9-Pin Cable connection to computer


©2001 Ingersoll-Rand Company  
Printed in U.S.A.  
P512-031 Rev. 05/02



# SCHLAGE® Installation Instructions

NOTE: This package only includes a Programming Cable. Computer Interface module and 9-Pin cable are included in the Locknetics® Computer Programming Kit.

1. Snap Programming Cable into i.Button® Data Port. (e.PRIMUS DE-Series lock shown)
2. Insert Computer Interface (label side up) into Programming Cable as shown below.

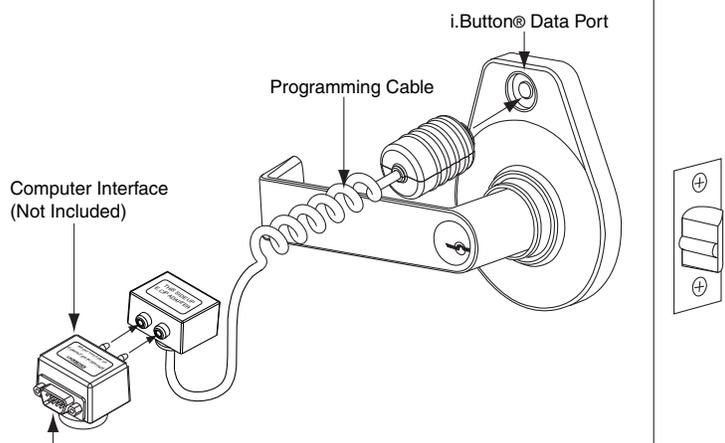

For 9-Pin Cable connection to computer


©2001 Ingersoll-Rand Company  
Printed in U.S.A.  
P512-031 Rev. 05/02



# SCHLAGE® Installation Instructions

NOTE: This package only includes a Programming Cable. Computer Interface module and 9-Pin cable are included in the Locknetics® Computer Programming Kit.

1. Snap Programming Cable into i.Button® Data Port. (e.PRIMUS DE-Series lock shown)
2. Insert Computer Interface (label side up) into Programming Cable as shown below.

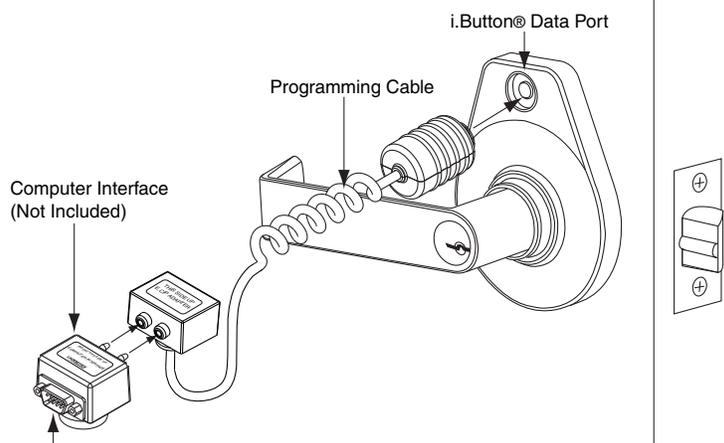

For 9-Pin Cable connection to computer

©2001 Ingersoll-Rand Company  
Printed in U.S.A.  
P512-031 Rev. 05/02

