



921440-00


For 330/350 Push Bar

# 01 Mod Trim

# VON DUPRIN®

Installation Instructions

1. Prepare door for 330/350 Push Bar. See 330/350 Push Bar instructions for holes and center lines.
2. Prepare door for trim:
  - A. Transfer center line from inside (330/350 Push Bar side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure center line is parallel to edge of door.
  - B. Locate and prepare all holes as shown.
3. Apply trim.
4. Apply 330/350 Push Bar.

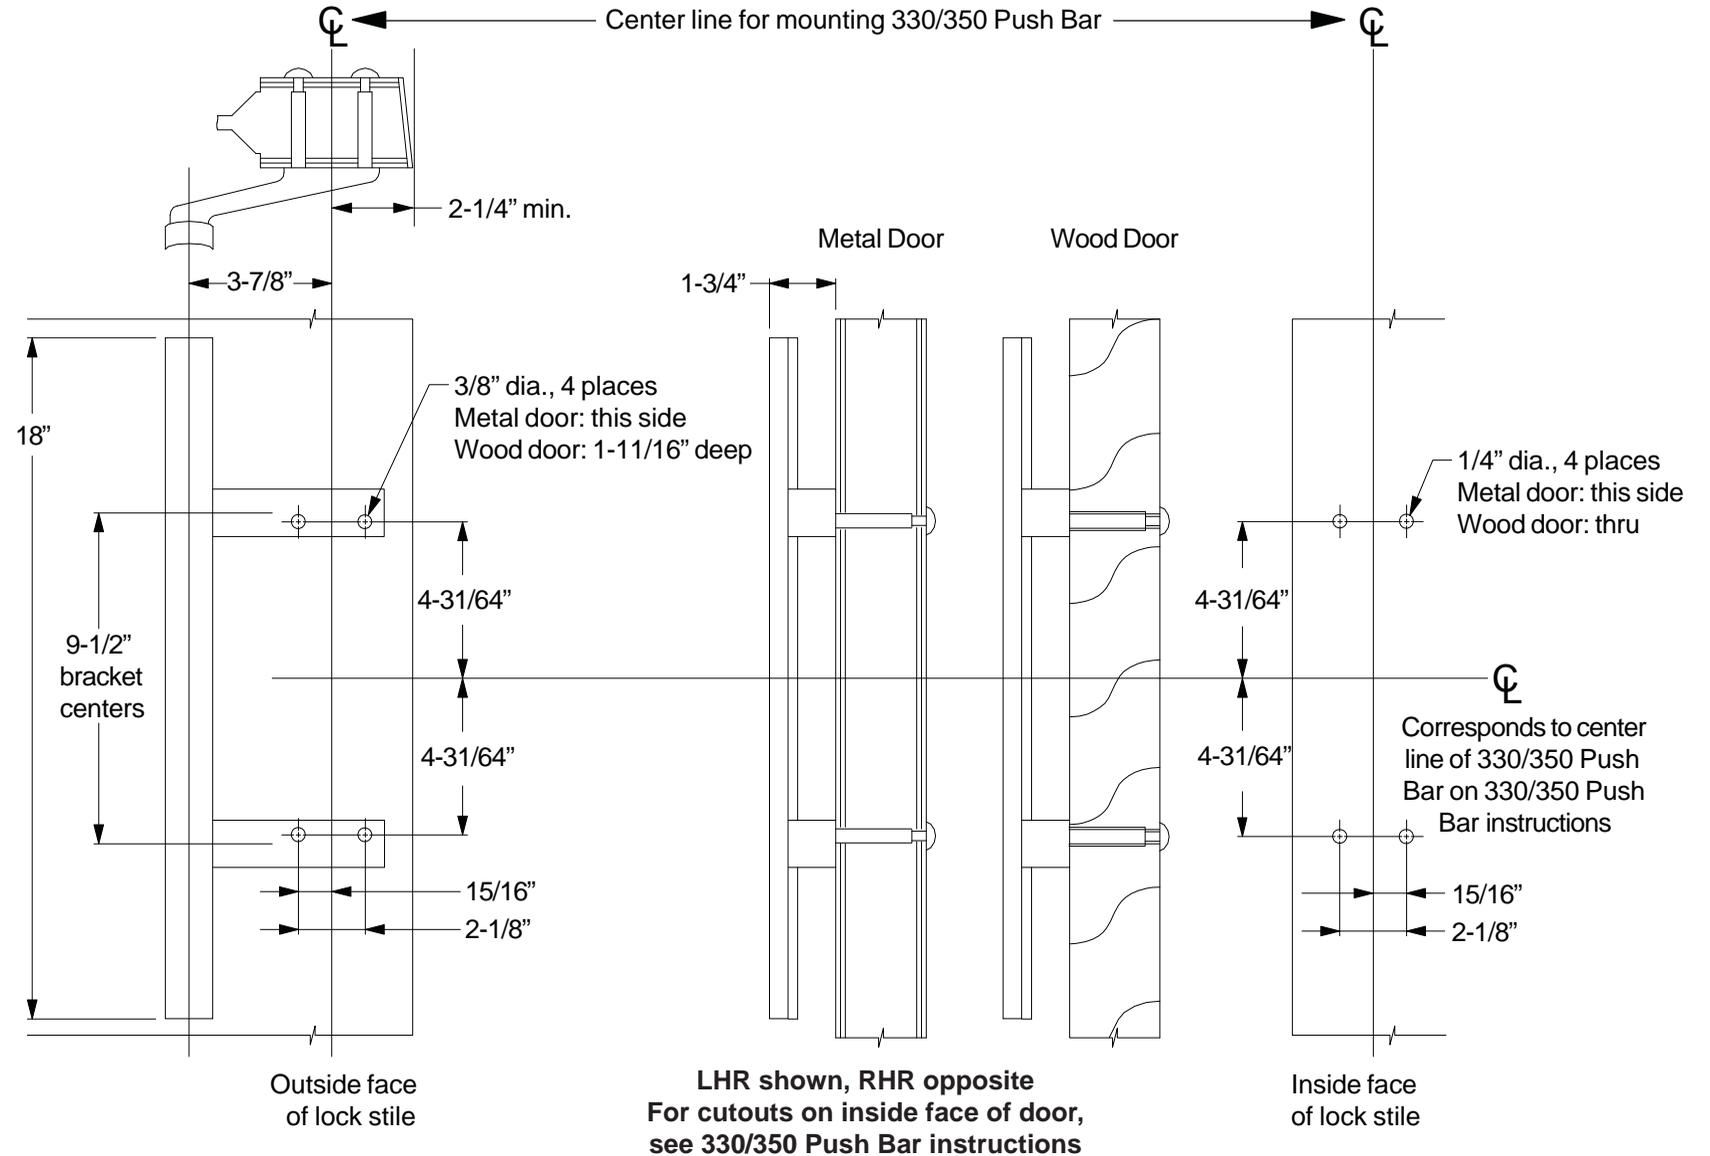

**Customer Service**  
1-877-671-7011      www.allegion.com/us



© Allegion 2014  
Printed in U.S.A.  
921440-00 Rev. 10/14-b