



921438-00

Mod Trim for 33/35 Rim Devices

01

VON DUPRIN®

Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes and center lines.


2. Prepare door for trim:

A. Transfer center line from inside (device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure center line is parallel to edge of door.

B. Locate and prepare all holes as shown.

3. Apply trim.

4. Apply exit device.

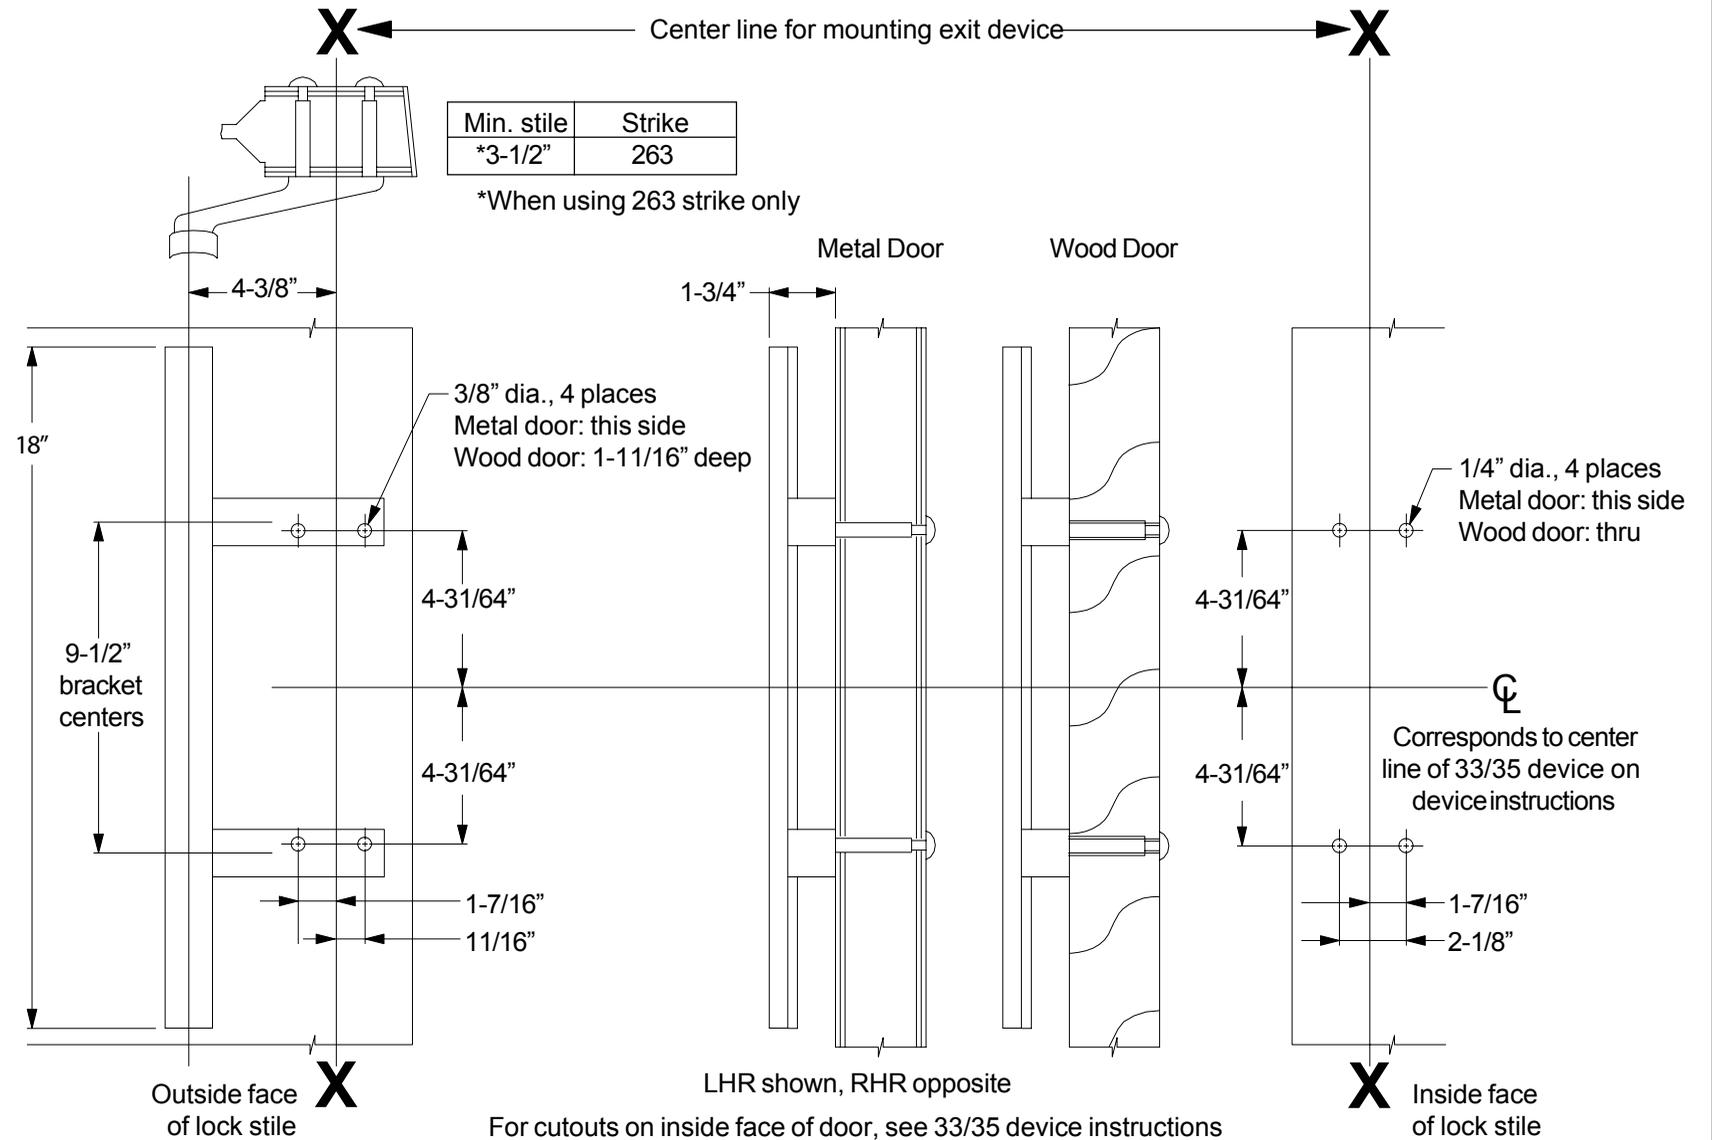

Customer Service
1-877-671-7011 www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921438-00 Rev. 01/14-b