


# VON DUPRIN®

## INSTALLATION INSTRUCTIONS


1. Prepare door for exit device. See exit device instructions for holes and center lines.
2. Prepare door for trim:
  - A. Transfer center line from inside (device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure center line is parallel to edge of door.
  - B. Locate and prepare all holes as shown.
3. Apply trim.
4. Apply exit device.

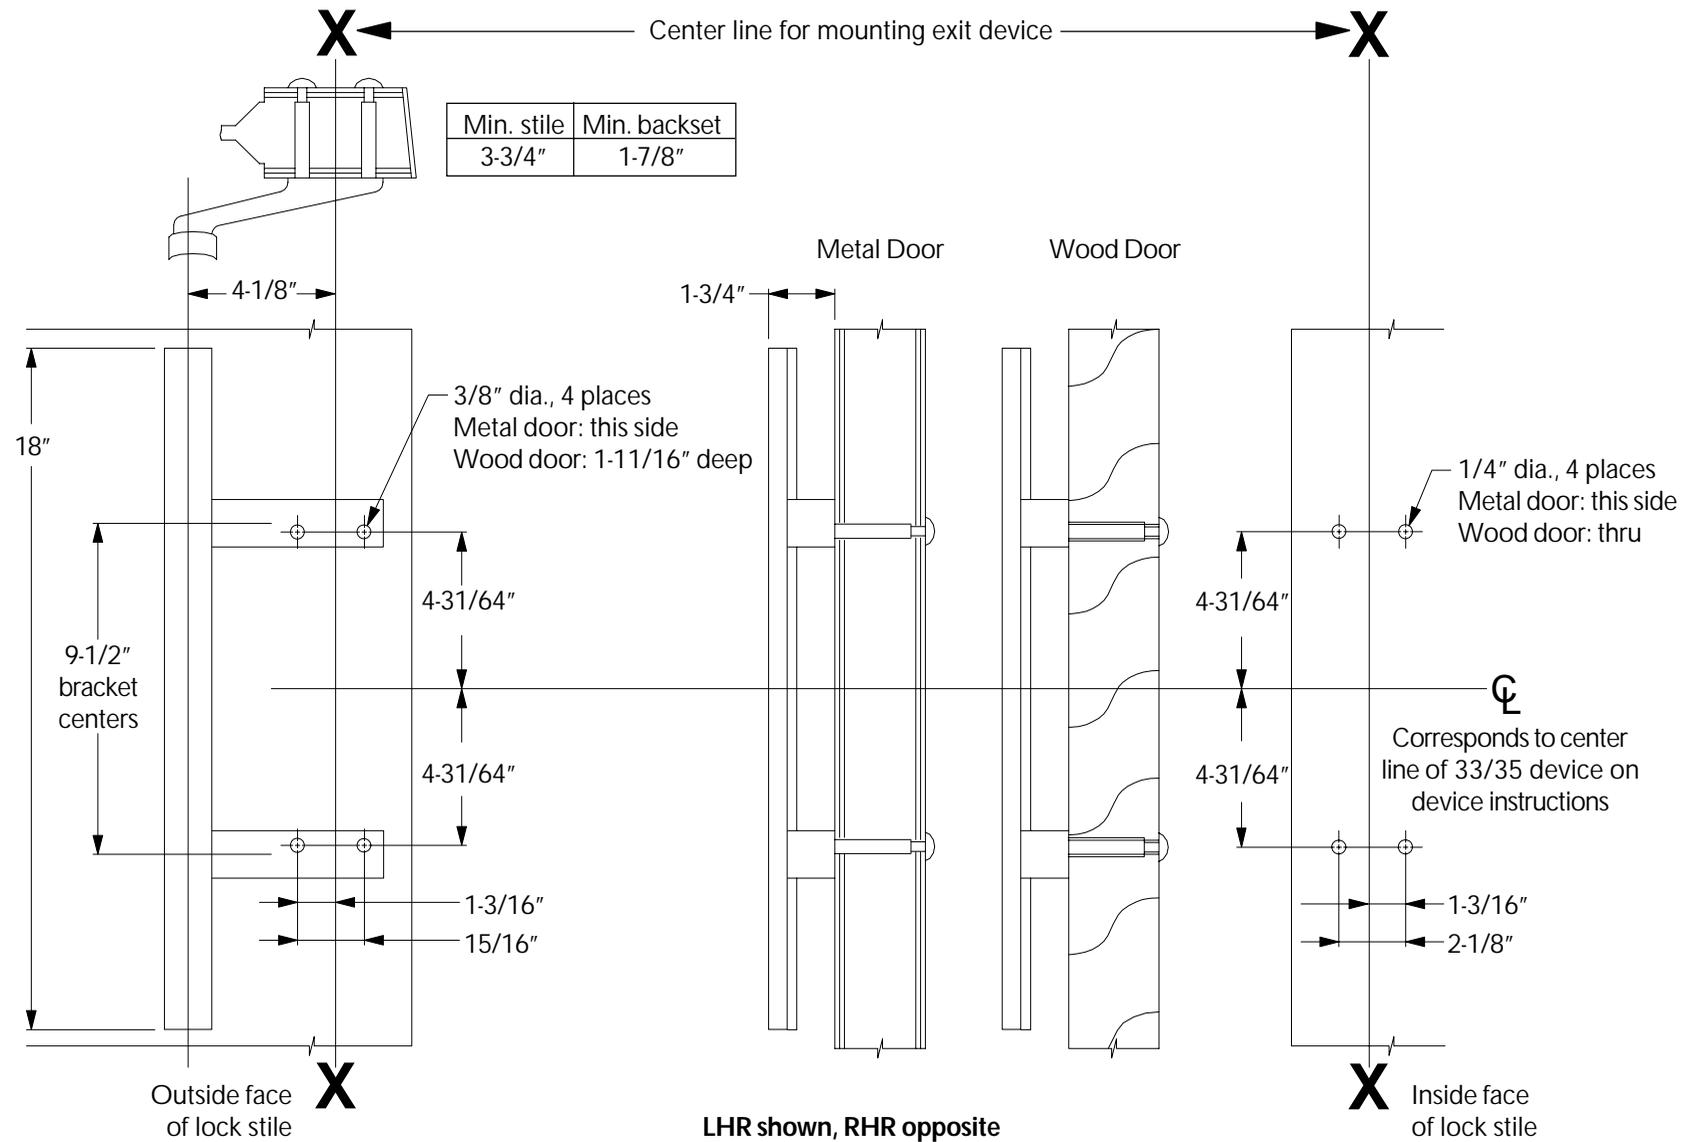

For cutouts on inside face of door, see 33/35 device instructions



**01 MOD TRIM**  
FOR 33/35 VERTICAL DEVICES



Copyright © 2004 Ingersoll-Rand.  
All rights reserved.

PAGE NO.  
**1 of 1**

REVISION  
**4**

**921439-00**