



921069-00

Trim

608TP/TP-BE


VON DUPRIN®

Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
 - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
 - B. Locate and prepare holes as shown.
3. For TP trim, install cylinder in trim.
4. Cut cylinder tailpiece and thumbpiece to extend out of exit device side of door per chart below.
5. Apply trim.
6. Apply exit device.

Cylinder Tailpiece and Thumbpiece Projections		
Device	Cylinder Tailpiece	Thumbpiece
44 Rim	5/8" to 3/4"	5/8" to 3/4"
88 Rim	5/8" to 3/4"	5/8" to 3/4"
8875 Mortise Lock	not required	not required
8827 Vertical Rod	1/4" to 1/2"	not required

Device Application Schedule			
Device	"A"	"B"	"C"
44 Rim	3-7/8"	1/4"	thru
88 Rim	3-7/8"	1/4"	thru
8875 Mortise Lock	3-3/4"	2"	3/4"
8827 Vertical Rod	3-7/8"	1-3/4"	thru

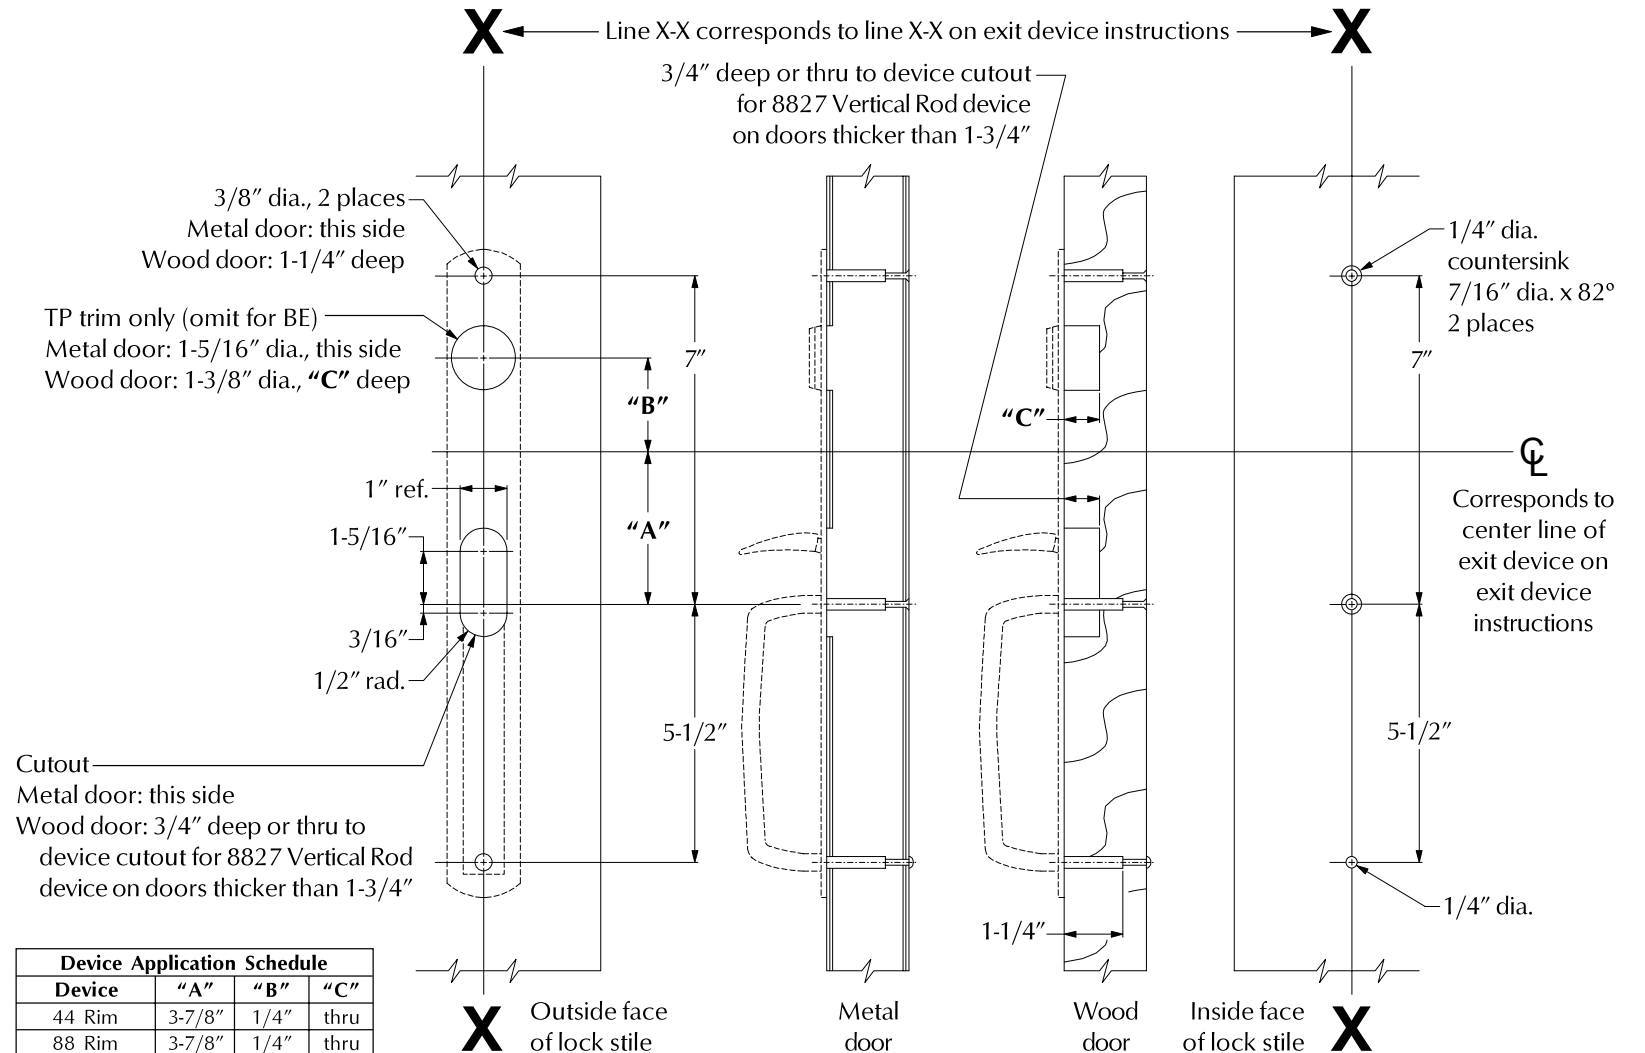

LHR shown, RHR opposite

For cutouts on inside face of door, see exit device instructions

Customer Service
1-877-671-7011 www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921069-00 Rev. 01/14-b