




47255378


# Models 137, 138, 8136, 8137, & 8138 Glass Door Weather Stripping




Installation Instructions

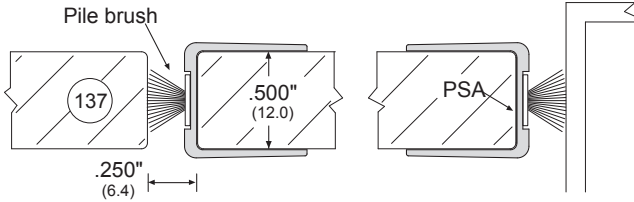


**#137** For .500\"/>

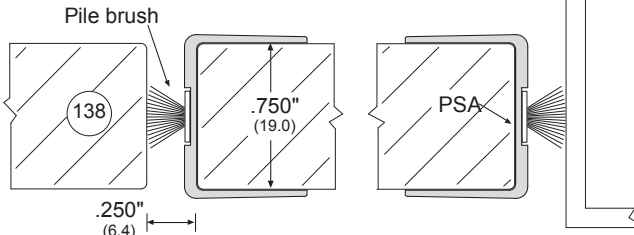


**#138** For .750\"/>

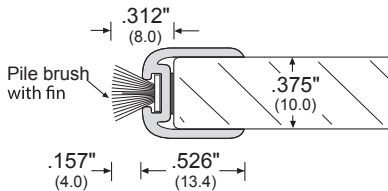

**#8136** For .375\"/>

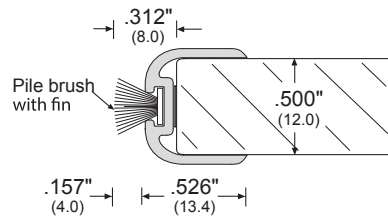

**#8137** For .500\"/>

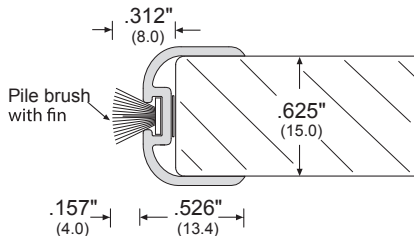

**#8138** For .625\"/>

### Before Installation:

- 1 Thoroughly clean the surface area where the polycarbonate seal is to be applied. Make sure the surface is clean from any impediments (dust, dirt, oil, grease, etc) and smooth. You may use a solvent cleaner (such as mineral spirits) or common detergent cleaner.


- 2 Surface area must be completely dry before the installation process begins.

### To Install:

- 1 Measure and cut polycarbonate seal to length needed allowing for miter cuts where necessary. Do not damage the woven pile insert when miter cutting.

- 2 Remove protective paper backing. Apply polycarbonate seal to the edge of glass. For a good miter joint make sure the overall positioning is correct.

- 3 After installation, check that doors swing smoothly.

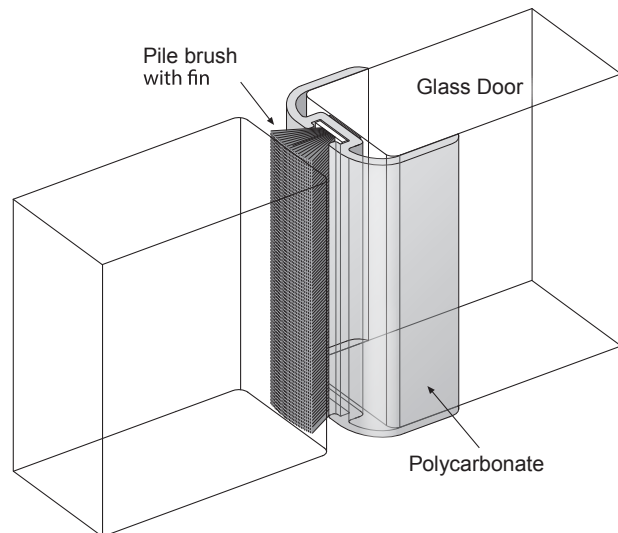

### Customer Service

1-877-671-7011

[www.allegion.com/us](http://www.allegion.com/us)

© Allegion 2016  
Printed in U.S.A.  
47255378 Rev. 11/16-b