


Strikes

010018-001, 10-094

Jamb Type: Wood
 Style: Square Corner, Deadbolt
 Standard for: D100/D200-Series | H-Series
 Optional for:

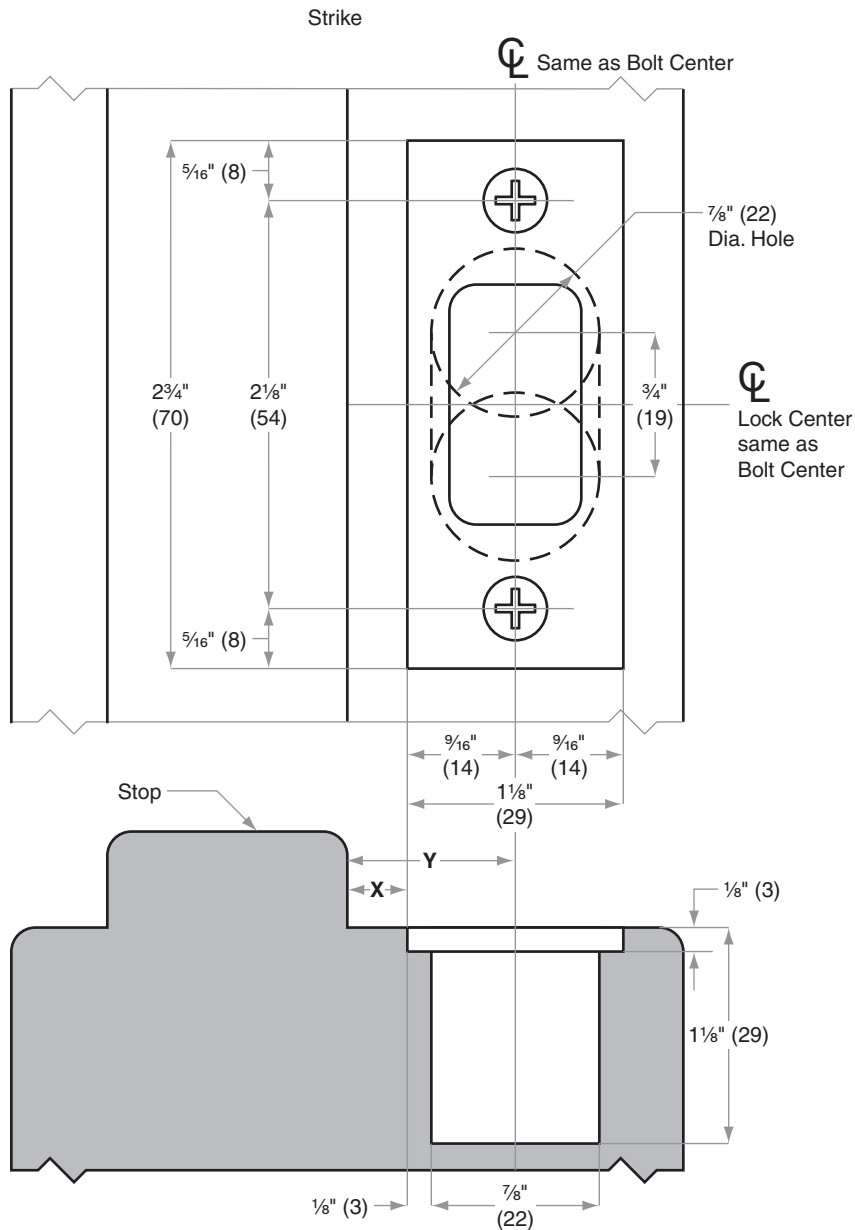

NOTE:

1. When strike/frame reinforcer is used, additional preparation is required: two Pilot Holes and $\frac{1}{8}$ " (3) deeper mortise
2. For use with 1" (25) throw deadbolt functions
3. Dimensions X and Y are variables dependent on door thickness
4. Strike location on frames must be adjusted for thickness of door silencers when used

Dimensions shown in parentheses () are in millimeters.

Door preparation template