


# 1609 Strike

Metal Doors, LHR shown, RHR opposite

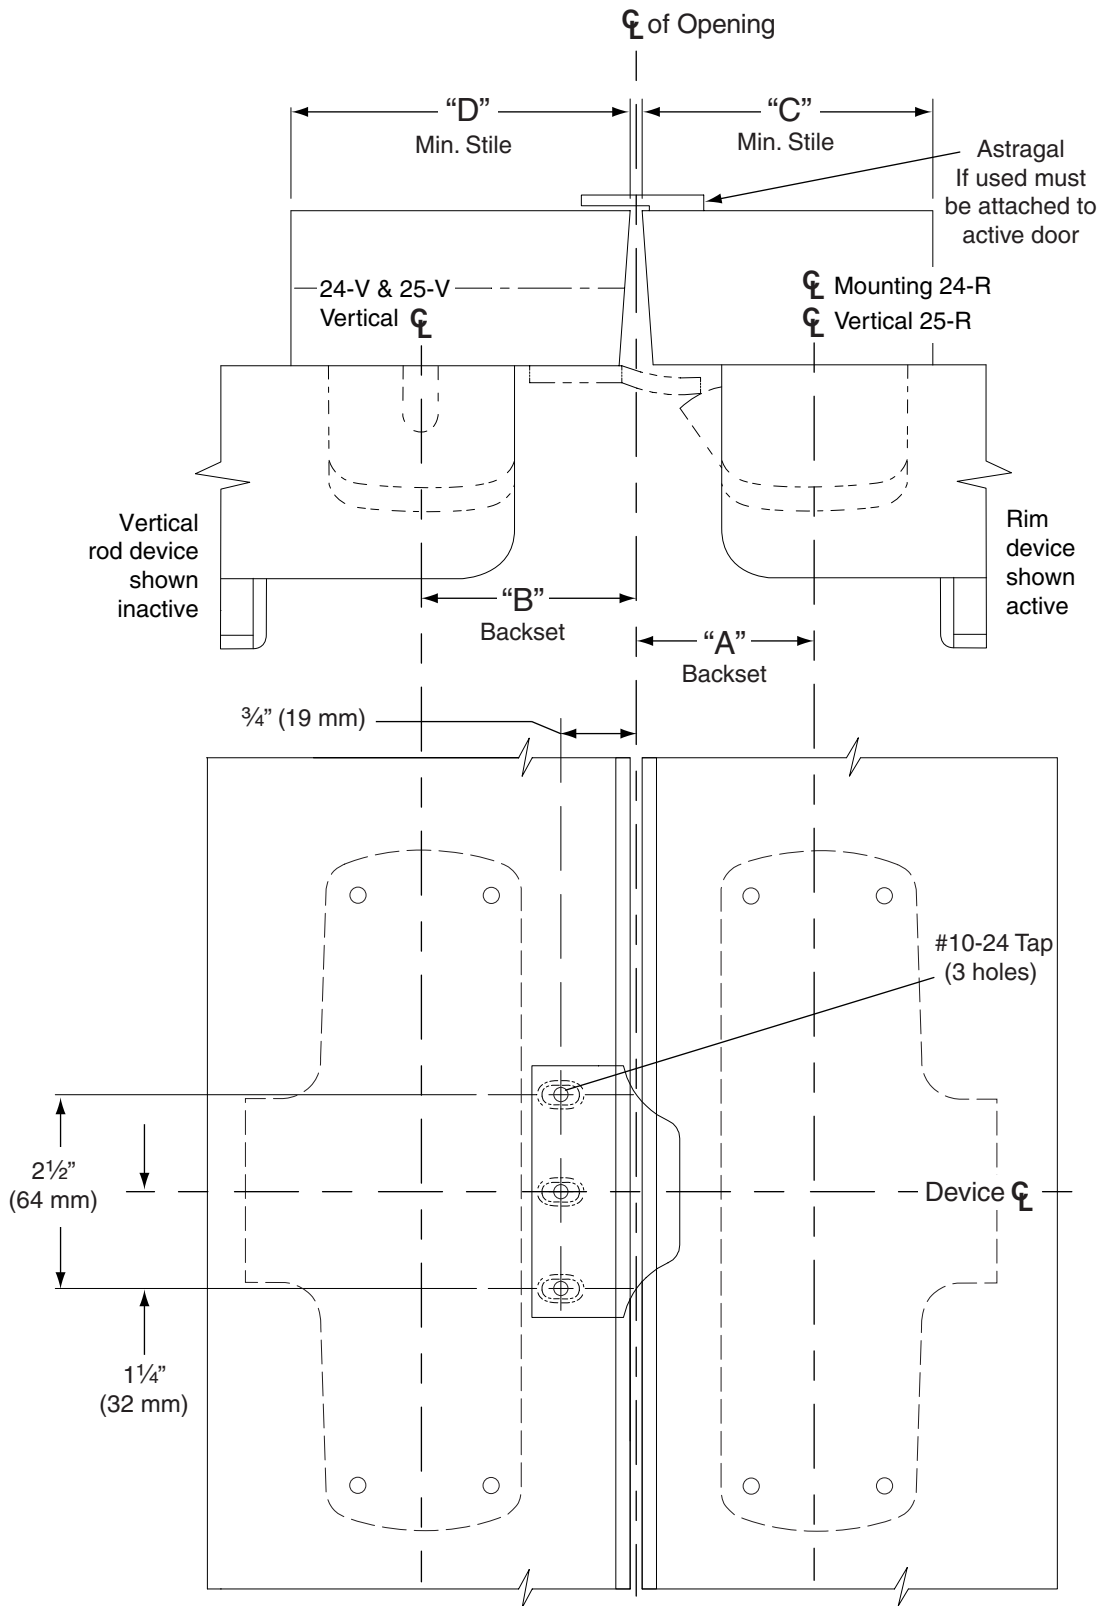

- For device function and other dimensions, refer to appropriate device or trim templates.
- Note: reinforcement required for metal frames.

Device	"A" Backset	"B" Backset	"C" Min. Stile	"D" Min. Stile
25-R x 25-V	2 <sup>3</sup> / <sub>8</sub> " (61 mm)	3 <sup>1</sup> / <sub>8</sub> " (79 mm)	3 <sup>1</sup> / <sub>2</sub> " (89 mm)	4 <sup>3</sup> / <sub>8</sub> " (111 mm)
24-R x 24-V	1 <sup>1</sup> / <sub>2</sub> " (38 mm)	2" (51 mm)	3 <sup>1</sup> / <sub>16</sub> " (78 mm)	3 <sup>5</sup> / <sub>16</sub> " (84 mm)

**TEMPLATE**  
**T-3206-b**