


# 3788 Strike with 4215 Angle Bracket

Metal Door, LHR Shown, RHR Opposite

- For metal frames:  
Drill and tap for  
#10-24 screw or  
drill  $\frac{9}{64}$ " (4 mm) Dia. (2 holes)

- For wood frames:  
Drill  $\frac{9}{64}$ " (4 mm) Dia.  
x  $1\frac{1}{4}$ " (32 mm) deep  
(2 holes)

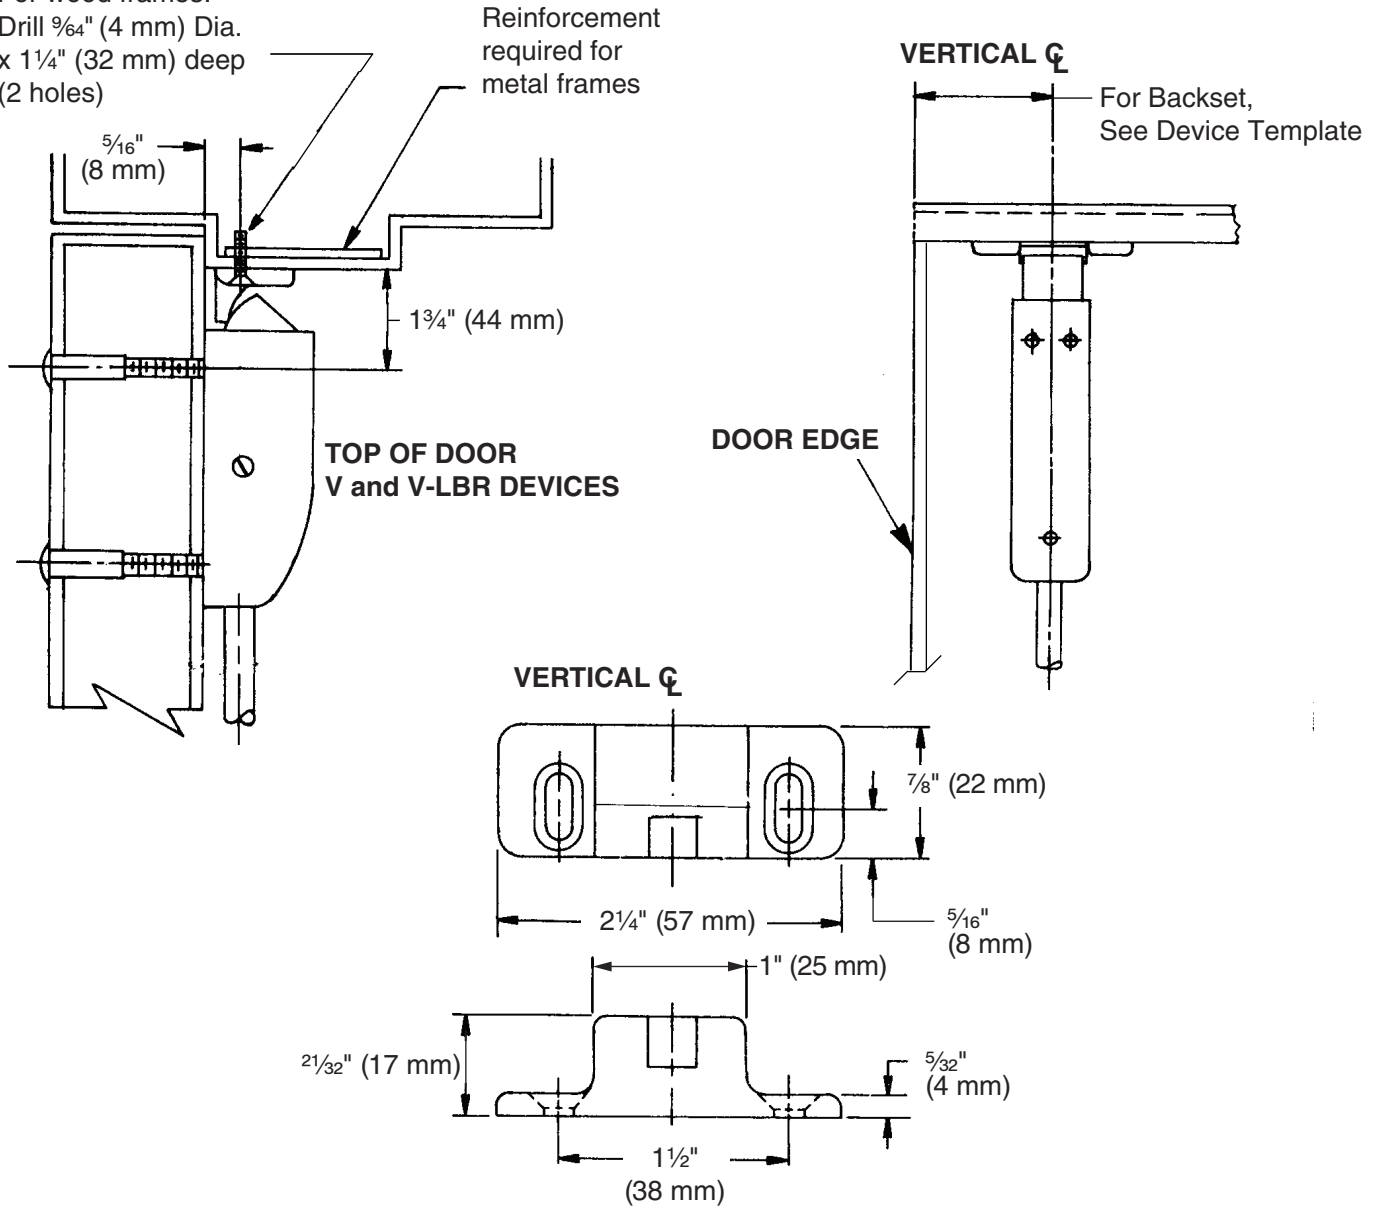

- For device function and other dimensions,  
see appropriate device or trim templates.

TEMPLATE  
**T-3032-b**