


# 4188 Strike

Wood Door, LHR Shown, RHR Opposite

## Metal Frame


- For device function and other dimensions, see appropriate device or trim templates.

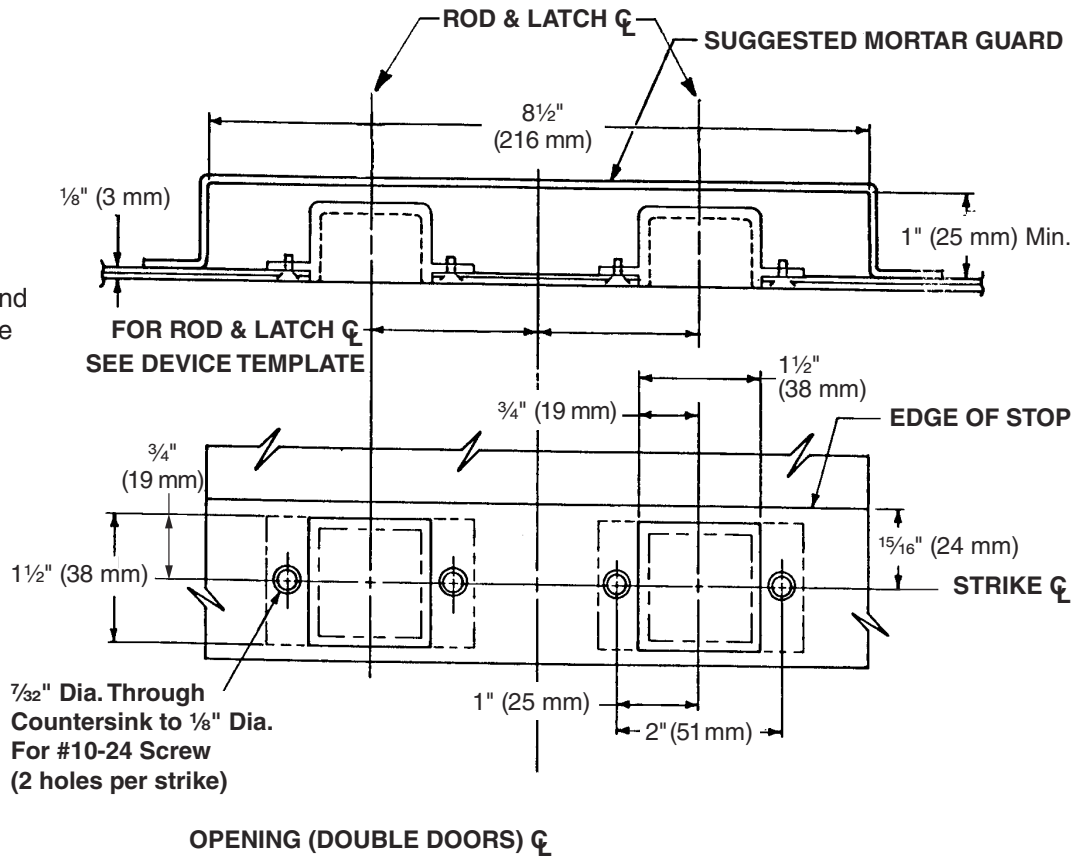

## OPENING (DOUBLE DOORS) C

## Wood Frame

- For device function and other dimensions, see appropriate device or trim templates.
- Strike must be clearanced and countersunk for #10 screw head.

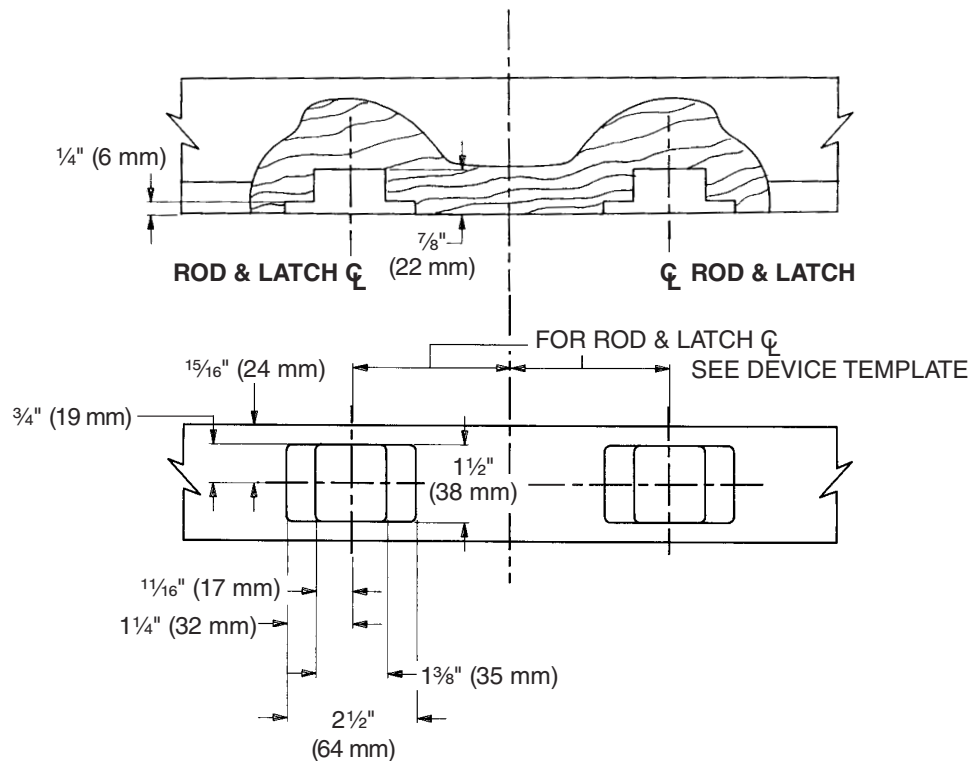

TEMPLATE

**W-3034-a**