


571 and 571-A Strikes

Wood Door, LHR Shown, RHR Opposite

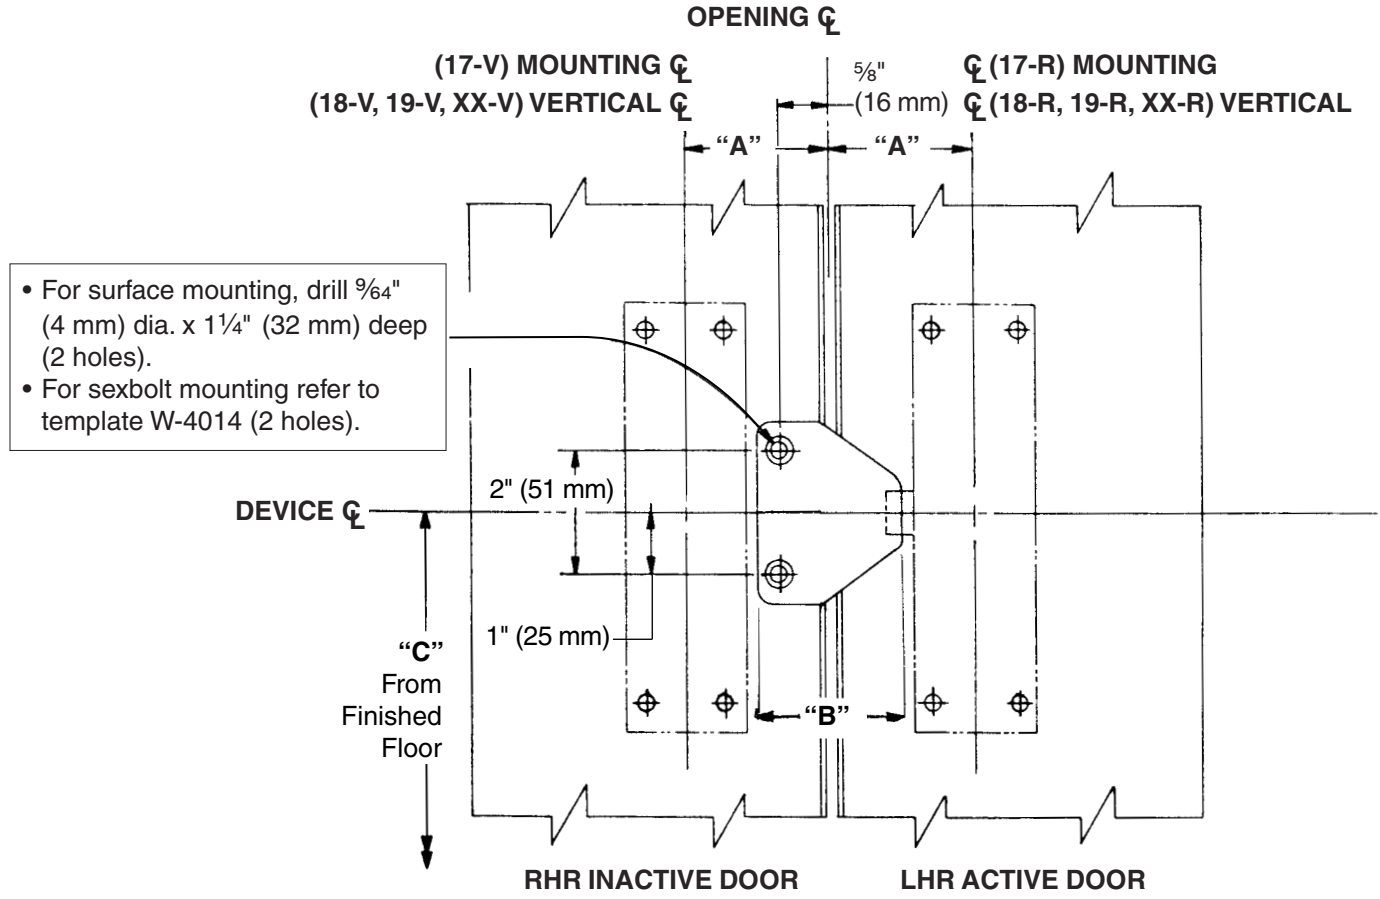

Device	Strike	A	B	C
18-R x 18-V	571	$2\frac{7}{8}$ "	$2\frac{1}{2}$ "	$40\frac{1}{4}$ "
	571-A	$2\frac{3}{8}$ "	2"	$40\frac{1}{4}$ "
17-R x 17-V	571	$2\frac{3}{16}$ "	$2\frac{1}{2}$ "	40"
	571-A	$1\frac{11}{16}$ "	2"	40"
19-R x 19-V	571	$2\frac{5}{16}$ "	$2\frac{1}{2}$ "	$40\frac{5}{16}$ "
	571-A	$1\frac{13}{16}$ "	2"	$40\frac{5}{16}$ "
XX-R x XX-V	571	$2\frac{7}{8}$ "	$2\frac{1}{2}$ "	$40\frac{1}{4}$ "
	571-A	$2\frac{3}{8}$ "	2"	$40\frac{1}{4}$ "

• For device function and other dimensions, see appropriate device or trim templates.

TEMPLATE
W-3003-a