

# F-25-C-WDC Concealed Vertical Device



Concealed Vertical Rod Panic and Fire Exit Device With Metal Wrap Edge 5" Stile, Wood Door  
LHR Shown, RHR Opposite

## Wood Door Prep

Page 1 of 2

(Metal Wrap Edge Prep shown on page 3)

### RELEASE PLUNGER DETAIL

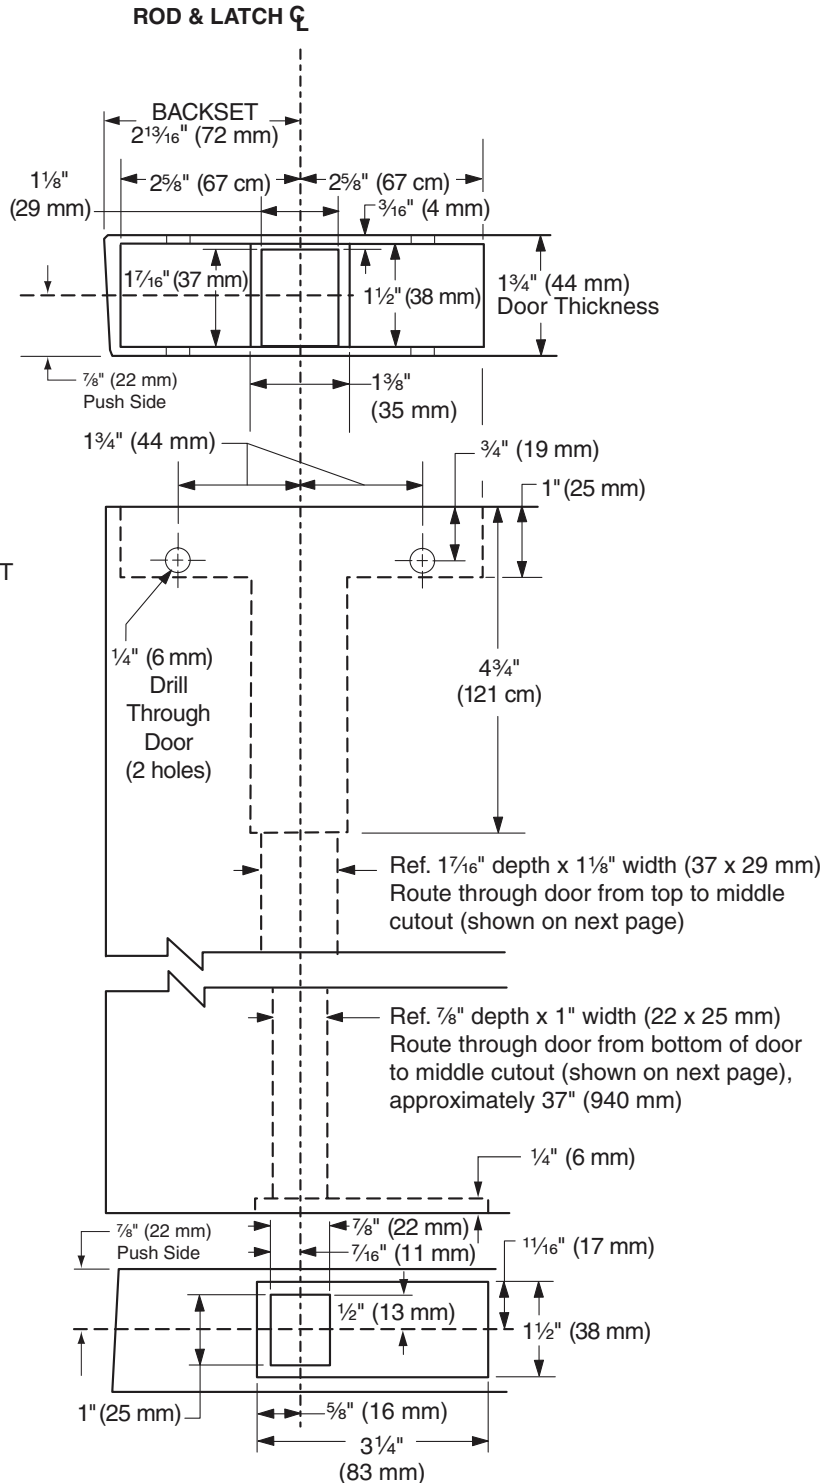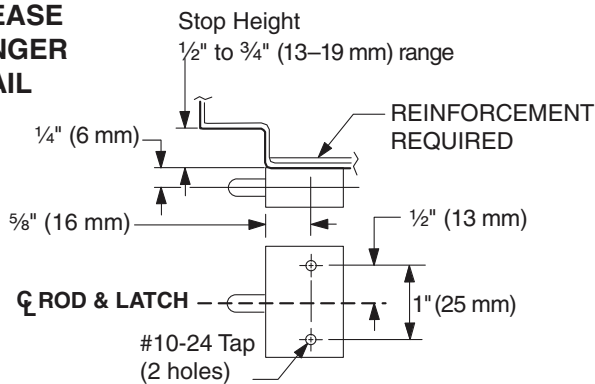

- For outside trim, see trim template for door preparation.
- For Less Bottom Rod (LBR) application, refer to Template W-5494 for auxiliary fire latch preparation.

TEMPLATE

W-1242-e

# F-25-C-WDC Concealed Vertical Device


Concealed Vertical Rod Panic and Fire Exit Device With Metal Wrap Edge 5" Stile, Wood Door

LHR Shown, RHR Opposite

## Wood Door Prep

Page 2 of 2

(Metal Wrap Edge Prep shown on page 3)

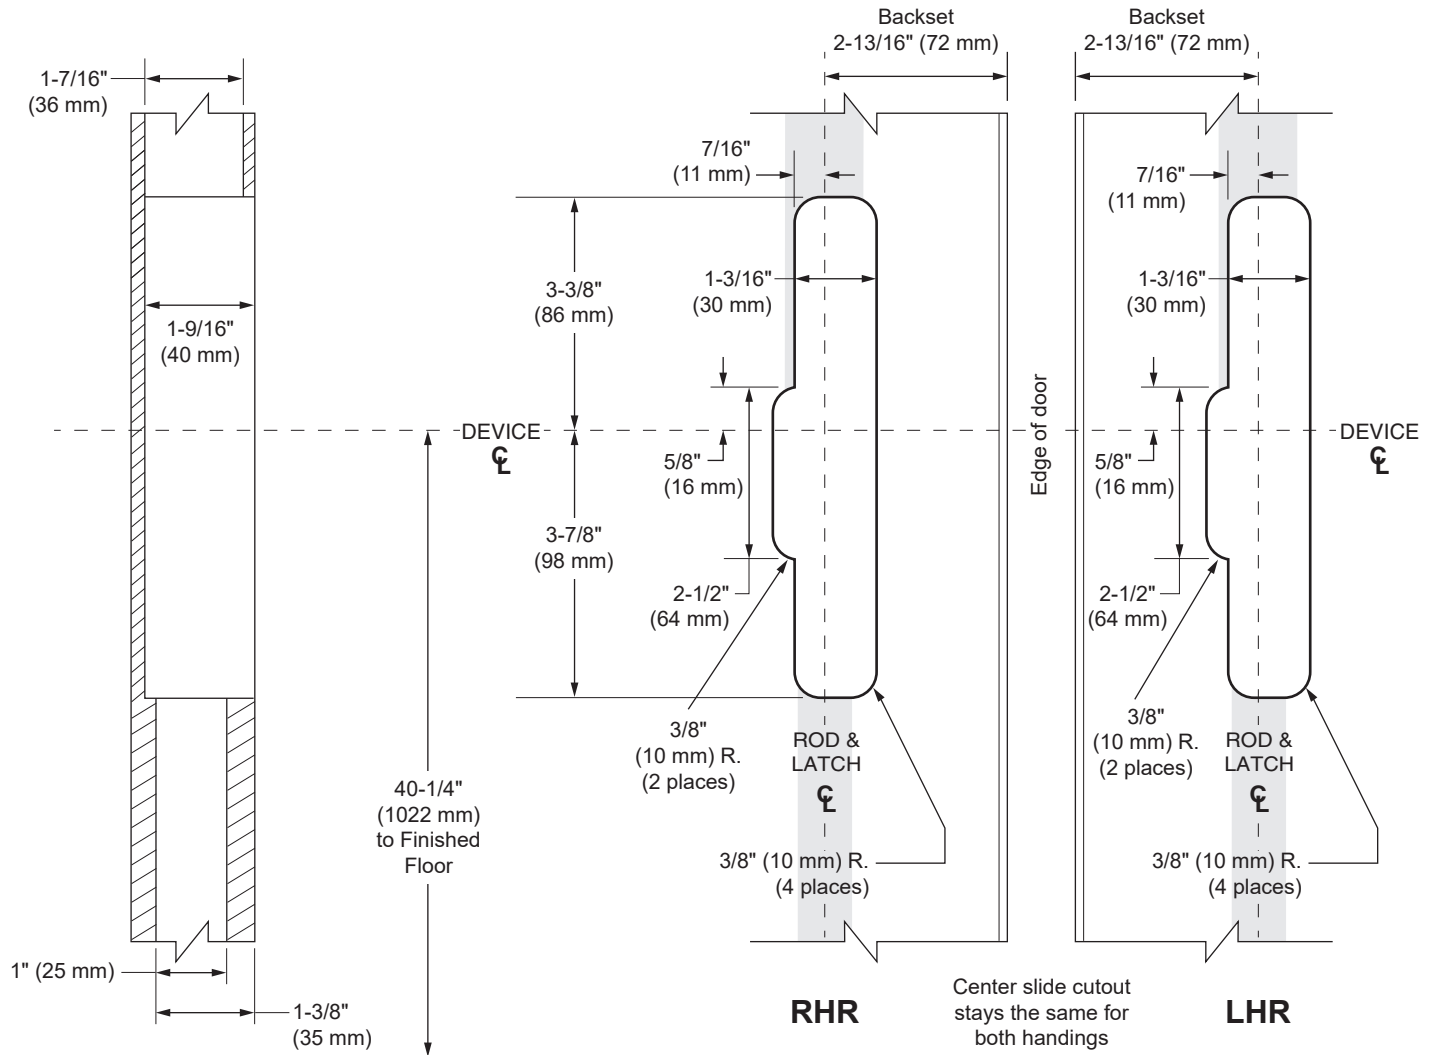

- For outside trim, see trim template for door preparation.
- For Less Bottom Rod (LBR) application, refer to Template W-5494 for auxiliary fire latch preparation.


TEMPLATE

W-1242-e

# F-25-C-WDC Concealed Vertical Device

Concealed Vertical Rod Panic and Fire Exit Device With Metal Wrap Edge 5" Stile, Wood Door  
LHR Shown, RHR Opposite

## Metal Wrap Edge Prep (Wood Door Prep shown on pages 1 and 2)

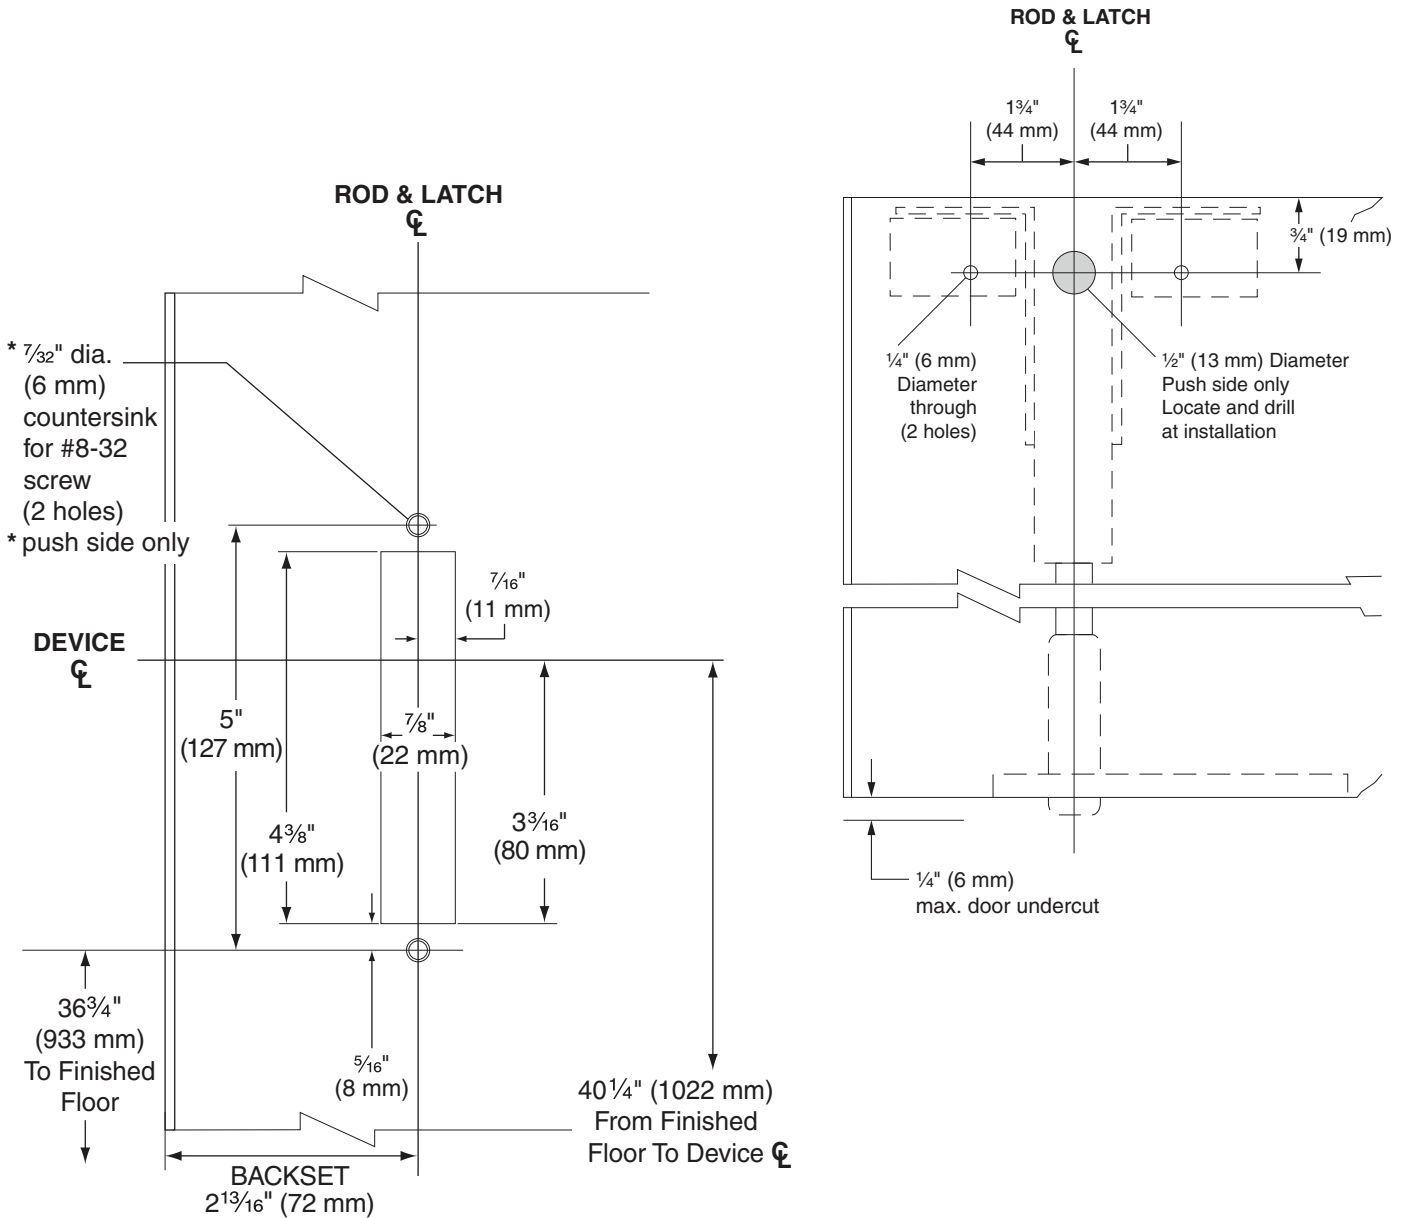

- For Less Bottom Rod (LBR) application, refer to template W-5494 for auxiliary fire latch preparation, and omit bottom rod preparation.
- For outside trim, see trim template for door preparation.
- For sexbolt preparation, refer to Template W-4014.

TEMPLATE

**W-1242-e**