


24-C Bottom Bolt Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

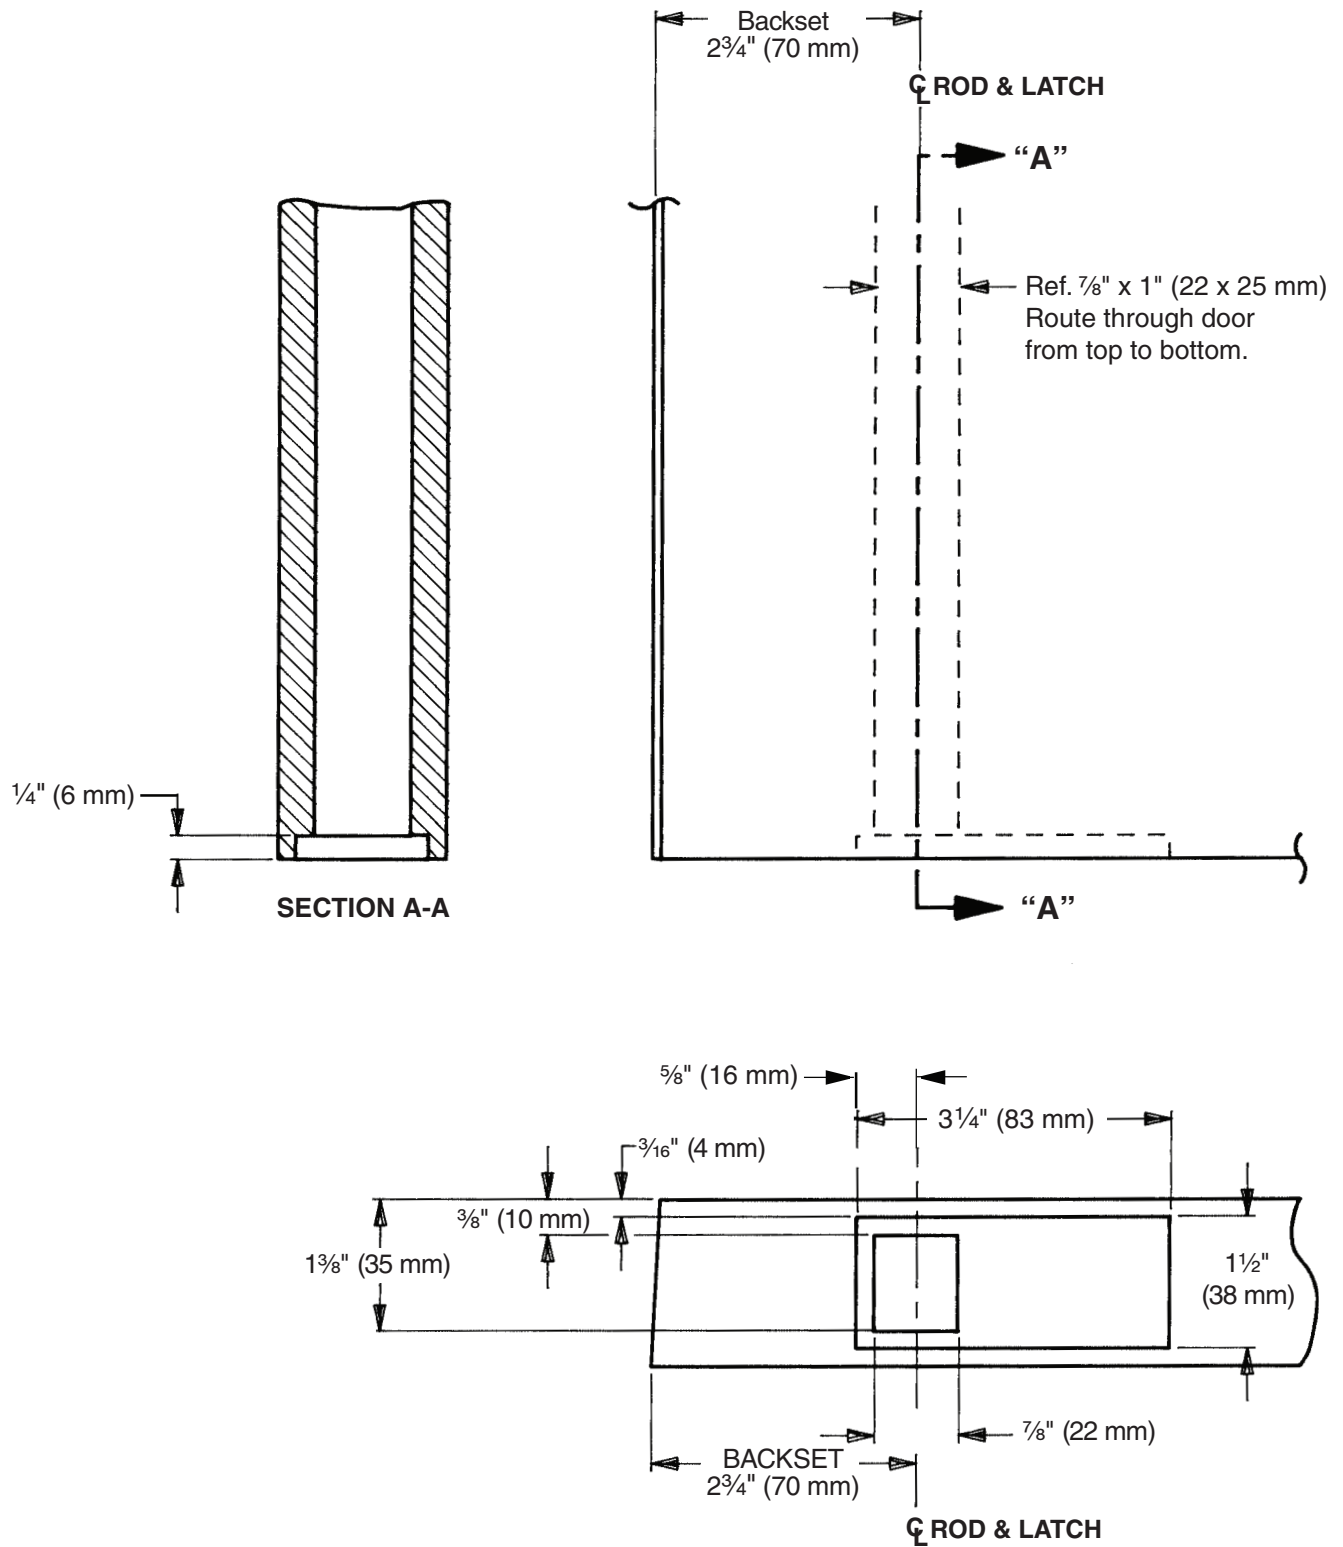

- For 24 centerslide preparation, refer to Template W-1380.
- For top latch preparation, refer to Template W-1382.
- For outside trim, see trim template for door preparation.
- For Less Bottom Rod (LBR) application omit bottom bolt preparation.

TEMPLATE
W-1383-d