
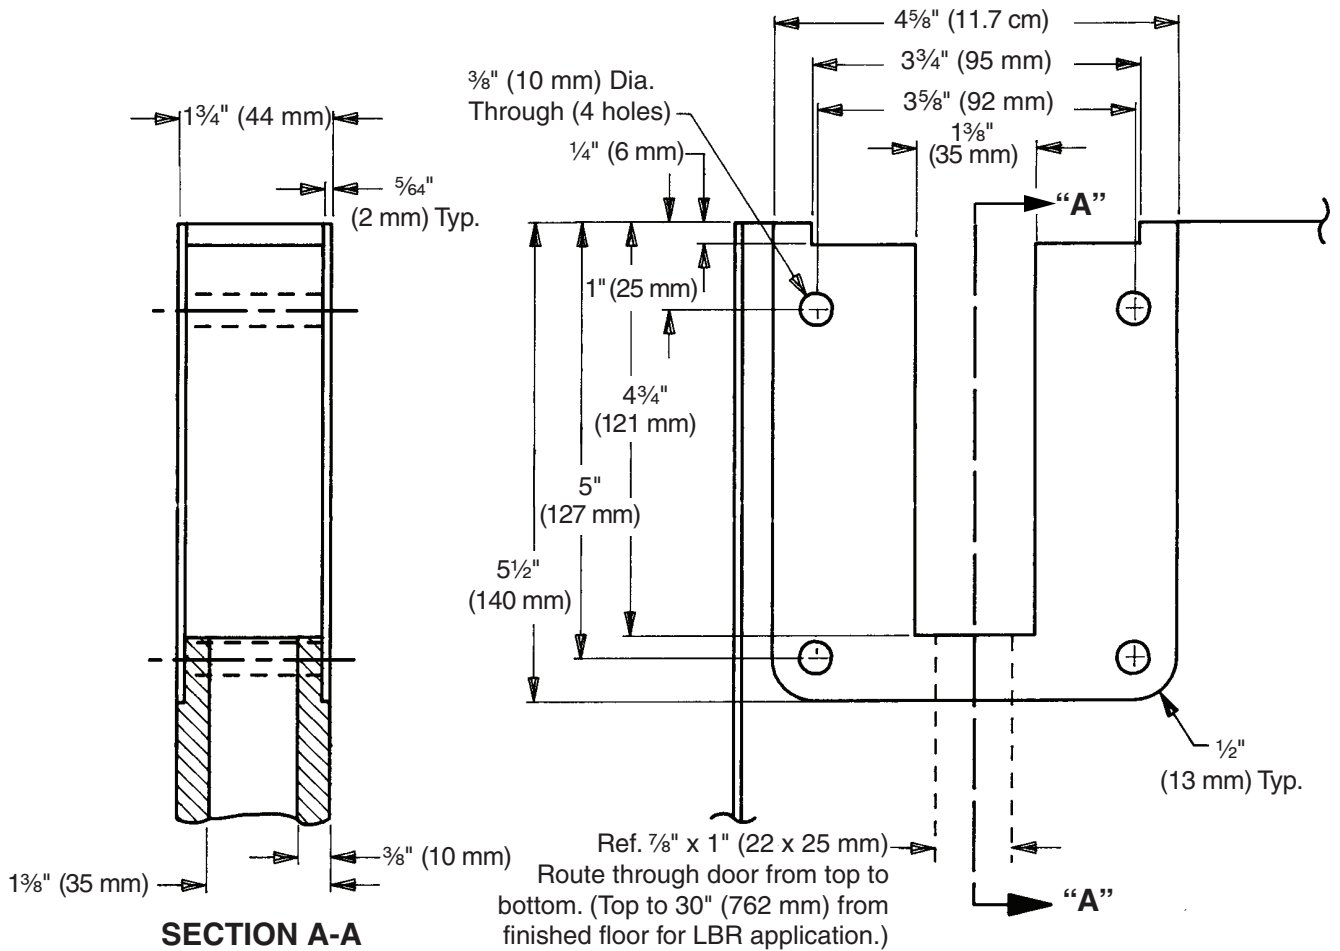


24-C Top Latch Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

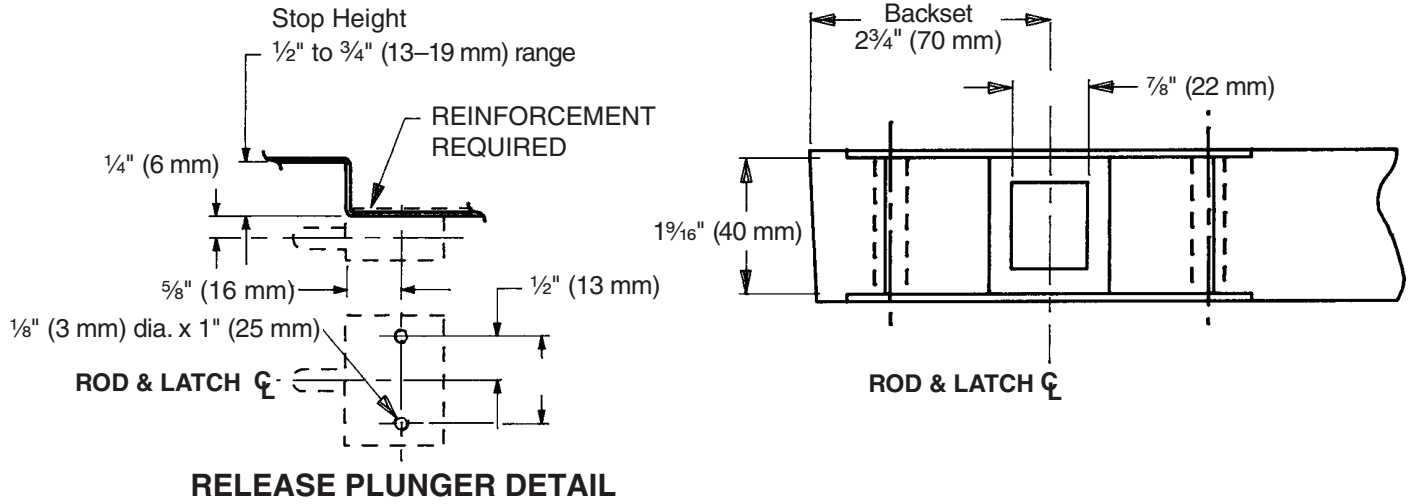

- For bottom bolt preparation, refer to Template W-1383.
- For outside trim, see trim template for door preparation.
- For 24 centerslide preparation, refer to Template W-1380.
- For Less Bottom Rod (LBR) application omit bottom bolt preparation.

TEMPLATE
W-1382-c