



25-C Bottom Bolt Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

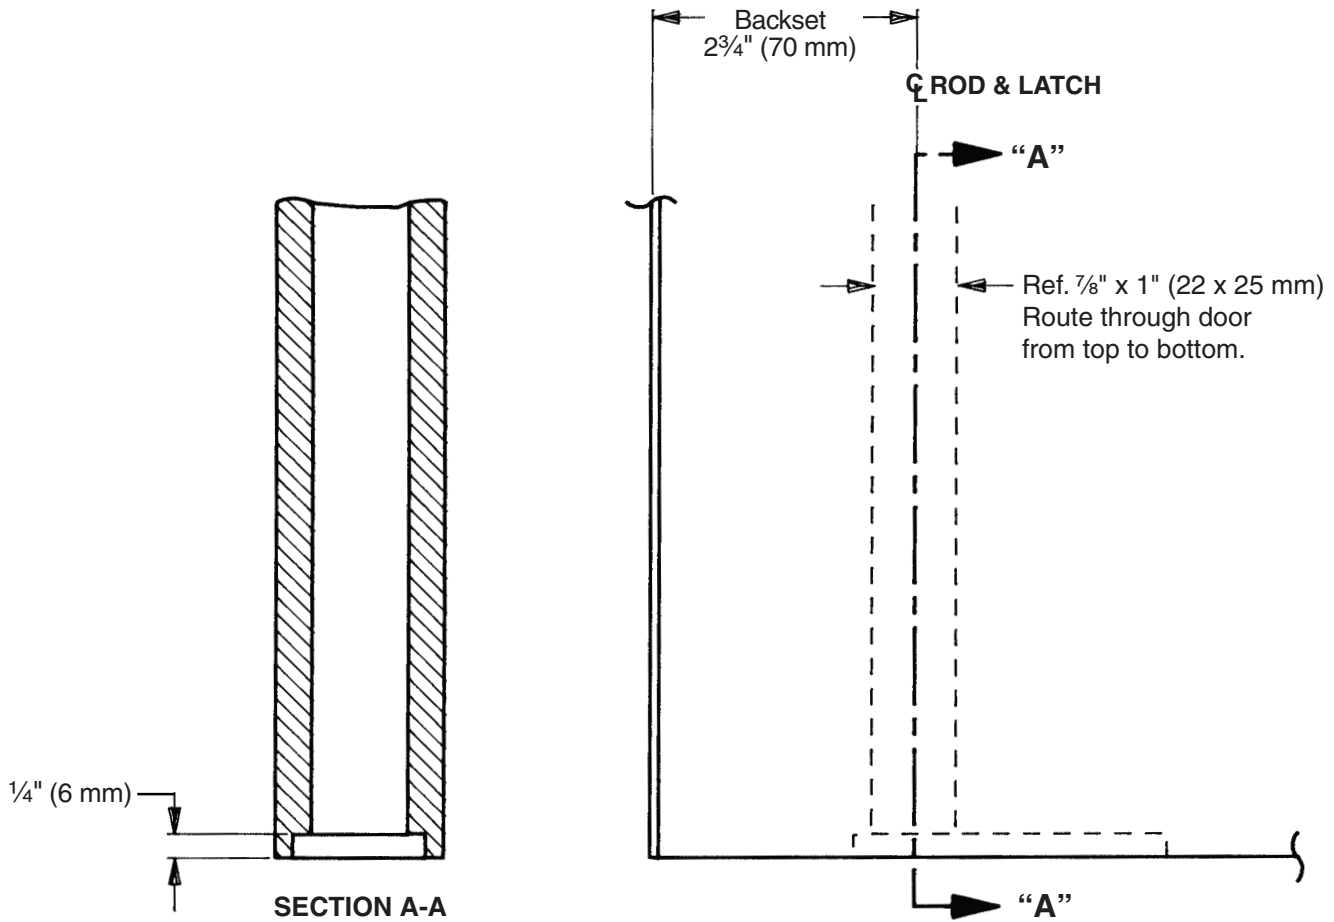

- For top latch preparation, refer to Template W-1282.
- For outside trim, see trim template for door preparation.

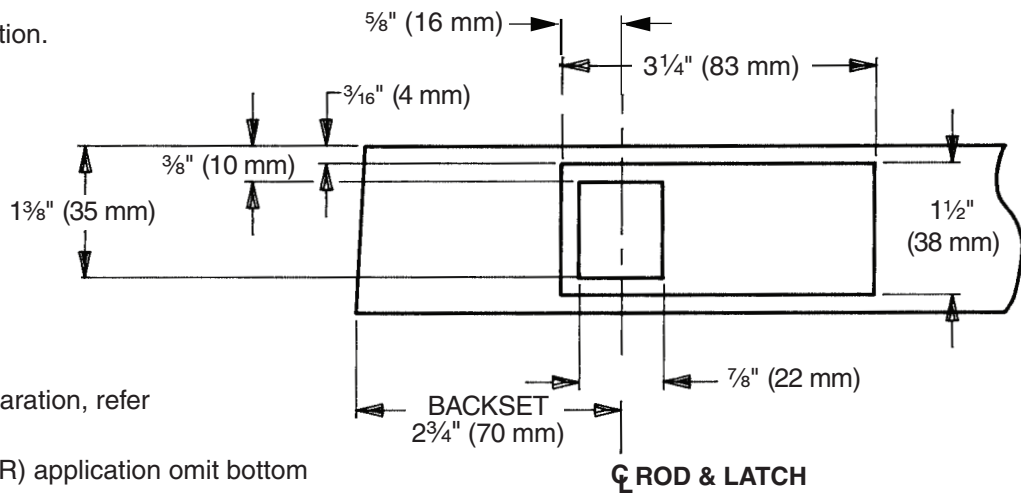

- For 25-C centerslide preparation, refer to Template W-1281.
- For Less Bottom Rod (LBR) application omit bottom bolt preparation.

TEMPLATE
W-1283-d