



25-C Top Latch Preparation

Panic Devices - Wood Door, LHR Shown, RHR Opposite

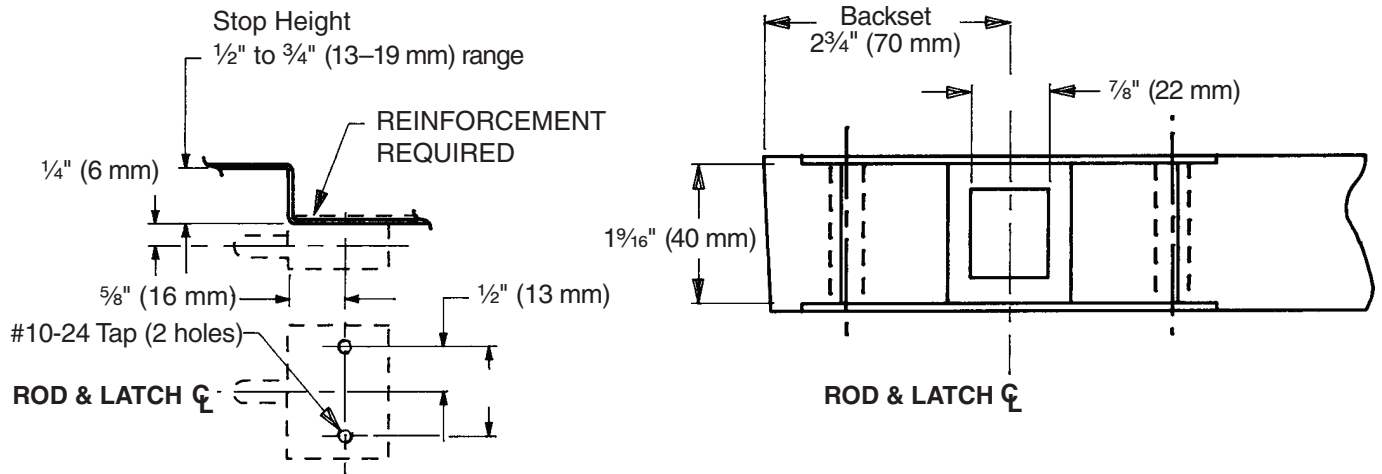

RELEASE PLUNGER DETAIL

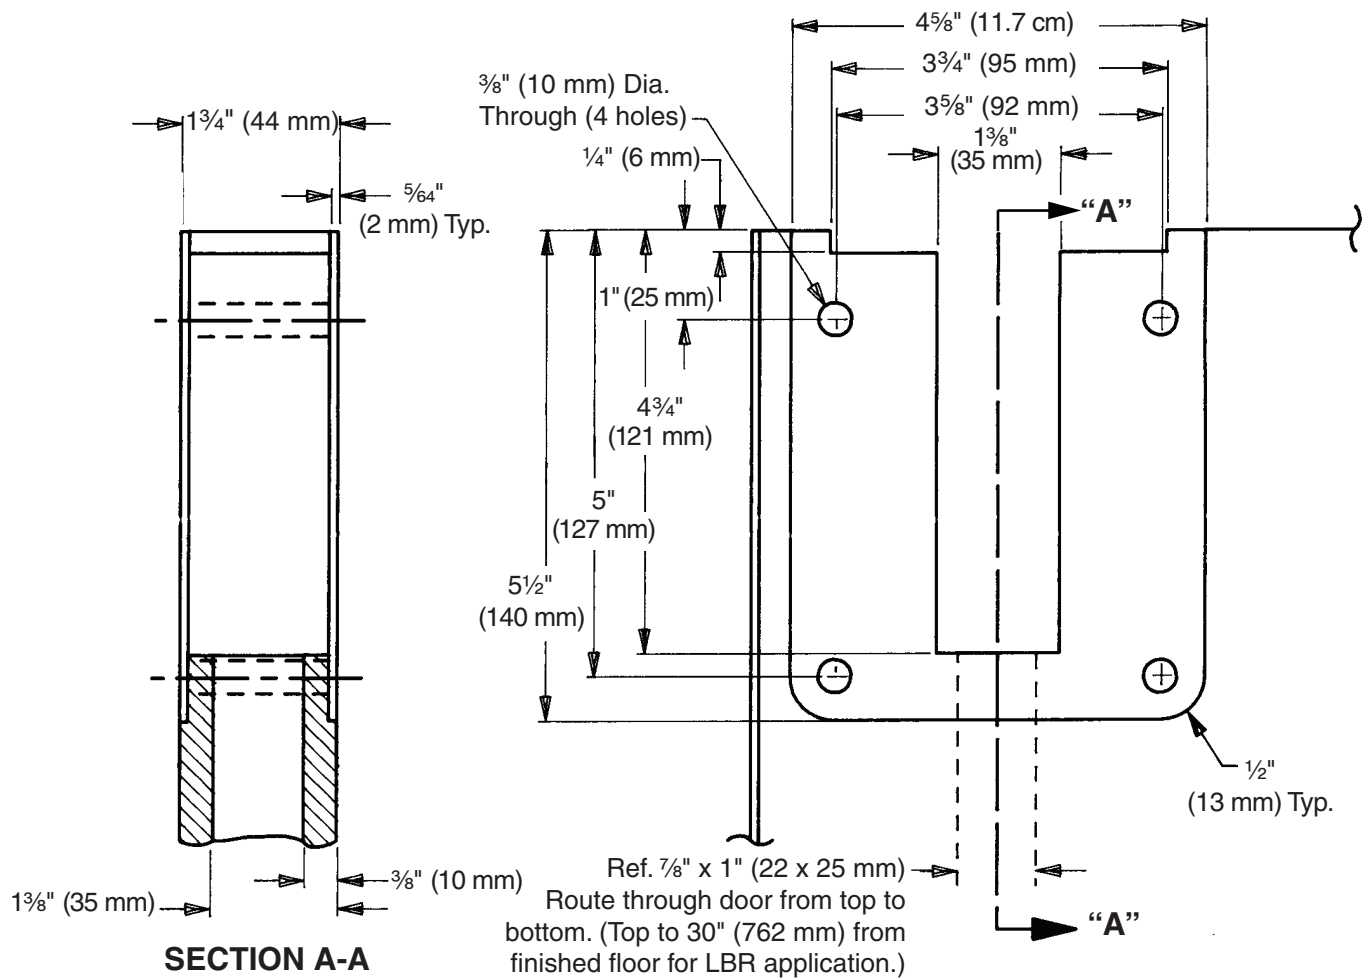

SECTION A-A

- For Less Bottom Rod (LBR) application omit bottom bolt preparation.
- For bottom bolt preparation, refer to Template W-1283.
- For outside trim, see trim template for door preparation.
- For 25-C centerslide preparation, refer to Template W-1281.

**TEMPLATE
W-1282-c**