


# (F)25-M Mortise Device

Mortise Panic and Fire Exit Devices, Wood Door, LHR Shown, RHR Opposite

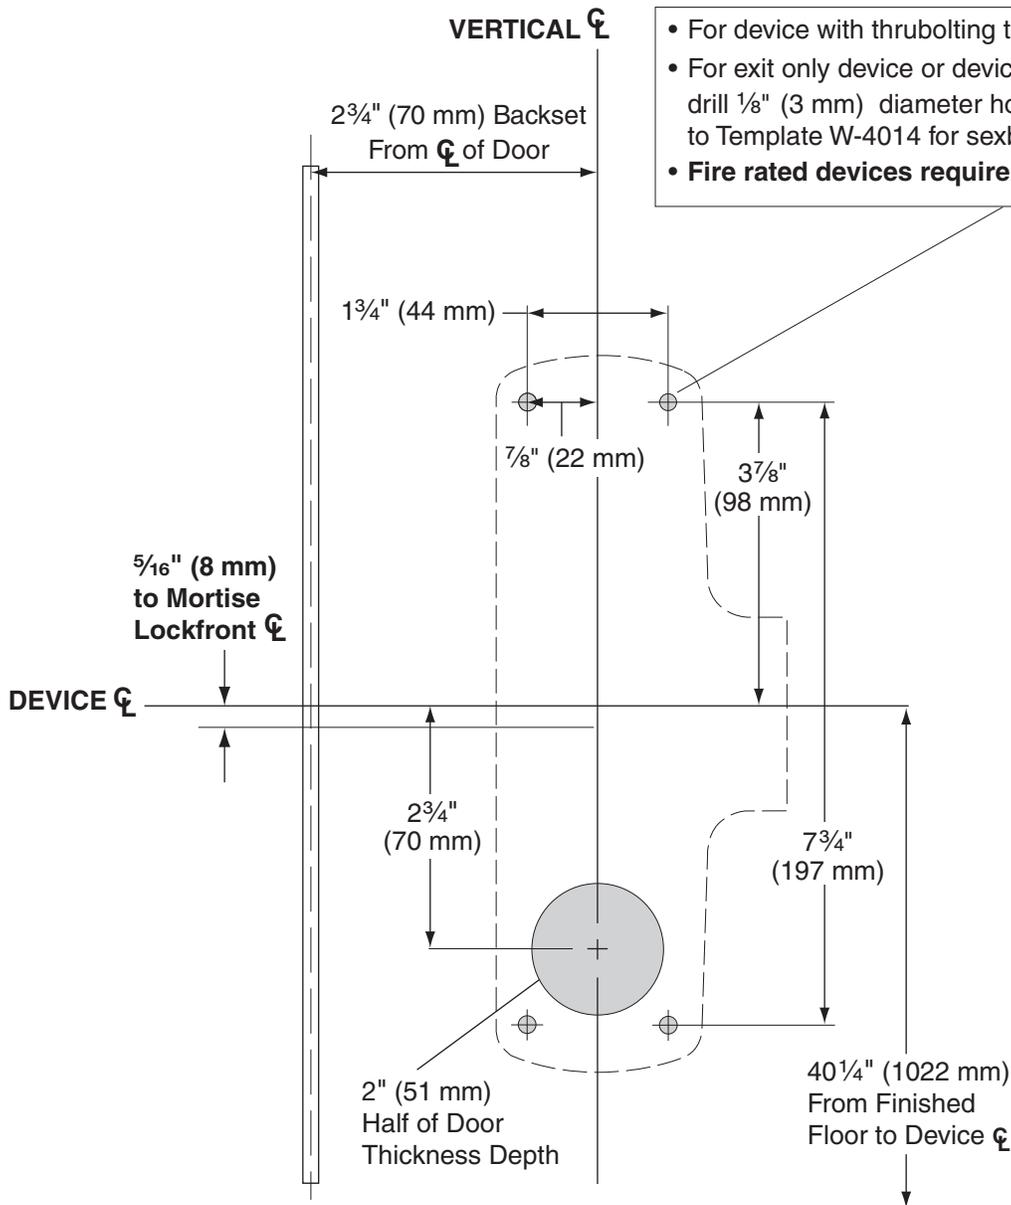

- For device with thrubolting trim, refer to trim template.
- For exit only device or device with non-thrubolting trim, drill 1/8" (3 mm) diameter hole x 1" (25 mm) deep, or refer to Template W-4014 for sexbolt preparation (4 holes).
- **Fire rated devices require sexbolts.**

- See Template W-4012 for mortise lock preparation.
- **For doors with existing Mortise Lock preparation, the Device CL is 5/16" (8mm) above the lockfront CL**
- For sexbolt preparation, refer to Template W-4014.
- For outside trim, see trim template for door preparation.

TEMPLATE  
**W-1210-a**