



(F)XX-C Concealed Bottom Bolt Preparation

Panic - Wood Door, LHR Shown, RHR Opposite

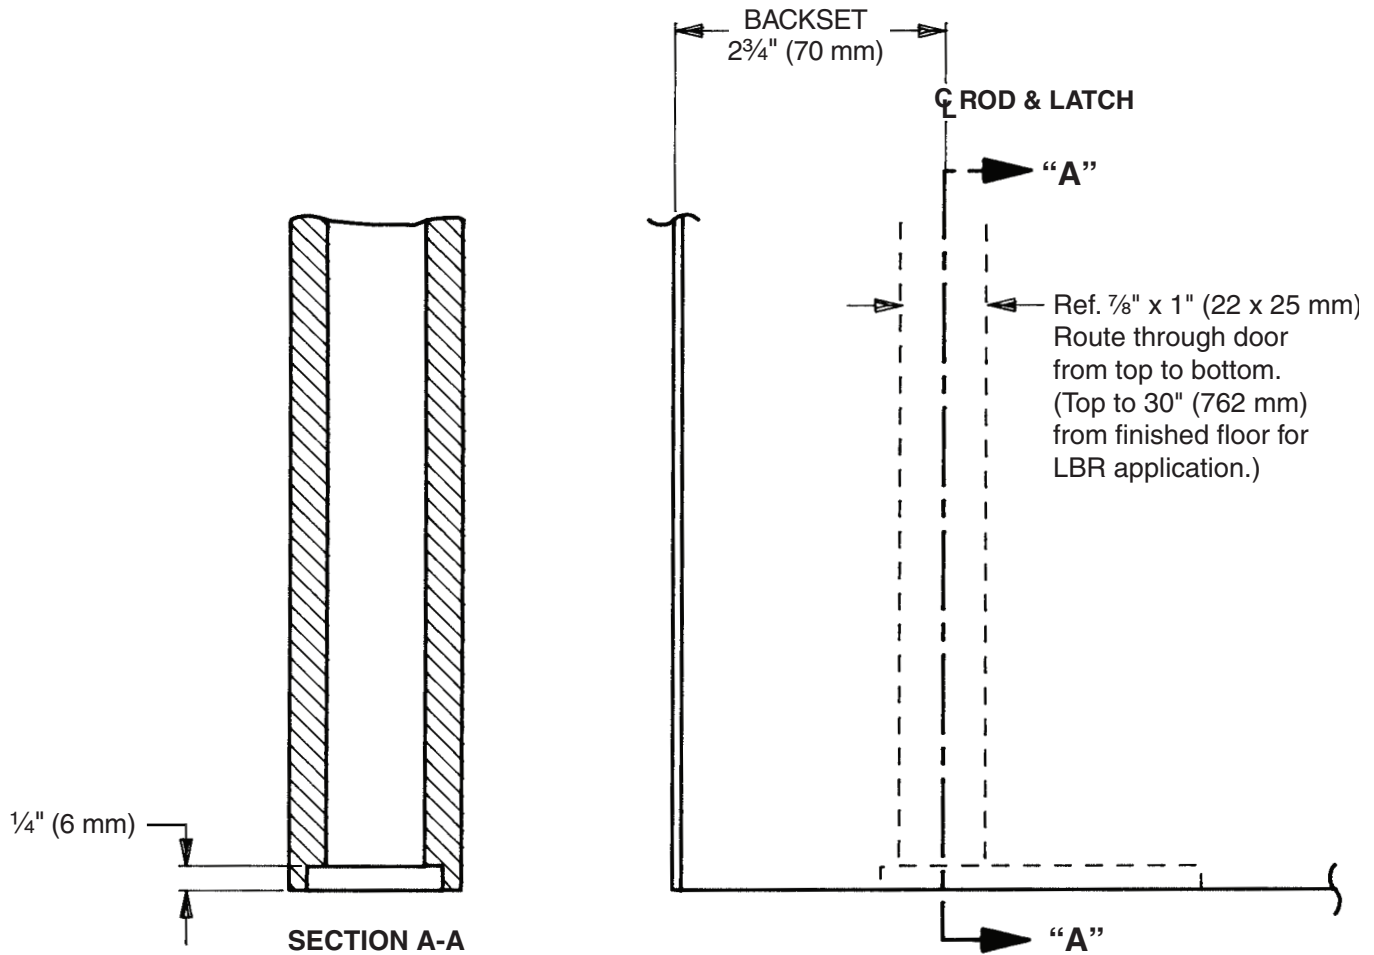

- For top latch preparation, refer to Template W-1482.
- For centerside preparation, refer to Template W-1481.

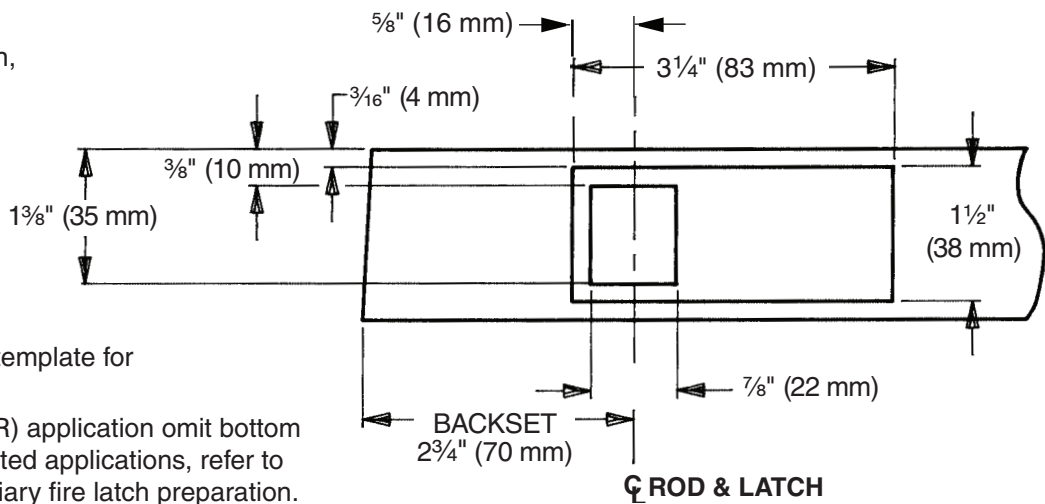

- For outside trim, see trim template for door preparation.
- For Less Bottom Rod (LBR) application omit bottom bolt preparation. On fire rated applications, refer to Template W-5494 for auxiliary fire latch preparation.

TEMPLATE
W-1483-b