


(F)XX-M Device with FSA or FSE Feature

Wood Door, LHR Shown, RHR Opposite

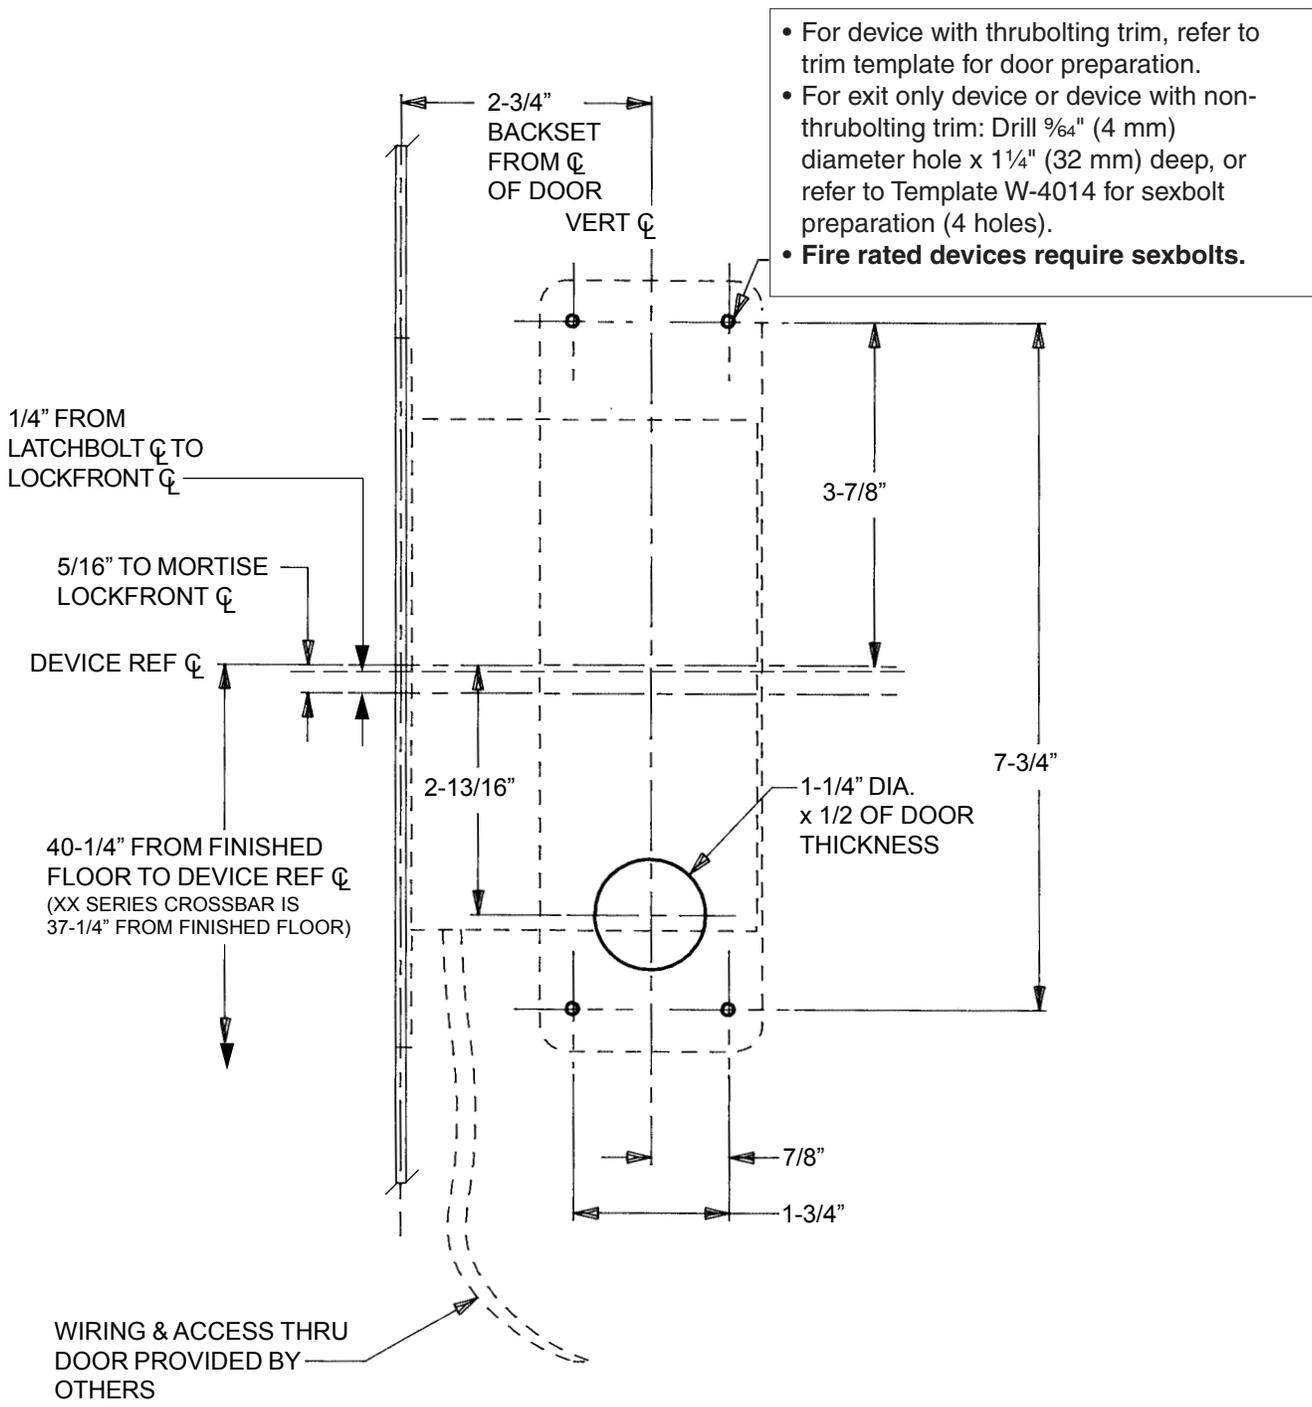

- For device with thrubolting trim, refer to trim template for door preparation.
- For exit only device or device with non-thrubolting trim: Drill 5/64" (4 mm) diameter hole x 1 1/4" (32 mm) deep, or refer to Template W-4014 for sexbolt preparation (4 holes).
- **Fire rated devices require sexbolts.**

- For mortise lock preparation, refer to Template W-4012.
- For doors with existing mortise lock preparation, the device ref C is 5/16" (8 mm) above the lockfront C.
- For outside trim, see trim template for door preparation.
- For sexbolt preparation, refer to Template W-4014.

**TEMPLATE
W-5010-a**