


Master Reinforcing Sheet

Suggested Reinforcement Plan, LHR Shown, RHR Opposite

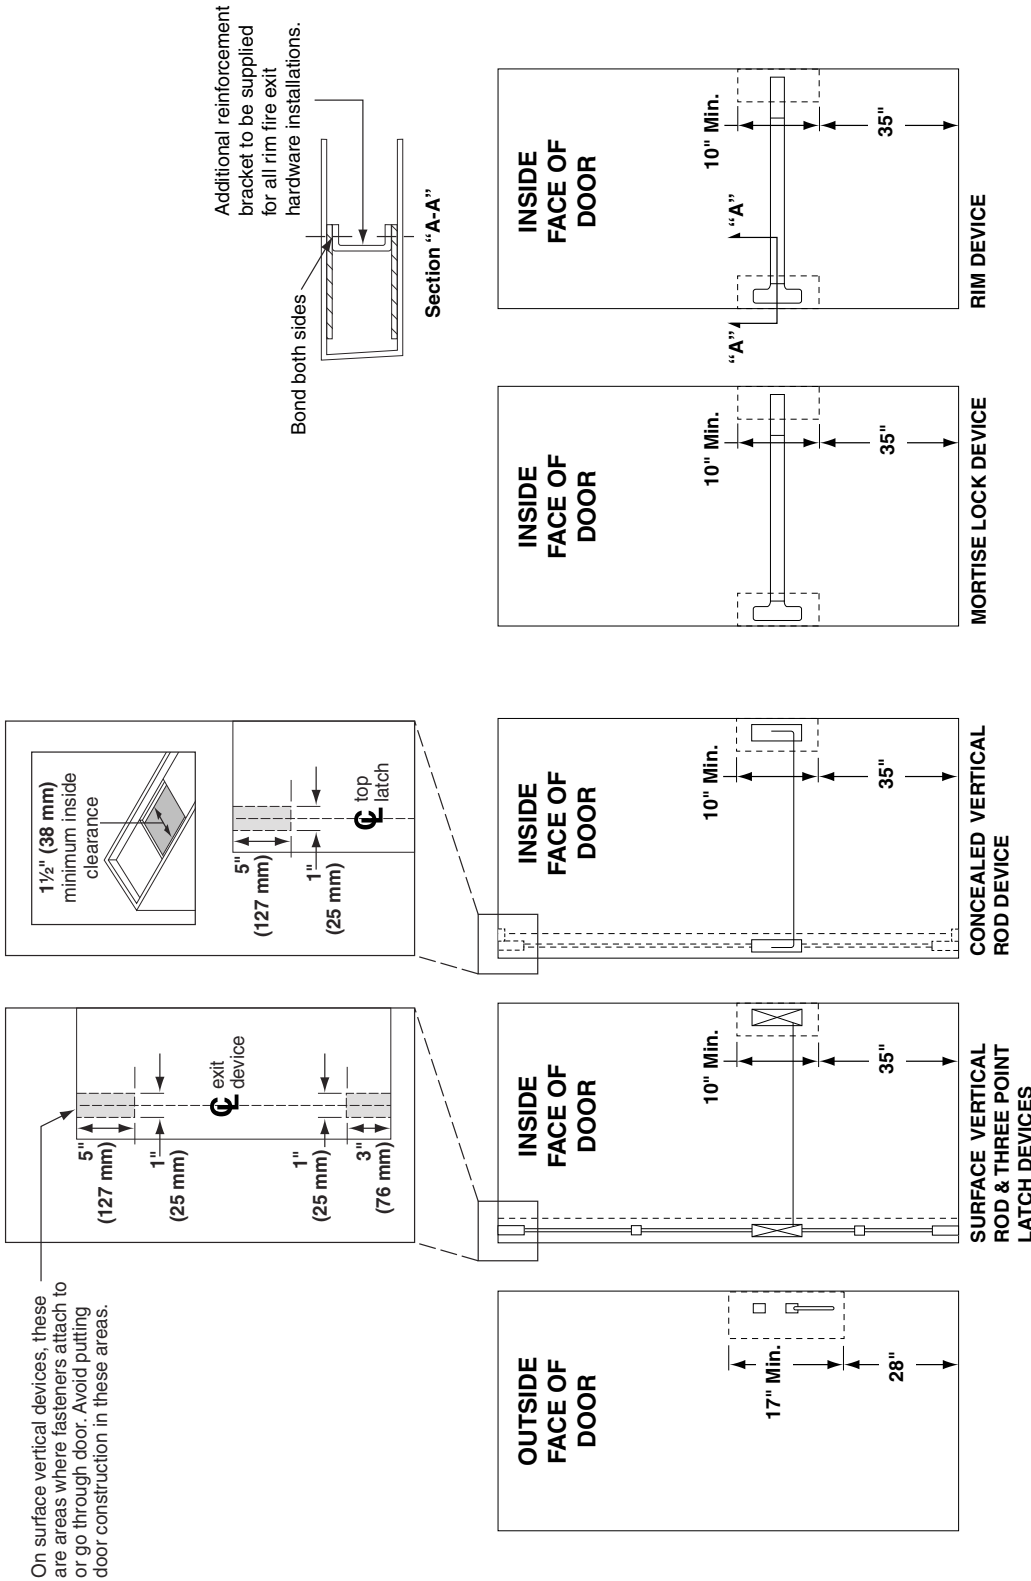

IMPORTANT NOTES:

- Choose correct hand of door.
- Reinforcements to be 4 1/2" minimum wide or full width of stile.
- Reinforcement on outside of door required only if outside trim is used.
- Reinforcement to be adequate for the drilling and tapping of machine screws.
- Refer to templates listed for additional cut-outs, tapped hole requirements, and other specific reinforcement.
- Tap holes for hinge stile mounting when applying device.
- Shields are recommended on mortise lock installations to protect the lock, device and trim from the door insulation.

TEMPLATE

T-0100-b