


Strikes
030020

Jamb Type: Wood
 Style: ASA, Deadbolt
 Standard for:
 Optional for: D100/D200-Series

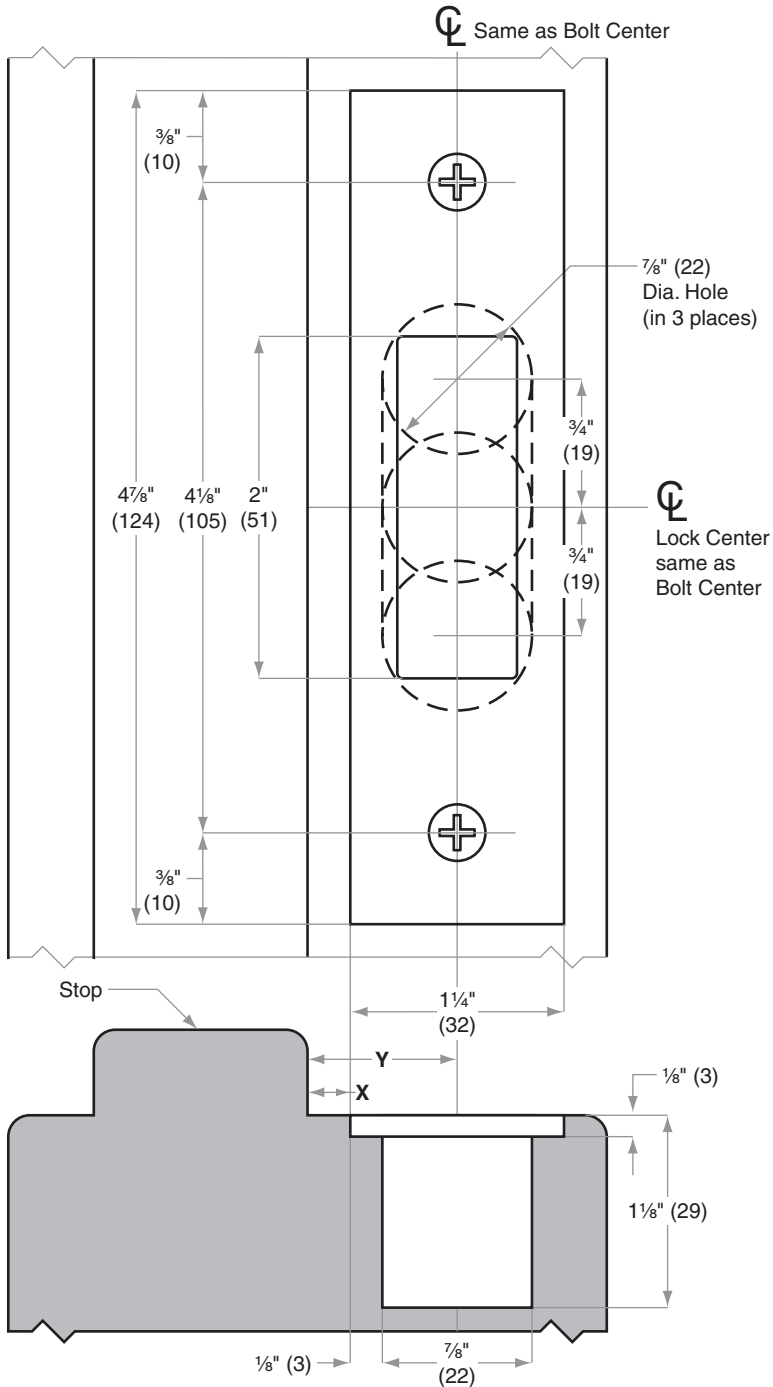

NOTE:

1. When strike/frame reinforcer is used, additional preparation is required: two Pilot Holes and 1/8" (3) deeper mortise
2. For use with 1" (25) throw deadbolt functions
3. Dimensions X and Y are variables dependent on door thickness
4. Strike location on frames must be adjusted for thickness of door silencers when used

Dimensions shown in parentheses () are in millimeters.

Door preparation template

FJ110