


XX-C Concealed Vertical Device

Conceal Vertical Rod Panic Exit Device, Metal Door, LHR Shown, RHR Opposite

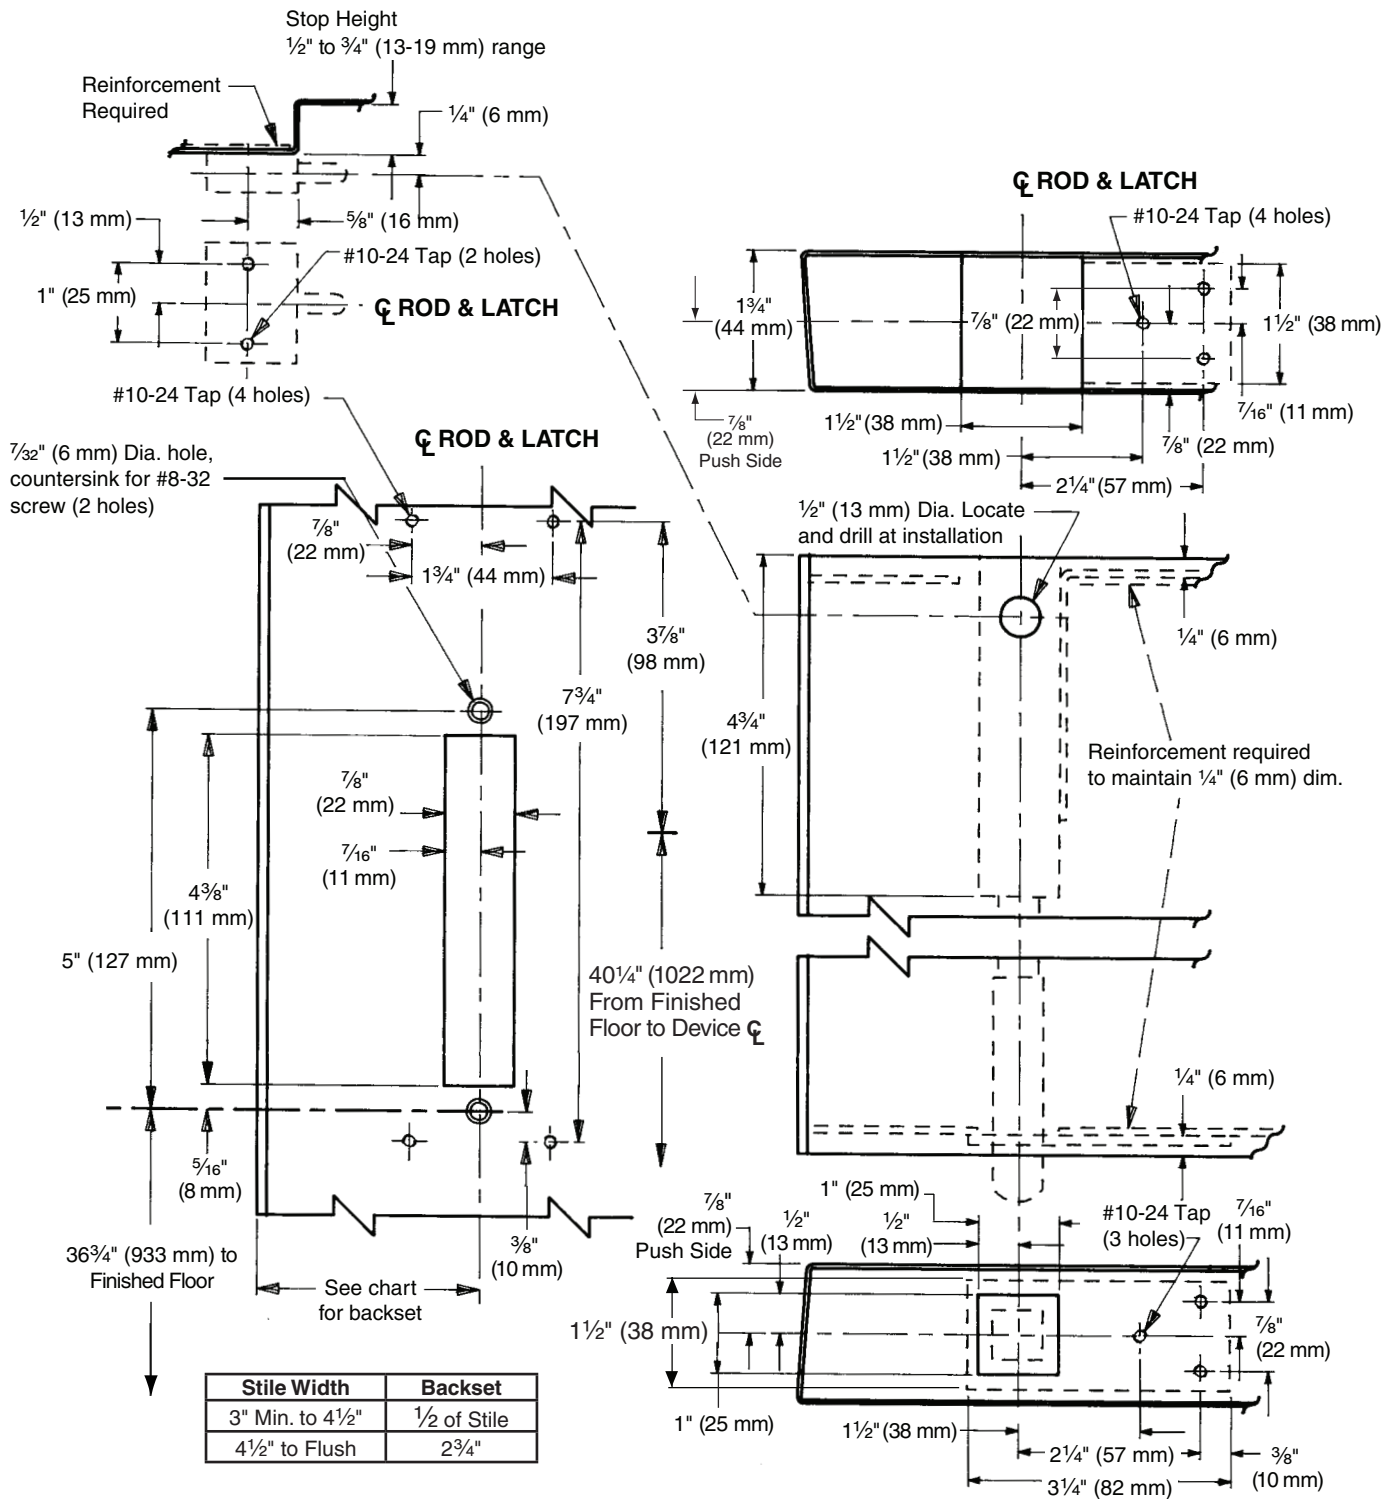

- For Less Bottom Rod (LBR) application omit bottom preparation.
- For outside trim, see trim template for door preparation.
- For sexbolt preparation, refer to Template T-4014.
- See Master Sheet #0100 for suggested reinforcing.

TEMPLATE
T-1431-c