

Strikes, Combination





Model 10-255=10-055x10-027



Jamb Type: Wood
Style: Combination
Standard for:
Optional for: H-Series | S200-Series

NOTE:

1. When strike/frame reinforcer is used, additional preparation is required:
2 Pilot Holes and $\frac{1}{8}$ " (3) deeper mortise
2. Dimensions X and Y are variables dependent on door thickness

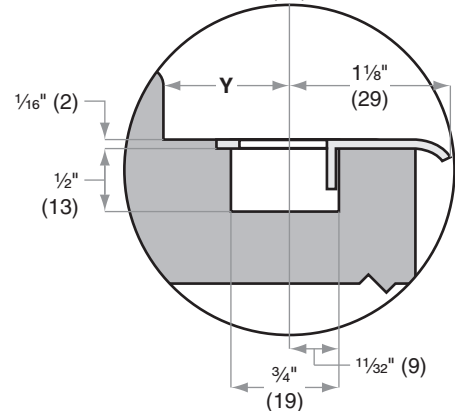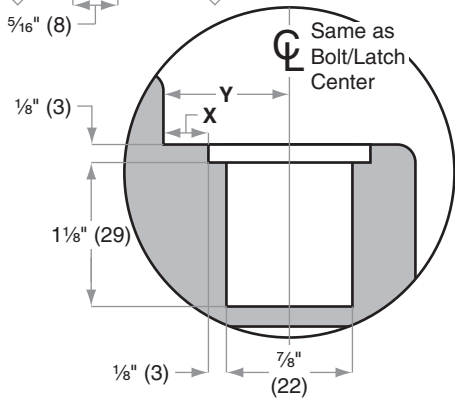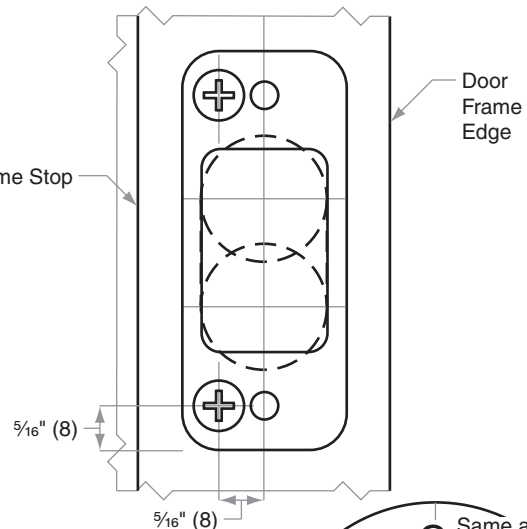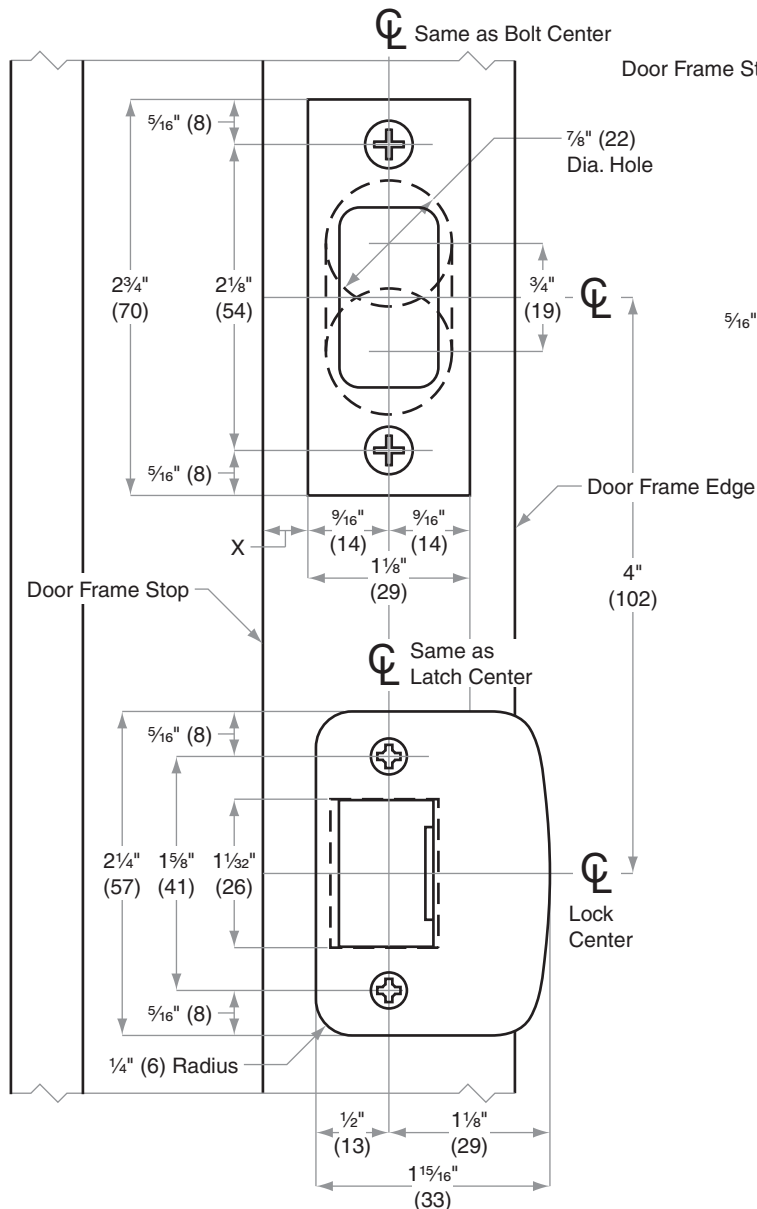

Dimensions shown in parentheses () are in millimeters.

Door preparation template

J916