


Strikes, Combination

Model 10-257=10-092x10-027

Jamb Type: Metal
 Style: Combination
 Standard for:
 Optional for: F/FA300-Series | H-Series | S200-Series

NOTE:

- 4.000" (102) For H- and S200-Series
 4.000" (102) minimum for F360/362
 5.500" (138) minimum for FA360/362
- Dimensions X, Y and Z are variables dependent on door thickness
- Strike location on frames must be adjusted for thickness of door silencers when used

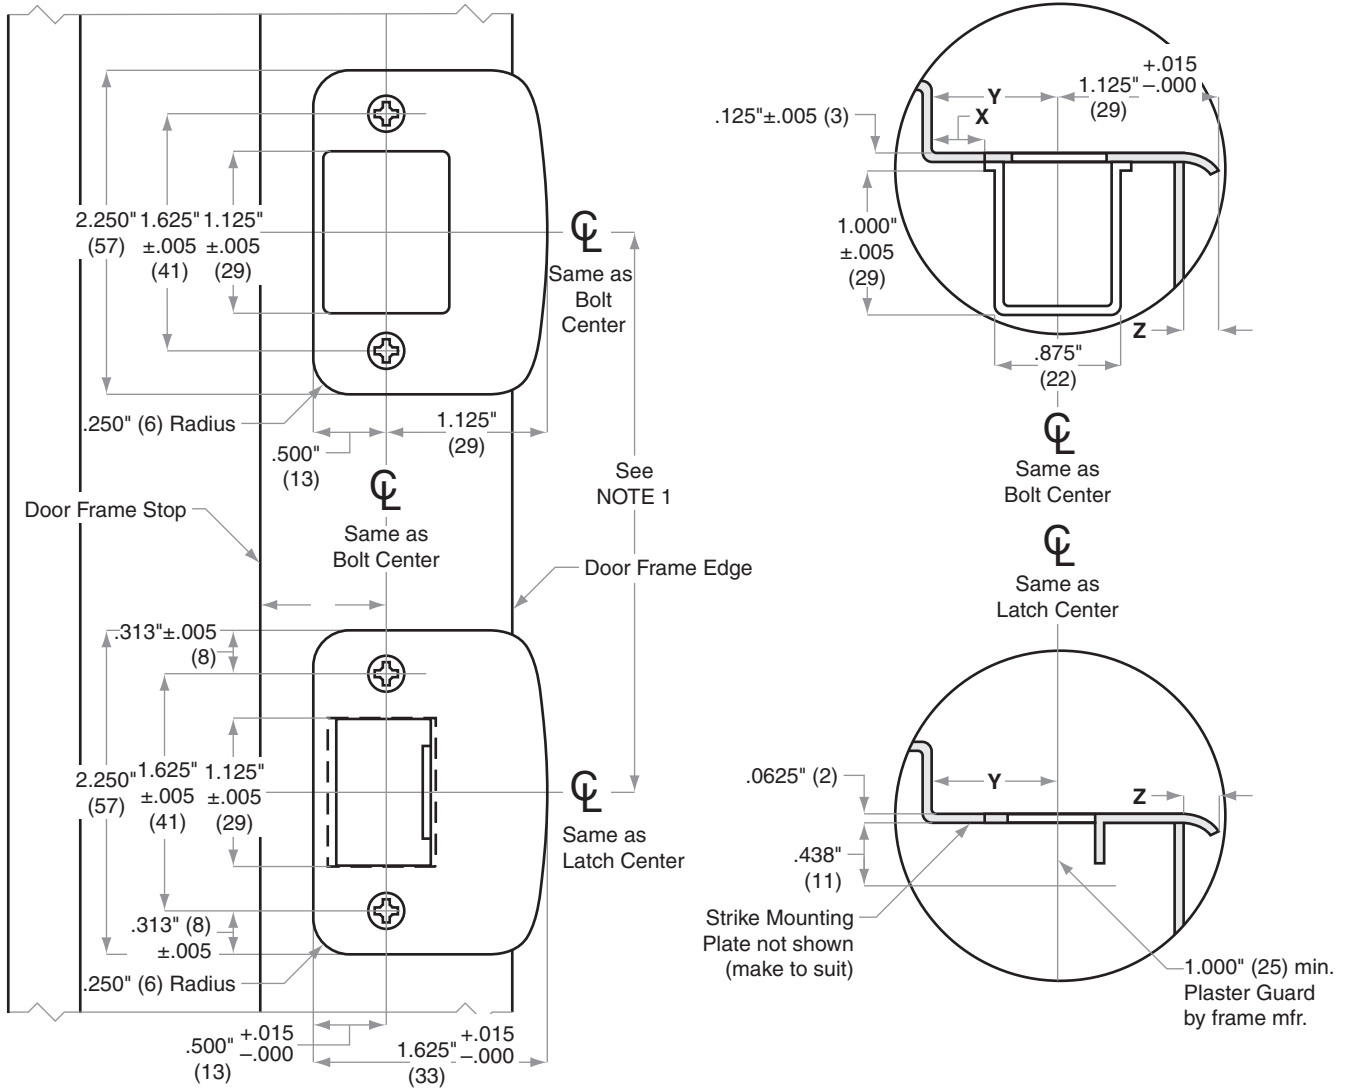

Dimensions shown in parentheses () are in millimeters.

Door preparation template