



Mark center of door thickness for 1" (25mm) or 7/8" (22mm) hole, depending on latch housing diameter.

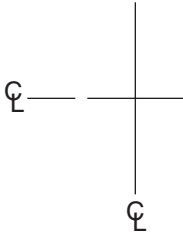

P513-753
PRINTED IN U.S.A.
© Schlage Lock Company

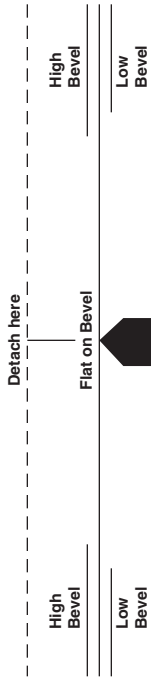

IMPORTANT
For high bevel, place outside line at edge of door.
For flat doors, place center line at edge of door.
For low bevel, place inside line at edge of door.

MARK CENTER FOR 2 3/8" (54mm) HOLE

Mark center for 5/16" (8mm) hole

Mark center for 5/16" (8mm) hole

SCHLAGE
INSTALLATION
TEMPLATE

SCHLAGE

PLANTILLA PARA INSTALACION
GARBARIT D'INSTALATION

Marque el centro para el agujero de 8mm

IMPORTANTE
Para la parte más saliente del biselado coloque la línea externa al borde de la puerta.
Para puertas planas coloque la línea central al borde de la puerta.
Para la parte menos saliente del biselado coloque la línea interna al borde de la puerta.


Marque el centro para el agujero de 54mm

**2 3/8" (60mm) MONTAJE EN RETROCESO
DISTANCE D'ENTRÉE**

Tracer le centre d'installation 54mm

IMPORTANT
Pour le biseau supérieur, placez la ligne extérieure sur le bord de la porte.
Pour les portes à surface plate, placez la ligne centrale sur le bord de la porte.
Pour le biseau inférieur, placez la ligne intérieure sur le bord de la porte.

Tracer le centre d'un trou de 8mm

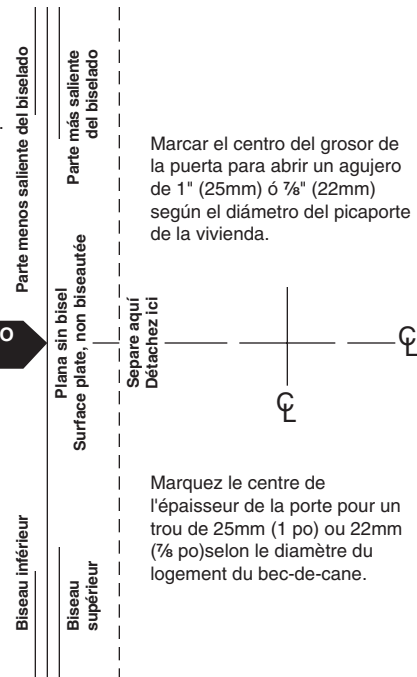

Marcar el centro del grosor de la puerta para abrir un agujero de 1" (25mm) ó 7/8" (22mm) según el diámetro del picaporte de la vivienda.

Marquez le centre de l'épaisseur de la porte pour un trou de 25mm (1 po) ou 22mm (7/8 po) selon le diamètre du logement du bec-de-cane.