


Mark center of door thickness for 1" (25mm) or 7/8" (22mm) hole, depending on latch housing diameter.

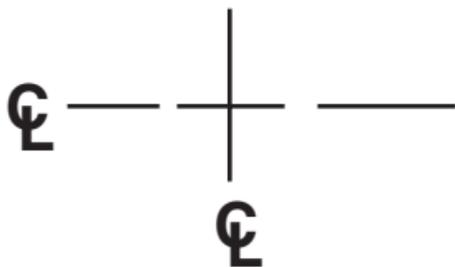

P513-740
PRINTED IN U.S.A.
© Schlage Lock
Company

Detach here

High
bevel

Low
bevel

Flat no bevel

High
bevel

Low
bevel

IMPORTANT

For high bevel, place outside line at edge of door.
For flat doors, place center line at edge of door.
For low bevel, place inside line at edge of door.

5" (127mm) BACKSET

MARK CENTER
FOR 2 1/8" (54mm) HOLES

MARK CENTER FOR
5/16" (8mm) HOLES

MARK CENTER FOR
5/16" (8mm) HOLES

SCHLAGE
INSTALLATION
TEMPLATE

SCHLAGE®

PLANTILLA PARA INSTALACION
GARBARIT D' INSTALLATION

