


Mark center of door thickness for  $\frac{7}{8}$ " (22mm) or 1" (25mm) for circular drive-in.

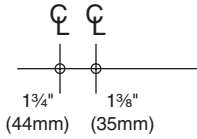

**INGERSOLL-RAND**  
ARCHITECTURAL HARDWARE


© 1996 Schlage Lock Co.  
Printed in USA 6/96  
P513-594  
B160/B162/B360/B362

## SCHLAGE® TEMPLATE


**B-Series universal backset  
adjusts for either 2 $\frac{3}{8}$ "  
or 2 $\frac{3}{4}$ " backsets.**

Important: Place template  
on high edge of door bevel.

Recommended height from  
center of deadbolt to center  
of lock is 4" (10cm)

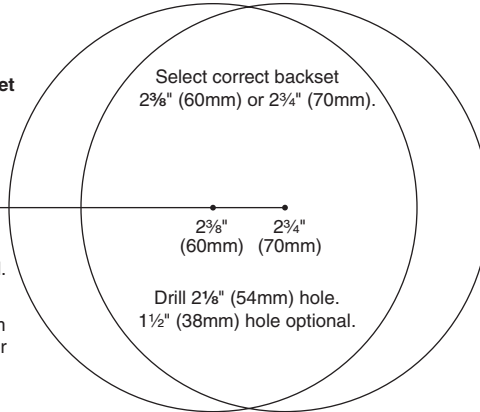

Marque el centro del espesor de la puerta para hacer un agujero de 22mm ó de 25mm si es para pasador de entrada circular.




Tracez le point central de l'épaisseur de la porte. Pour trou de 22mm ou 25mm pour unité circulaire à fixation rapide.

## SCHLAGE® Plantilla

Importante: Coloque la plantilla sobre el borde alto del bisel de la puerta. La distancia recomendada entre el centro del cerrojo y el centro de la cerradura es de 10cm.

### Gabarit

Important: Placez le gabarit sur le côté de l'arête supérieure d'une porte à chanfrein. La hauteur recommandée du milieu du pêne dormant jusqu'au milieu de la serrure est de 10cm..

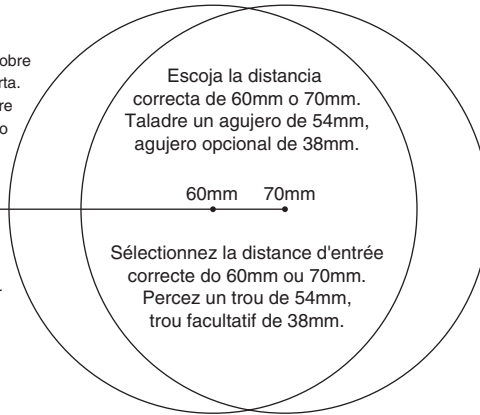

Fold on door edge.

Doble sobre el borde de la puerta. A plier sur l'arête de la porte.