




L/LV/LM/LMV-Series

Model L0170

Door Type: Metal, flat or beveled
Trim: Rose



IMPORTANT! Suitable reinforcement required for metal door installation

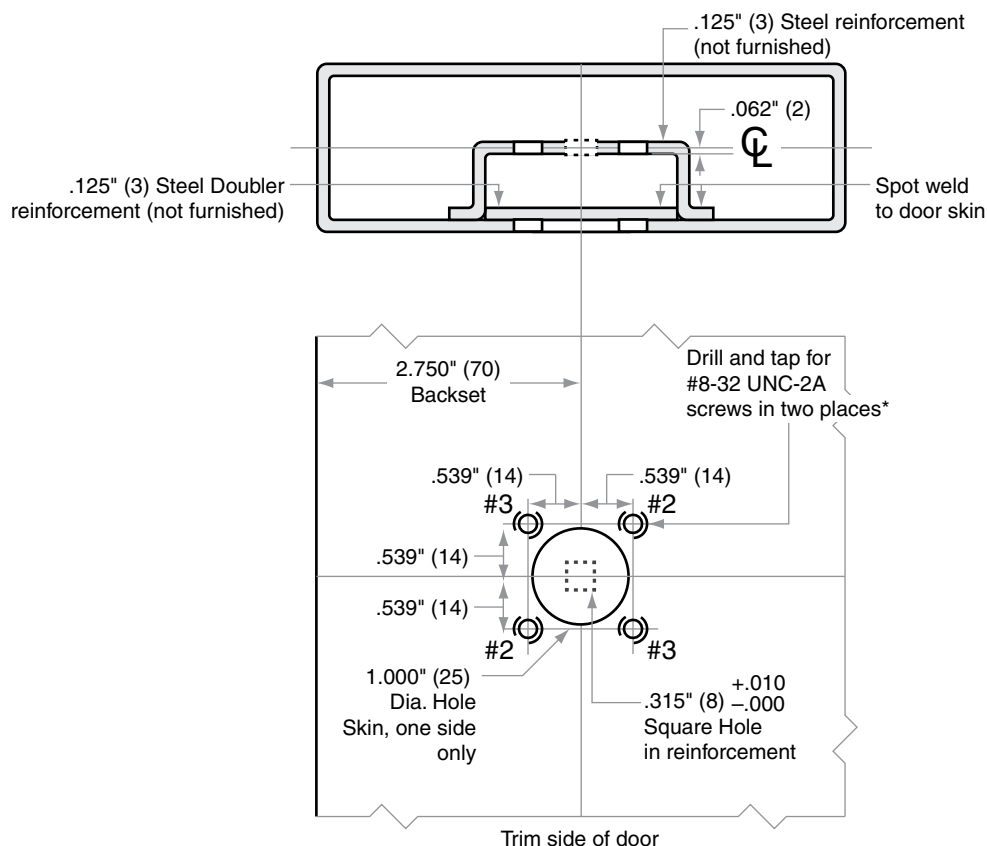

*** Drill and tap two holes at locations #2 for outside RH/RHR or inside LH/LHR doors or
Drill and tap two holes at locations #3 for outside LH/LHR or inside RH/RHR doors**

Dimensions shown in parentheses () are in millimeters.

© 2025 Allegion
L781 Rev. 04/25
www.allegion.com/us

DRAWING IS NOT TO SCALE!
Customer service: 877-671-7011
We can help you find the correct guide for your product and application!

Door preparation template

L781