




1 Mark vertical center of door thickness.

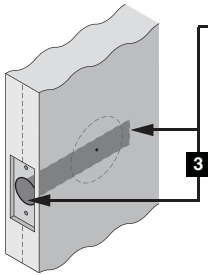

High Edge
Low Edge
Flat (No Bevel)
FOLD ON DOOR EDGE
High Edge
Low Edge




2 Mark door backset.




3 Drill 1" (25 mm) hole on vertical center, 4 1/8" (105 mm) deep.

4 Drill 2 1/8" (54 mm) hole through the door.

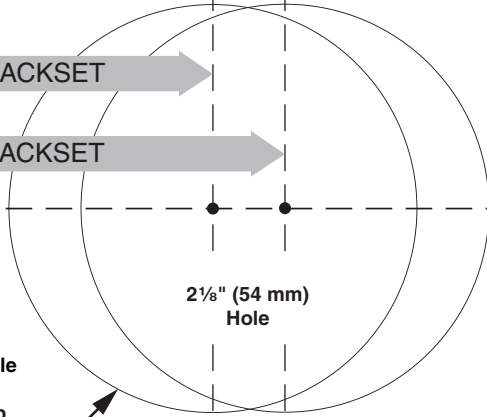

P516-770

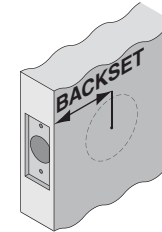

Rotate template for left-handed door.





© 2014 Allegion
Printed in U.S.A.
P516-770 Rev. 03/14-a

Customer Service
1-877-671-7011 www.allegion.com/us




LT-Series
Plantilla
Gabarit

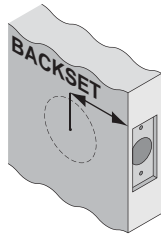



Gire la plantilla hacia la
mano derecha de la puerta
Faites tourner le gabarit pour
une porte dont les charnières
sont positionnées à gauche

Servicio al cliente Service à la clientèle
1-877-671-7011 www.allegion.com/us

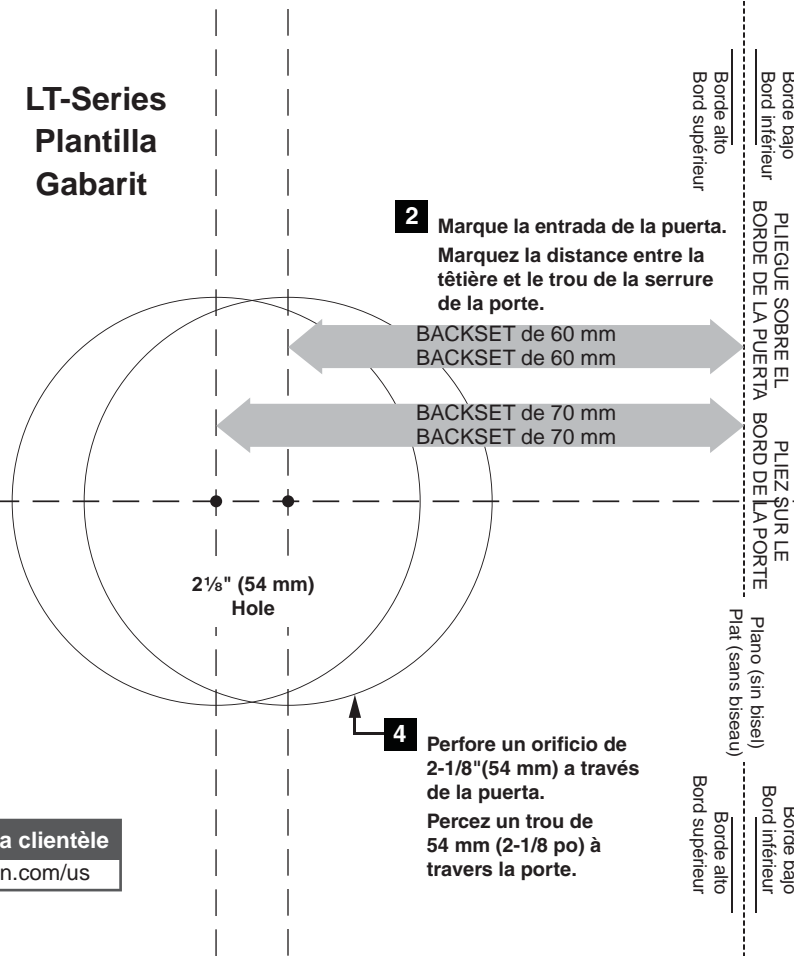

1 Marque el centro vertical del
grosor de la puerta.
Marquez le centre de l'axe vertical
de l'épaisseur de la porte.



3 Perfore un orificio
de 1" (25 mm) sobre
el centro vertical
de 4-1/8" (105 mm)
de profundidad.
Percez un trou de
25 mm (1 po) et
d'une profondeur
de 105 mm (4-1/8 po)
au centre de
l'axe vertical.=

