

10.250"

8.125"

0.750"

0.875"

SIDE A



To edge of template

0.750"

PLACE AGAINST INSIDE DOOR AND FRAME

Ø 0.500"
(Ø 1/2")
[Ø 13mm]

Drill for #10 sheet metal or #10-24 machine screw.
(8X)

0.500"

0.500"

1.123"

1.627"

5.500"

SIDE A

Place this line along bottom edge of frame face.

RH installation: Place this edge of template along inner frame edge, opposite hinges.

M450TJ - Top Jamb Application

DO NOT DRILL THRU DOOR

DO NOT DRILL THRU DOOR

Metal: 11/32" inside only - 1/2" outside only
Wood: 1/2" through

0.550"

0.550"



© 2014 Allegion
Printed in China
44487361 Rev. 01/14-c

**THIS PAGE IS FOR DIMENSIONAL VERIFICATION ONLY
NOT TO BE USED FOR TEMPLATE PRINTING BY SUPPLIER**

3.500"

3.500"

4.250"

10.250"

0.750"

8.125"

0.875"

**THIS PAGE IS FOR DIMENSIONAL VERIFICATION ONLY
NOT TO BE USED FOR TEMPLATE PRINTING BY SUPPLIER**


0.750" To edge of template



SIDE B

PLACE AGAINST INSIDE DOOR AND FRAME

Ø 0.500"
(Ø 1/2")
[Ø 13mm]

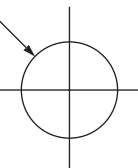

Drill for #10 sheet metal or #10-24 machine screw.
(8X)

0.500"

0.500"

1.123"

5.500"

LH installation: Place this edge of template
along inner frame edge, opposite hinges.

Place this line along bottom edge of frame face

SIDE B

M450TJ - Top Jamb Application

**DO NOT DRILL
THRU DOOR**

**DO NOT DRILL
THRU DOOR**

Metal: 11/32" inside only - 1/2" outside only
Wood: 1/2" through

Customer Service

1-877-671-7011

www.allegion.com/us

1.627"

0.550"

0.550"

3.500"

3.500"

4.250"