

DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 5/8"	2 3/16"*
SINGLE DOOR	3 5/8"	2 3/16"

NOTE: BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED.

* USE 2 3/4" BACKSET FOR WOOD FIRE DOORS

7/8" DIA THRU
1/2" DIA FOR NL-OP


CL DEVICE

39 13/16"
TO FINISHED
FLOOR

REMOVE GLASS STOP
HEAD OR BEAD IN
AREA OF DEVICE IF
REQUIRED

NOTE: MOUNTING HOLES TO BE PREPARED
AT INSTALLATION ON DOOR.

FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED,
SEE ADDITIONAL TRIM TEMPLATE.

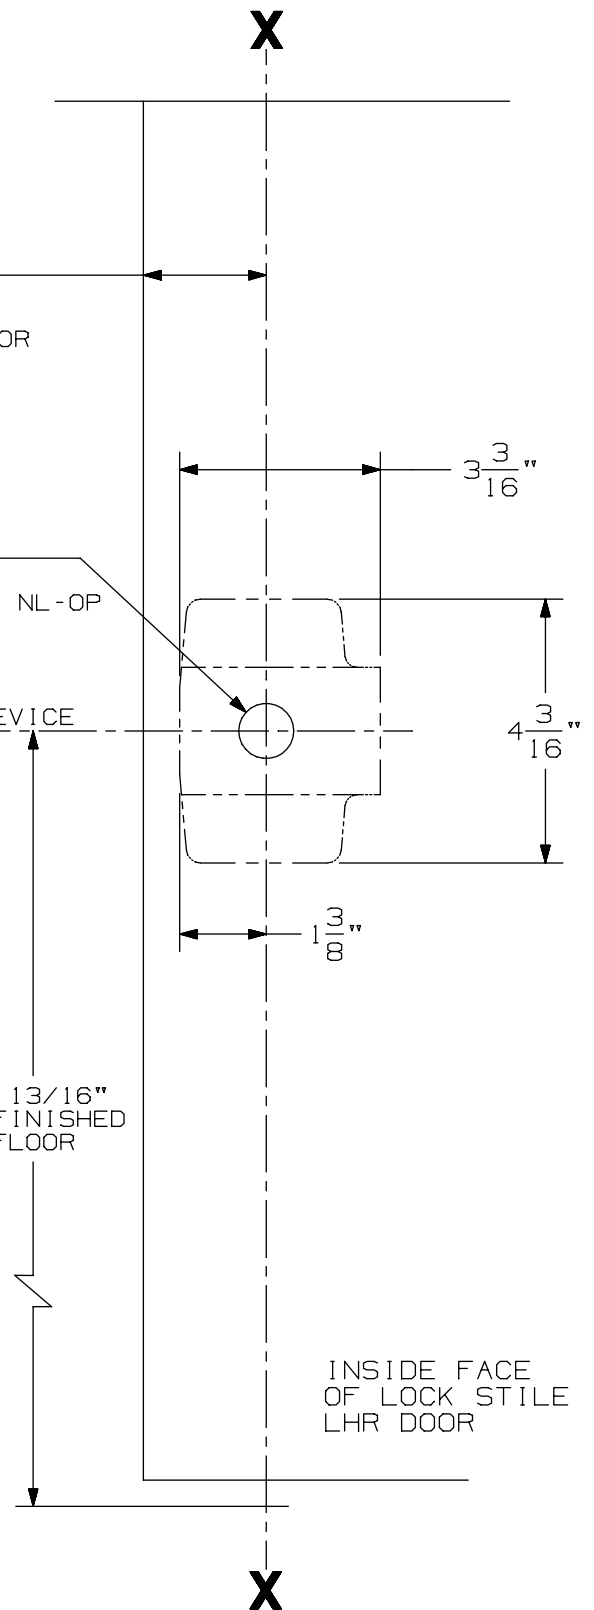

INSIDE FACE
OF LOCK STILE
LHR DOOR

LHR SHOWN
RHR OPPOSITE

2227 & 2227-F K, L, & TP Series
Vertical Rod Device (Wood Door)

VON DUPRIN[®]

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE
NUMBER:

W10013_a

DATE:
05-28-13