


NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

230 NL Trim

TEMPLATE NUMBER: 20037_a

DATE: 05-23-13

VON DUPRIN®

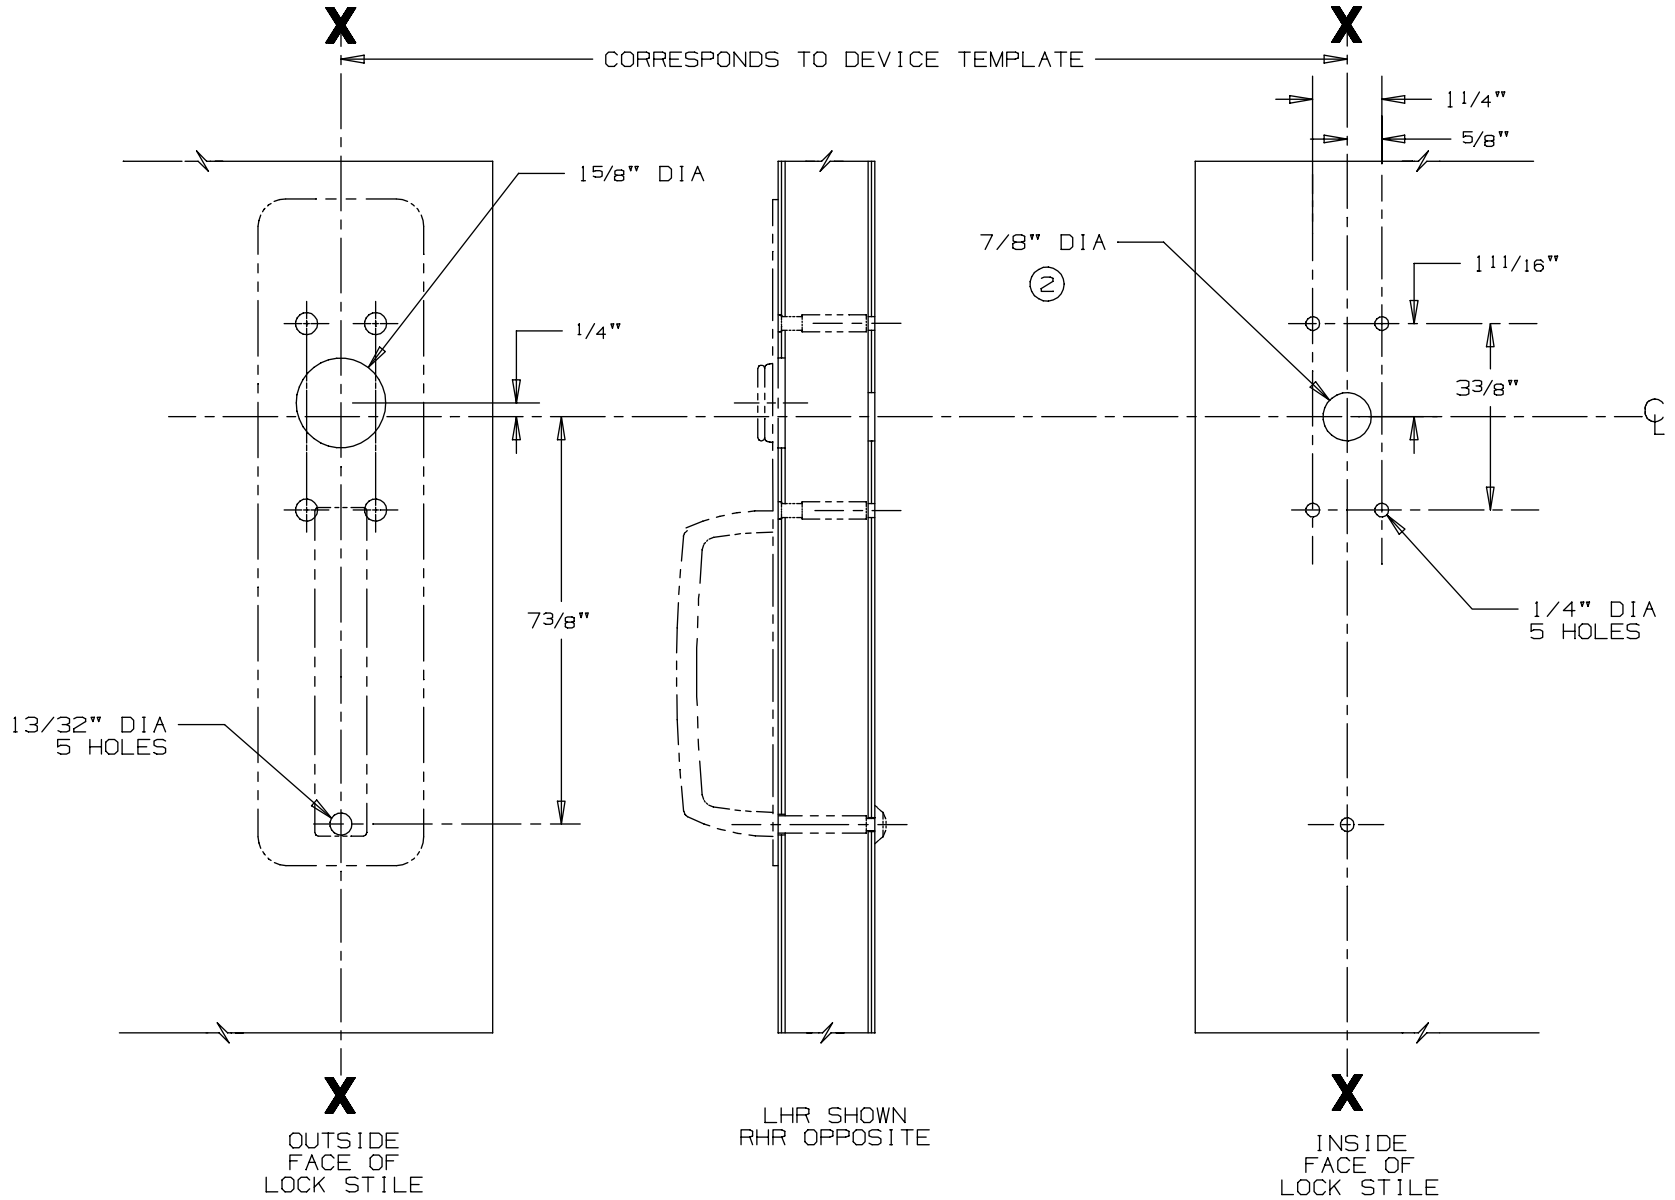

NOTE: IT IS RECOMMENDED THE MOUNTING HOLES BE PREPARED IN THE FIELD

FOR CUTOUTS ON INSIDE FACE OF DOOR SEE DEVICE TEMPLATE.