


DEVICE APPLICATION SCHEDULE		
INSTALLATION	MIN. STILE	BACKSET
TWO VERT. ROD DEVICES	3 11/16"	2 3/16" *
VERT. ROD & MORTISE DEVICE	SEE TEMP. W10305	2 3/4"
SINGLE DOOR	3 11/16"	2 3/16"

NOTES:

- *BACKSET MAY VARY WHEN USED WITH COORDINATOR DEPENDING ON TYPE USED. USE 2 3/4" BACKSET FOR WOOD FIRE DOORS.
- REMOVE GLASS STOP OR BEAD IN AREA OF DEVICE IF REQUIRED UNLESS GBK IS USED.
- MOUNTING HOLES TO BE PREPARED AT INSTALLATION ON DOOR.
- FOR OUTSIDE TRIM PREPARATION, WHEN REQUIRED, SEE ADDITIONAL TRIM TEMPLATE.

LHR APPLICATION SHOWN,
RHR APPLICATION OPPOSITE

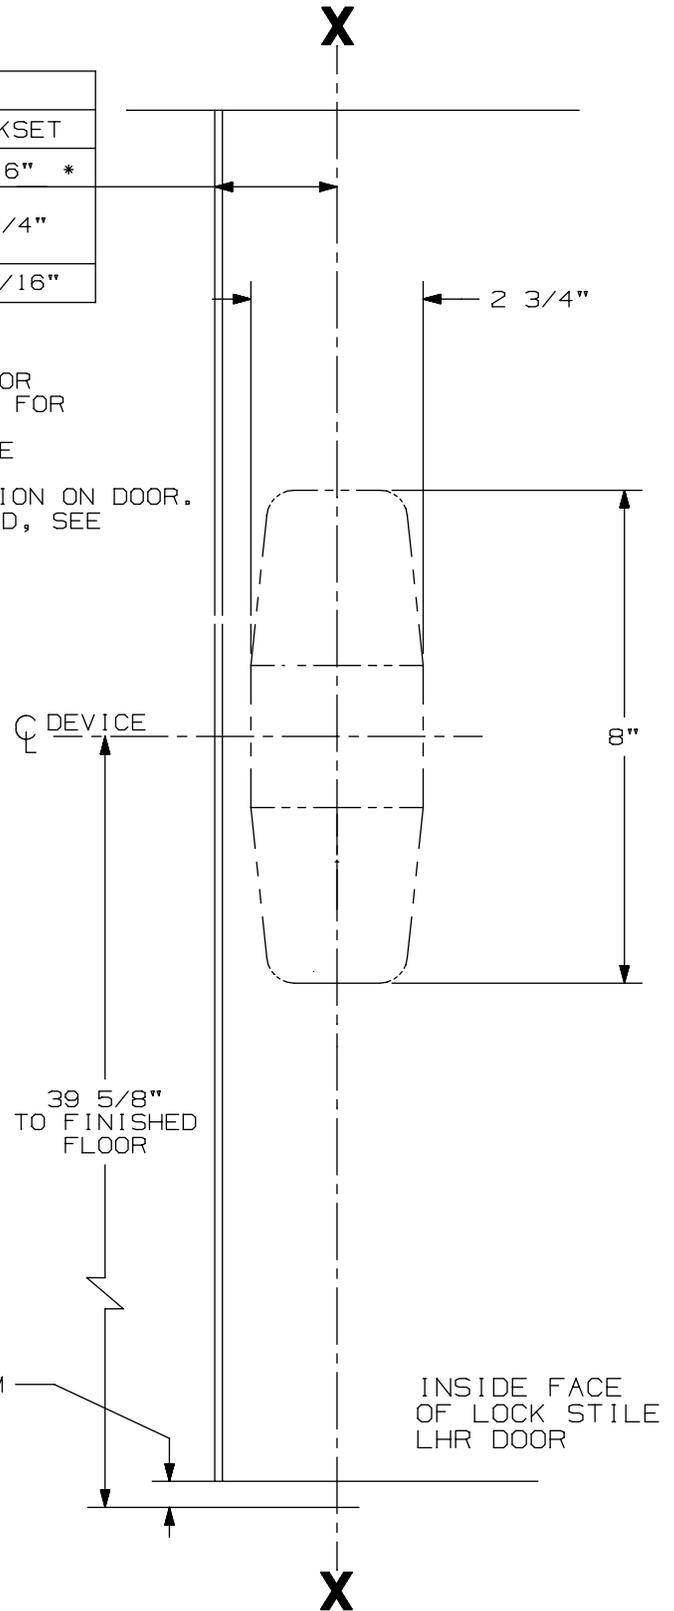

9827/9927 & 9827-F/9927-F TL
Series Vertical Rod Device (Wood Door)

VON DUPRIN®

NOTES: SEE MASTER SHEET #10001 FOR SUGGESTED REINFORCING

TEMPLATE
NUMBER:

W10306_a

DATE:
03-17-2016