


Inside face of lock stile, LHR door (RHR opposite)

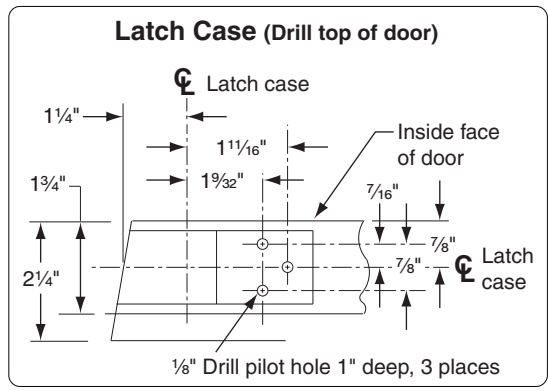

- Mounting holes to be prepared at installation of door
- Trim or control application may require additional preparation, see trim or control direction sheet
- Door edging should be installed after device installation

This product is Obsolete and has been replaced by the 98/9950WDC-LBL

98/9949WDC-F-LBL
WOOD DOOR APPLICATION
CONCEALED VERTICAL DEVICE

OBSOLETE

TEMPLATE NUMBER: 24886525_a

DATE: 9-17-14