


# 88G2, 88G4, 88G8, X500G, X625G, X750G, X875G & X1000G Low Profile Lites

For Variable Door and/or Glass Thickness

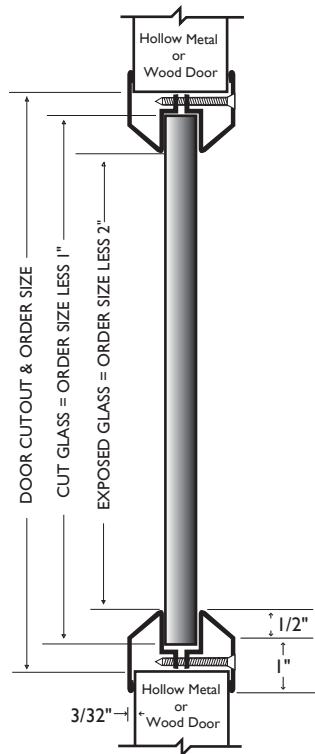

Installation Instructions



## Installation Instructions

1. Cut out door in accordance with door manufacturer's listing procedure. Steel fire-rated doors do NOT require an opening reinforcing channel or reinforcing clips.
  2. Install glass & glazing material (sold separately), into lite kit.
  3. Position outer frame in-door cut-out.
  4. Position inner frame and insert start all screws before fully tightening.
  5. Tighten screws using a crisscross pattern. Use caution when using power screw-driving equipment to avoid stripping the material.
- ① **FIELD PAINTING:** For best results, scuff with a Scotch-brite pad prior to painting.

## Customer Service

1-877-671-7011

us.allegion.com



© Allegion 2016  
111371 Rev. 9/16-a