


Mark center of door thickness for 1" (25mm) hole

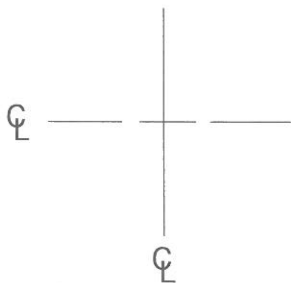

## INSTALLATION TEMPLATE

Detach here



NOTE  
Do not make the holes  
for locks without outside  
through-bolt type

**2 3/4" (70mm) BACKSET**

**2 3/8" (60mm) BACKSET**

**MARK CENTER  
FOR 2 1/8" (54mm) HOLE**

IMPORTANT  
For high bevel, place  
outside line at edge of door.  
For flat doors, place center  
line at edge of door.  
For low bevel, place inside  
line at edge of door.

