


Mark center of door  
thickness for 1" (25mm) hole

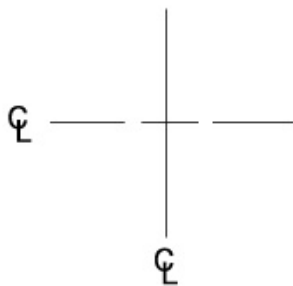

**INSTALLATION  
TEMPLATE**

Detach here



**NOTE**  
Do not make the holes  
for locks without outside  
through-bolt type

**2 3/4" (70mm) BACKSET**

**2 3/8" (60mm) BACKSET**

**MARK CENTER  
FOR 2 1/8" (54mm) HOLE**

Mark center for  
5/16" (8mm) hole

Notch for  
metal door only

2 3/4"

5/32"

5/32"

Mark center for  
5/16" (8mm) hole

**IMPORTANT**  
For high bevel, place  
outside line at edge of door.  
For flat doors, place center  
line at edge of door.  
For low bevel, place inside  
line at edge of door.