


TEMPLATE (Pull Plate with Thumbpiece)

FOR RHR DOOR

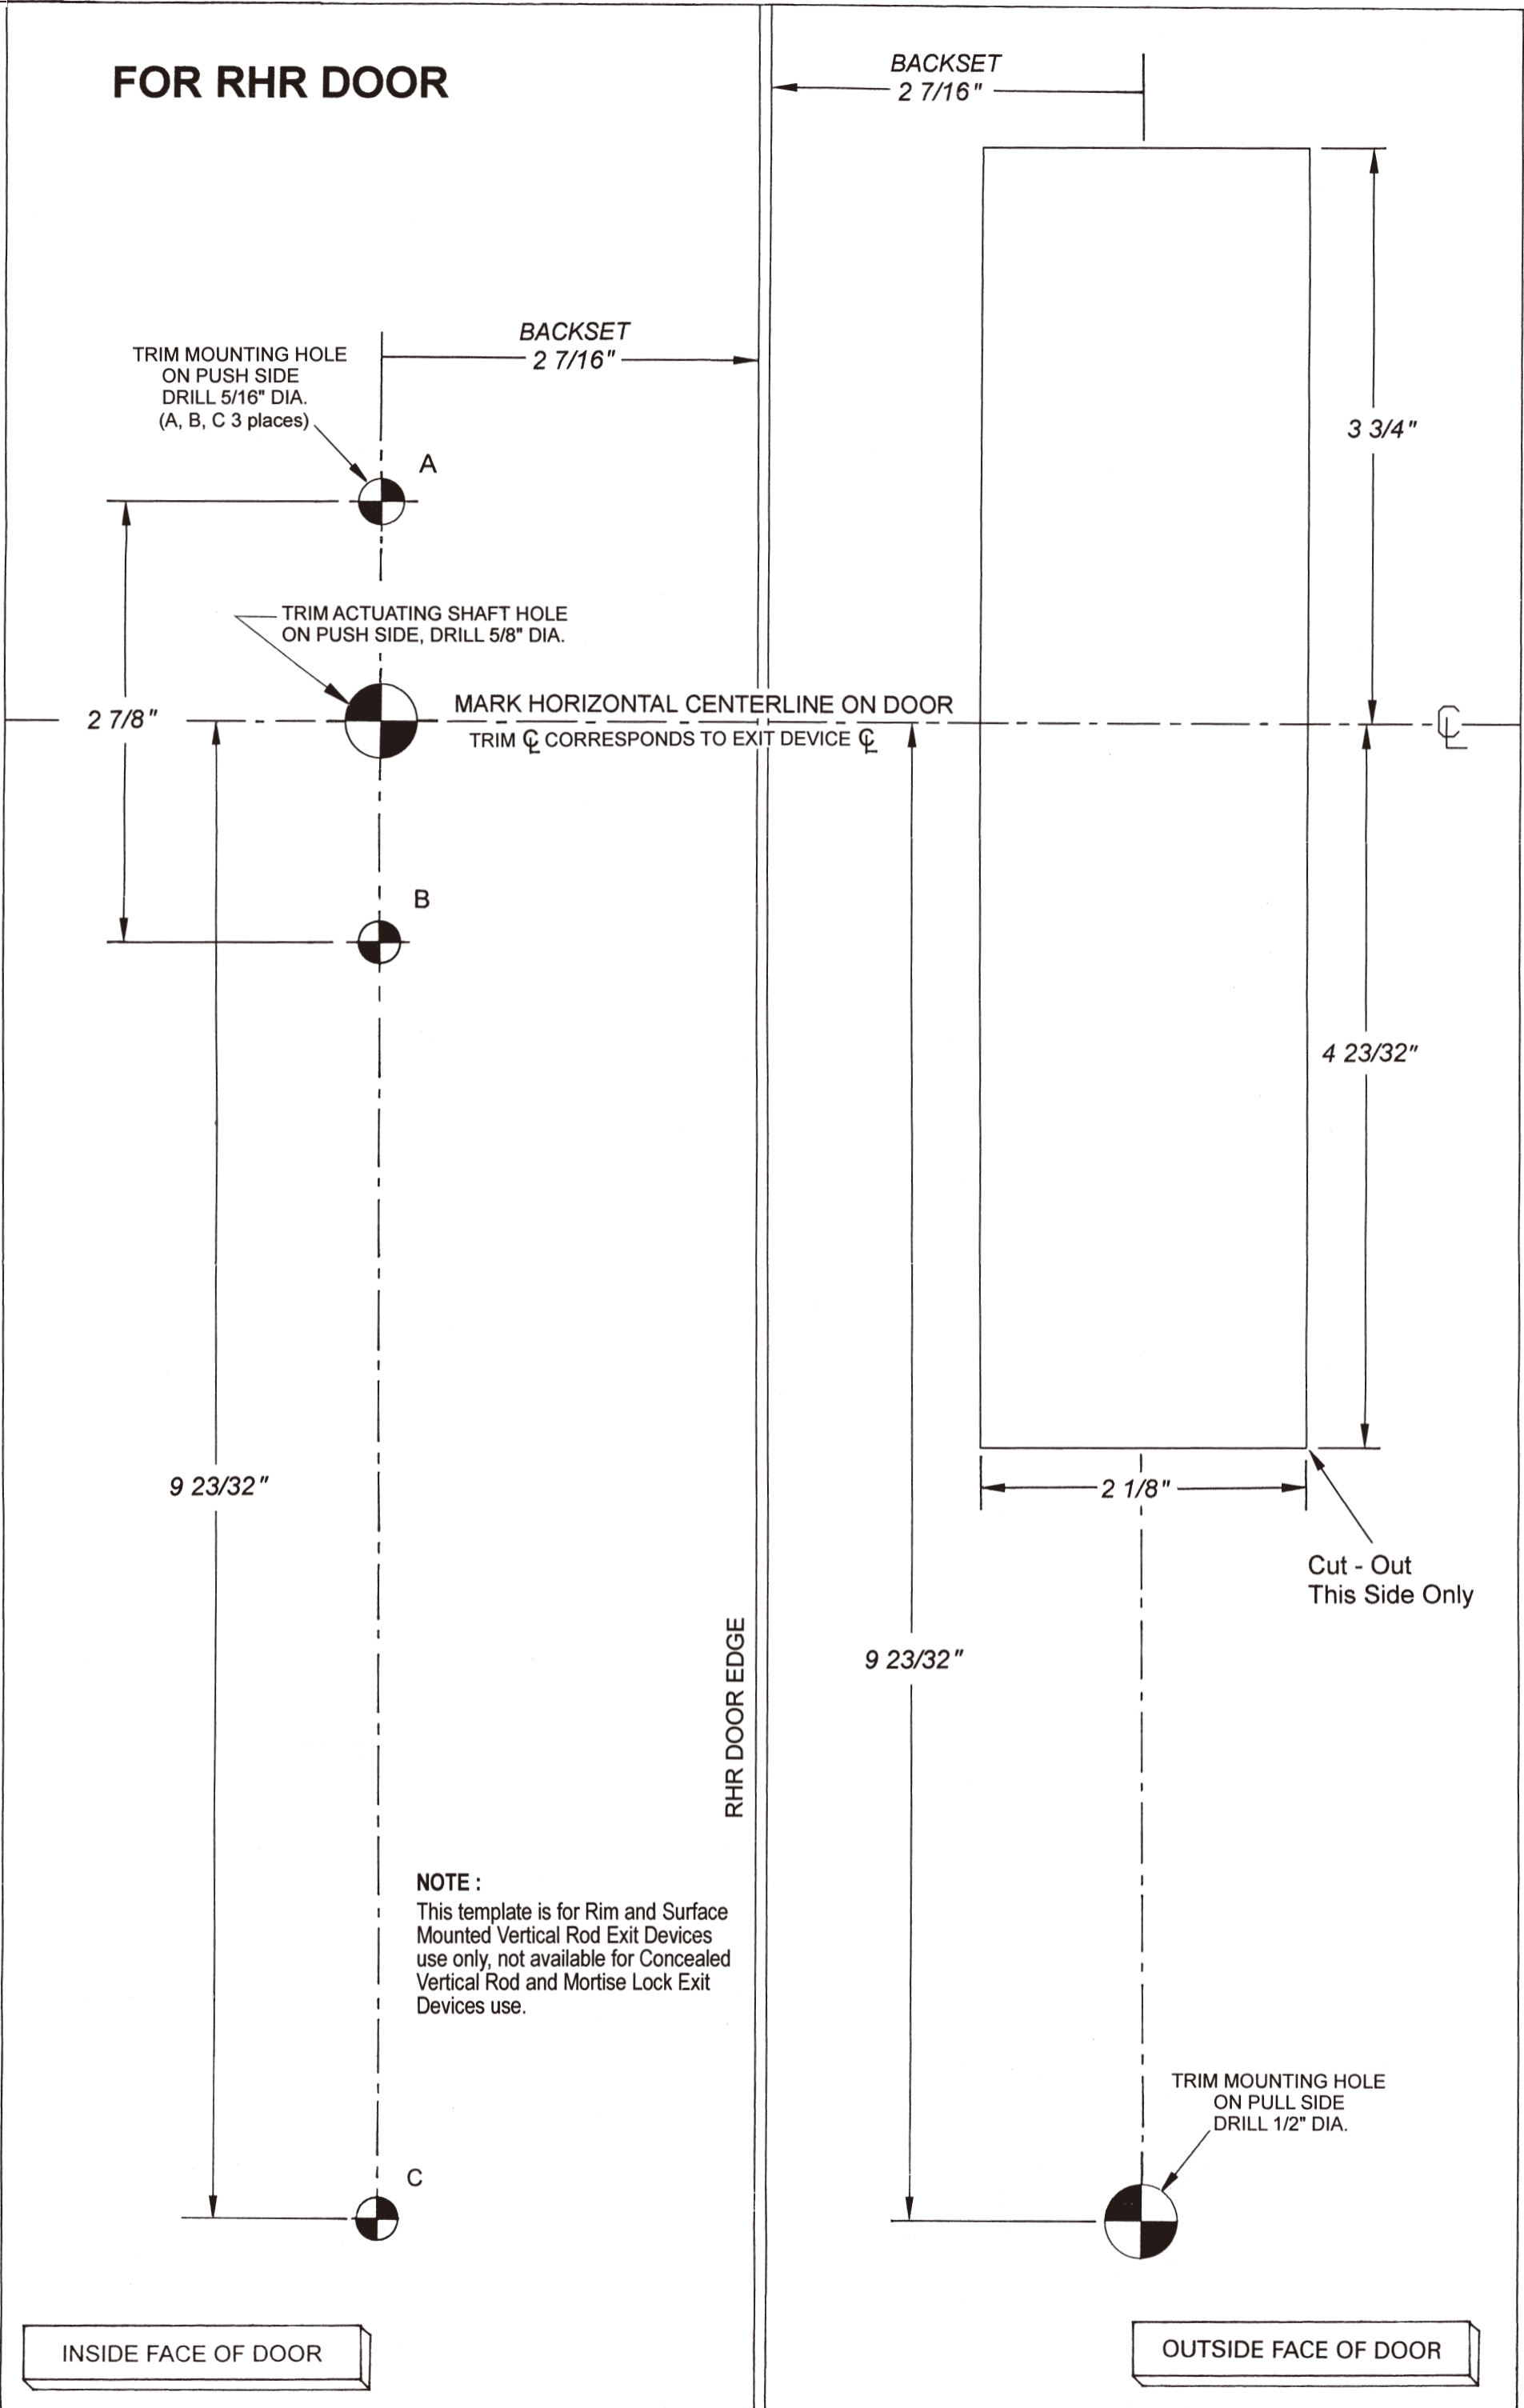


Simple Instructions:

1. Install a Mortise Cylinder with supplied Cylinder Holding Nut.
2. If door is already drilled and cut, insert the trim into the holes from outside of the door, then fasten by three mounting screws A, B, C from inside of the door (the upper two screws must go through the chassis of the exit device which is installed on the inside face of door.

- For single door and double door with mullion use, the backset 2 - 7/16" is to *face of stop*.
- For double door without mullion use, the backset 2 - 7/16" is to *edge of door*.

TEMPLATE (Pull Plate with Thumbpiece)

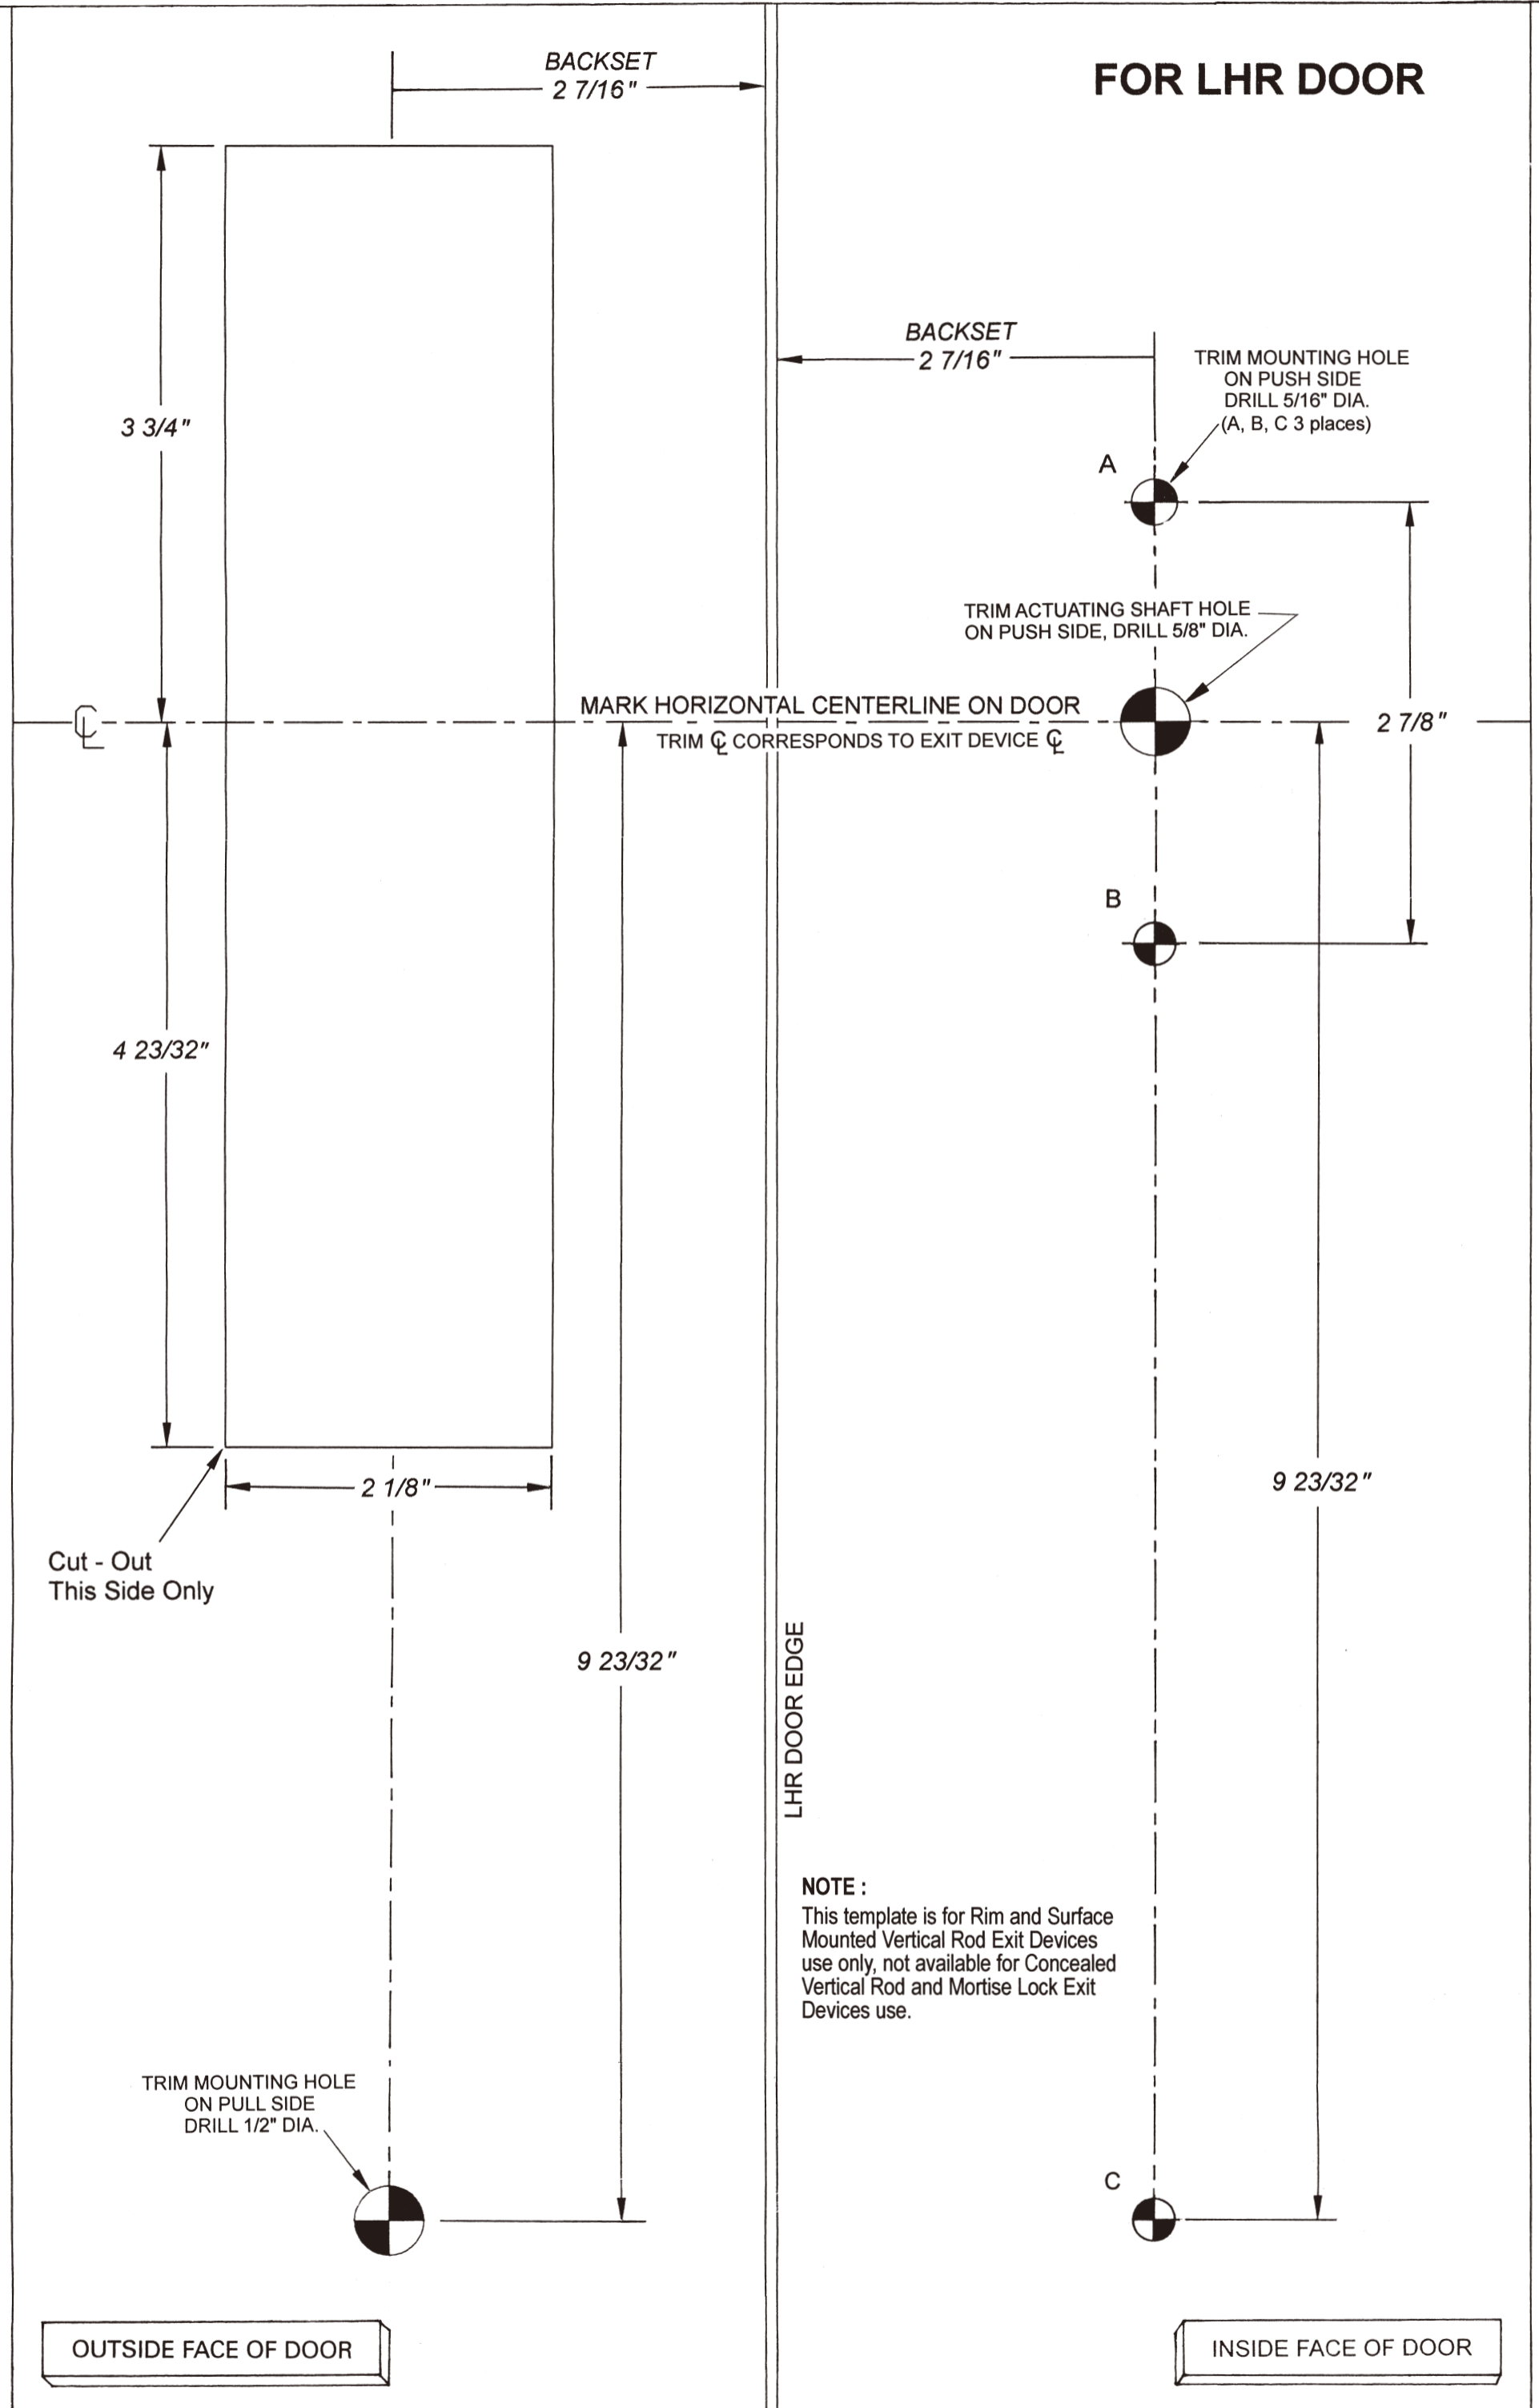

Simple Instructions :

1. Install a Mortise Cylinder with supplied Cylinder Holding Nut.
2. If door is already drilled and cut, insert the trim into the holes from outside of the door, then fasten by three mounting screws A, B, C from inside of the door (the upper two screws must go through the chassis of the exit device which is installed on the inside face of door.

- For single door and double door with mullion use, the backset 2 - 7/16" is to *face of stop*.
- For double door without mullion use, the backset 2 - 7/16" is to *edge of door*.